

System SLIO

SM-S | 02x-1SD00 | Operating manual

HB300 | SM-S | 02x-1SD00 | en | 26-08

Safety Digital I/O - SM-S 02x



YASKAWA Europe GmbH
Philipp-Reis-Str. 6
65795 Hattersheim
Germany
Tel.: +49 6196 569-300
Fax: +49 6196 569-398
Email: info@yaskawa.eu
Internet: www.yaskawa.eu.com

Table of contents

1	General	6
1.1	About this manual	6
1.2	Copyright © YASKAWA Europe GmbH	9
1.3	Safety instructions	11
1.4	Safety notes for the user	12
1.5	Intended use	14
1.6	Responsibility of the user	15
1.7	Protective devices	15
1.8	Education of the personnel	16
1.8.1	Qualification	16
1.9	Personal protective equipment	16
1.10	Special hazards	17
1.11	Fire fighting	18
1.12	Electrical safety	18
1.13	Safety facilities	19
1.14	Behavior with dangers and accidents	19
1.15	Sign-posting	19
1.15.1	Signs	19
1.16	Safety hints	20
1.17	Functional safety - safety relevant parameters	20
1.18	Approvals, directives, standards	22
1.19	Use in difficult operating conditions	24
2	Product description	25
2.1	System conception	25
2.1.1	Overview	25
2.1.2	Components	25
2.1.3	Accessories	29
2.1.4	Hardware revision	31
2.2	Dimensions	31
2.3	SDI 4xDC 24V - Use as spare part	33
2.4	SDI 4xDC 24V - Operating and display elements	33
2.5	SDI 4xDC 24 V - Process Image	38
2.6	SDI 4xDC 24V - Parameter record set	38
2.6.1	Parameter data	38
2.6.2	Overview PROFIsafe F-parameters	43
2.7	SDI 4xDC 24V - Technical data	45
2.8	SDO 4xDC 24V 0.5A - Use as spare part	47
2.9	SDO 4xDC 24V 0.5A - Operating and display elements	47
2.10	SDO 4xDC 24V 0.5A - Process Image	52

2.11	SDO 4xDC 24V 0.5A - Parameter record set.	52
2.11.1	Parameter data.	52
2.11.2	Overview PROFI-safe F-parameters.	57
2.12	SDO 4xDC 24V 0.5A - Technical data.	59
2.13	Response times.	60
2.13.1	Error-free case.	61
2.13.2	Existing error.	61
2.13.3	Arbitrary run times at single errors.	62
2.13.4	Designations.	63
2.14	Compatibility list.	64
3	Deployment.	65
3.1	Planning of a safety-related control system.	65
3.2	Industrial security in information technology.	67
3.2.1	Protection of hardware and applications.	68
3.2.2	Protection of PC-based software.	69
3.3	Installation guidelines.	69
3.4	Setting the F-address.	72
3.4.1	Changing the F-address.	73
3.5	Grounding concept.	75
3.5.1	Shielding.	75
3.6	Mounting.	77
3.6.1	Requirements to the operating personnel.	77
3.6.2	Functional principle.	78
3.6.3	Mounting Proceeding.	78
3.7	Demounting and module exchange.	82
3.7.1	Proceeding.	82
3.8	Wiring.	86
3.8.1	Requirements to the sensor and actuators.	90
3.9	Connection examples.	92
3.9.1	Connection examples for digital safety inputs.	93
3.9.2	Connection examples for digital safety outputs.	97
3.10	Notes for commissioning.	103
3.11	Deployment with PROFIBUS.	105
3.11.1	Parametrization System SLIO safety module.	106
3.11.2	Generate safety program.	109
3.12	Deployment with PROFINET.	110
3.12.1	Parametrization System SLIO safety module.	111
3.12.2	Generate safety program.	114
3.12.3	Diagnostic messages PROFINET.	114
3.13	Validation of the system.	118
3.14	Operation.	119
3.15	Maintenance.	119

3.16	Repair	119
3.17	Diagnostics	119
3.17.1	Error response	120
3.17.2	Fault diagnostics	122
3.18	Packing and transport	127
3.19	Storage and disposal	128
3.20	Sample application	129
3.20.1	Configuration in the Siemens SIMATIC Manager	131
4	Appendix	141
	Content	143
A	Checklist planning	145
B	Checklist installation	146
C	Checklist commissioning, parametrization and validation	147
D	Checklist operation	148
E	Checklist modification and retrofitting	149
F	Checklist decommissioning	150

About this manual

1 General

1.1 About this manual

Objective and contents

This manual is the translation of the original instructions!

This manual describes the System SLIO safety signal modules for PROFIBUS and PROFINET.

- It describes the structure, configuration and application.
- The manual is targeted at users with good basic knowledge in automation technology.
- The manual does not replace sufficient basic knowledge of automation technology or sufficient familiarity with the specific product.
- The manual consists of chapters. Each chapter describes a completed topic.
- The following guides are available in the manual:
 - An overall table of contents at the beginning of the manual.
 - References with pages numbers.

Validity of the documentation

Product	Order number	as of version:
SDI 4xDC 24V	021-1SD00	HW: 3
SDO 4xDC 24V 0.5A	022-1SD00	HW: 3

Icons Headings

Important passages in the text are highlighted by following icons and headings:



DANGER

- Immediate danger to life and limb of personnel and others.
- Non-compliance will cause death or serious injury.



WARNING

- Hazardous situation to life and limb of personnel and others.
- Non-compliance may cause death or serious injury.



CAUTION

- Hazardous situation to life and limb of personnel and others. Non-compliance may cause slight injuries.
- This symbol is also used as warning of damages to property.



NOTICE

- Designates a possibly harmful situation.
- Non-compliance can damage the product or something in its environment.



Supplementary information and useful tips.

Disclaimer

(1) The contractual and legal liability of Yaskawa and the legal representatives and vicarious agents of Yaskawa for compensation and reimbursement of expenses in relation to the content of this documentation is excluded or limited as follows:

a) For slightly negligent breaches of *Essential Contractual Duties* arising from the contractual obligation, for Yaskawa the amount of liability is limited to the foreseeable damage typical for the contract. '*Essential Contractual Duties*' are those duties that characterise the performance of the contract and on which the Yaskawa customer may reasonably rely.

(b) In each case, Yaskawa is not liable for (i) the slightly negligent breach of duties arising from the duties that are not *Essential Contractual Duties*, as well as (ii) force majeure, i.e. external events that have no operational connection and cannot be averted even by exercising the utmost care that can reasonably be expected.

(2) The aforementioned limitation of liability does not apply (i) in cases of mandatory statutory liability (in particular under the product liability law), (ii) if and to the extent that Yaskawa has assumed a guarantee or same as guaranteed procurement risk according to § 276 BGB, (iii) for culpably caused injuries to life, limb and/or health, also by representatives or vicarious agents, as well as (iv) in case of delay in the event of a fixed completion date.

(3) A reversal of the burden of proof is not associated with the provisions above.

All data and notes in these instructions were prepared with consideration to the statutory standards and regulations, the present state of technology, as well as our many years of knowledge and experience.

The manufacturer accepts no liability for damage caused because:

- Non-compliance with the instructions
- Non-specified use
- Use of untrained personnel

The actual scope of delivery can, by special designs, deviate from the explanations and presentations given here, because of the utilization of additional order options, or because of the most recent technical changes.

The user is responsible for the execution of service and commissioning according to the safety instructions of the prevailing standards and other relevant national and local instructions concerning conductor dimensioning and protection, earthing, disconnecter, overcurrent protection and so on.

For damages, which result from the mounting or from the connection, the one is liable, who has carried out the mounting or the installation.

We have checked the contents of this manual for agreement with the hardware and software described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual are reviewed regularly. Necessary corrections are included in subsequent editions.

Suggestions for improvement are welcomed.

For damage, which results from missing or insufficient knowledge of the manual, any liability of the manufacturer is impossible.

Therefore, the operator is recommended to have the instruction of the persons concerned confirmed in writing.

Modifications or functional alternations on the product are not allowed due to safety reasons. Any modification on the product not explicitly authorized by the manufacturer will result in loss of any liability claims to the vendor. The same applies if non authorized parts or equipment are used.

About this manual

Copyright

This manual is to be treated confidentially. It has been provided only for the personnel, which use the product. The transfer of this document to third parties without the authorization in writing of the vendor is prohibited.



The contents, texts, drawings, pictures and any other illustrations are copyrighted and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

Terminology 'Master' and 'Slave' as technical terms

The terms 'Master' and 'Slave' were established in many technical areas decades ago and are used in a clearly defined way, which is independent of their historical meaning.

In this manual, the terms 'Master' and 'Slave' are used in a purely functional and non-judgemental way. These terms are well established in numerous international regulations, standards and documentations. Switching to alternative terms could lead to misunderstandings and ambiguities in application.

We continue to use the terms 'Master' and 'Slave', but are aware of their origins and are committed to reflective, non-discriminatory communication.

Use of this manual

This safety manual contains information for the intended use of the System SLIO safety signal modules.

Knowledge of regulations and the proper technical implementation of the safety instructions detailed in this manual performed by qualified personnel are prerequisites for safely planning, engineering, programming, installing and starting up the System SLIO safety modules as well as for ensuring safety during their operation and maintenance. → ['Education of the personnel'...page 16](#)

Yaskawa will not be held liable for severe personal injuries, damage to property or the surroundings caused by any of the following: unqualified personnel working on or with the devices, de-activation or bypassing of safety functions, or failure to comply with the instructions detailed in this manual.

The safety components and systems have been developed, manufactured and tested in compliance with the pertinent safety standards and regulations. They may only be used for the intended applications under the specified environmental conditions.

They must be used only as specified in environmental descriptions and be connected only to approved external devices.

The manual contains safety instructions, description of the modules and information about life cycle.

Applicable documentation

In the safety signal module components of other manufacturers are possibly integrated. For these purchased parts of the respective manufacturers risk evaluations were carried out. The conformity of the constructions to the valid European and national regulations was declared by the according manufacturer.

Warranty conditions

The warranty conditions can be found in the "General terms and conditions" at → www.yaskawa.eu.com.

1.2 Copyright © YASKAWA Europe GmbH

All rights reserved

This document contains protected information of Yaskawa and may not be disclosed or used outside of an agreement made in advance with Yaskawa and only in accordance with that agreement.

This document is protected by copyright laws. Reproduction, distribution, or modification of this document or excerpts thereof is not permitted without the written consent of Yaskawa and the owner of this document, except in accordance with applicable agreements, contracts or licenses.

For permission to reproduce or distribute, please contact: YASKAWA Europe GmbH, European Headquarters, Philipp-Reis-Str. 6, 65795 Hattersheim, Germany

Tel.: +49 6196 569 300

Fax.: +49 6196 569 398

E-mail: info@yaskawa.eu

Internet: www.yaskawa.eu.com

EU / UK Declaration of Conformity

Hereby, YASKAWA Europe GmbH declares that the products and systems are in compliance with the essential requirements and other relevant provisions. Conformity is indicated by the CE and UKCA marking affixed to the product.

Conformity Information

For more information regarding CE and UKCA marking and Declaration of Conformity (DoC), please contact your local representative of YASKAWA Europe GmbH.

EU Machinery Directive / UK Supply of Machinery (Safety) Regulation

The System SLIO safety modules of this manual meet all the requirements of the machinery directive 2006/42/EG and Supply of Machinery (Safety) Regulation 2008 Nr. 1597.

Certification

The product SLIO safety signal module was developed and certified according to the standards specified at "Approvals, directives, standards" in chapter "Safety".

It is suited for use in applications up to category 4 / PL e of EN ISO 13849-1 and SIL 3 of EN 62061 and EN 61508.

Test report number: 968/M 387.12/26

Certificate number: 01/205/5301.05/26

Download Center

By entering the product order number in the '*Download Center*' at www.yaskawa.eu.com, the pertinent manuals, data sheets, declarations of conformity, certificates and other helpful information for your product can be found.

Trademarks

SLIO is a registered trademarks of YASKAWA Europe GmbH.

SIMATIC, STEP and TIA Portal are registered trademarks of Siemens AG.

PROFINET is a registered trademark of PROFIBUS and PROFINET International (PI).

PROFIBUS is a registered trademark of PROFIBUS and PROFINET International (PI).

All other trademarks, logos and service or product marks specified herein are owned by their respective companies.

General terms of use

Every effort was made by Yaskawa to ensure that the information contained in this document was complete and correct at the time of publication. Nevertheless, the information contained therein is only owed by Yaskawa as it is available at Yaskawa. Correctness is not assured by Yaskawa, the right to change the information contained herein is always reserved by Yaskawa. There is no obligation to inform the customer of any changes. The customer is requested to actively keep this documentation up to date. The use of the products covered by these instructions, together with the associated documentation, is always at the customer's own risk, in accordance with the applicable guidelines and standards. This documentation describes the hardware and software components and functions of the product. It is possible that units are described which the customer does not have. The exact scope of delivery is described in the respective purchase contract.

Document support

Contact your local representative of YASKAWA Europe GmbH if you have errors or questions regarding the content of this document. You can reach YASKAWA Europe GmbH via the following contact:

Email: Documentation.HER@yaskawa.eu

Technical support

Contact your local representative of YASKAWA Europe GmbH if you encounter problems or have questions regarding the product. If such a location is not available, you can reach the Yaskawa customer service via the following contact:

YASKAWA Europe GmbH,
European Headquarters, Philipp-Reis-Str. 6, 65795 Hattersheim, Germany
Tel.: +49 6196 569 500 (hotline)
Email: support@yaskawa.eu

1.3 Safety instructions

Intended use

- It is the customer's responsibility to comply with all pertinent standards, codes, or regulations applicable to the use of the product, including those that apply when the Yaskawa product is used in combination with other products.
- The customer must confirm that the Yaskawa product is suitable for the customer's plant, machinery and equipment.
- If the Yaskawa product is used in a manner not specified by this manual, the protection provided by the Yaskawa product may be impaired and the use may result in material or immaterial damage.
- Contact Yaskawa to determine whether use is permitted in the following applications. If the use in the respective application is permissible, the Yaskawa product is to be used by considering additional risk assessments and specifications, and safety measures are to be provided to minimise the dangers in the event of a fault. Special caution is required and protective measures must be taken in the case of:
 - Outdoor use, use with possible chemical contamination or electrical interference, or use under conditions or in environments which are not described in product catalogs or manuals.
 - Nuclear control systems, combustion systems, railway systems, aviation systems, automotive systems, medical devices, amusement machines and equipment that is specifically regulated by industry or government.
 - Systems, machines and devices that can pose a risk to life or property.
 - Systems that require a high degree of reliability, such as gas, water or electricity supply systems or systems that operate 24 hours a day.
 - Other systems that require a similarly high level of security.
- Never use the Yaskawa product in an application where failure of the product could cause serious danger to life, limb, health or property without first ensuring that the system is designed to provide the required level of safety with risk warnings and redundancy to avoid the realisation of such dangers and that the Yaskawa product is properly designed and installed.
- The connection examples and other application examples described in the product catalogs and manuals of Yaskawa are for reference purposes. Check the functionality and safety of the devices and systems actually to be used before using the Yaskawa product.
- To avoid accidental harm to third parties, read and understand all prohibitions on use and precautions, and operate the Yaskawa product correctly.

Documentation

Every person working with the product must have read and understood the operating instructions before carrying out any work.

The manual must be available to all personnel in the

- project design department
- installation department
- commissioning
- operation

**CAUTION**

The following conditions must be met before using or commissioning the components described in this manual:

- Hardware modifications to the process control system should only be carried out when the system has been disconnected from power!
- Installation and hardware modifications only by properly trained personnel.
- The national rules and regulations of the respective country must be satisfied (installation, safety, EMC ...)

**DANGER**

To prevent hazards and ensure optimum performance, no changes, modifications or conversions may be made to the product that have not been expressly approved by the manufacturer.

Maintenance

If you keep the prescribed environmental conditions (see technical data) the corresponding safety module is maintenance-free.

Spare parts

Please only use original spare parts of Yaskawa.

**WARNING**

Incorrect or faulty spare parts can cause damage, malfunction or failure as well as affect security.

Shipping

For shipping always use the original packaging.

Disposal

National rules and regulations apply to the disposal of the unit!

1.4 Safety notes for the user

**DANGER**

Protection against dangerous voltages

- When using System SLIO modules, the user must be protected from touching hazardous voltage.
- You must therefore create an insulation concept for your system that includes safe separation of the potential areas of extra-low voltage (ELV) and hazardous voltage.
- Here, observe the insulation voltages between the potential areas specified for the System SLIO modules and take suitable measures, such as using PELV/SELV power supplies for System SLIO modules.

Handling of electrostatic sensitive modules

The modules are equipped with highly integrated components in MOS technology. These components are highly sensitive to over-voltages that occur, e.g. with electrostatic discharge. The following symbol is used to identify these hazardous modules:



The symbol is located on modules, module racks or on packaging and thus indicates electrostatic sensitive modules. Electrostatic sensitive modules can be destroyed by energies and voltages that are far below the limits of human perception. If a person who is not electrically discharged handles electrostatic sensitive modules, voltages can occur and damage components and thus impair the functionality of the modules or render the modules unusable. Modules damaged in this way are in most cases not immediately recognized as faulty. The error can only appear after a long period of operation. Components damaged by static discharge can show temporary faults when exposed to temperature changes, vibrations or load changes. Only the consistent use of protective devices and responsible observance of the handling rules can effectively prevent malfunctions and failures on electrostatic sensitive modules.

Shipping of modules

Please always use the original packaging for shipping.

Measurement and modification of electrostatic sensitive modules

For measurements on electrostatic sensitive modules the following must be observed:

- Floating measuring instruments must be discharged before use.
- Measuring instruments used must be grounded.

When modifying electrostatic sensitive modules, ensure that a grounded soldering iron is used.

**CAUTION**

When working with and on electrostatic sensitive modules, make sure that personnel and equipment are adequately grounded.

Intended use

1.5 Intended use

General

The product is exclusively designed and constructed for the intended use described in this manual. The product is intended used if all the notes and information of this manual are considered.



WARNING

Danger by not intended use!

Each use of the product, which differs to the intended use can lead to dangerous situations.

Therefore

- Use the product only intended.
- Use the product only together with the recommended components.
- Consider all the data in this manual.
- Ensure that only qualified personnel work with/at the product. → *'Education of the personnel'...page 16*
- Ensure during configuration that the product is operated within its specifications.
- Ensure that the power supply corresponds to the given specifications.
- Only use the product in a technically perfect condition.
- Only use the product in combination with approved components.
- Only use the product in an area of second type (industrial area). The product was developed such as this fulfils the requirements of the category C3. For operation an approved power supply (SELV/PELV) is necessary. Here With the usage of the product in an area of first type, category C2/C1 (living-, business and trade without an interstage transformator directly at a public low-voltage-system) the cabinet builder has to reduce the emission (conducted and radiated) by special measure steps, which are to be demonstrated, since it can come without any additional measures to EMC disturbances. Whether a products described here reaches category C2/C1 with additional measures, cannot be ensured.

Field of application

- The Yaskawa product is not suited for use in life-support machines or systems.
- Please contact your Yaskawa representative or Yaskawa distributor if considering the use of the Yaskawa product for special purposes, such as machines or systems used in passenger cars, in medical, aircraft and aerospace applications, for power supply of networks, for electrical power distribution or for underwater applications.

**DANGER**

The device is not permitted for use

- in explosive environments (EX zone)

The system is designed and manufactured for proper use and use in accordance with the user manual and is designed for:

- Communication and process control
- general control and automation tasks
- for industrial use
- operation within the environmental conditions specified in the technical data
- installation in a cabinet

**DANGER**

If this Yaskawa product is used in applications where failure of the device can result in the loss of human life, a serious accident or physical injury, you must install appropriate safety devices.

- Death or serious injury can result if you do not install the safety devices properly.

Changes and modifications at the product

To avoid endangerments and to ensure the optimal power neither changes nor modifications may be made at the product, which are not specially approved by the manufacturer.

1.6 Responsibility of the user**General**

The product is used in the commercial range. The user of the product is subject of the statutory duties to work safety. In addition to the safety instructions in this manual, for the usage environment of the product valid safety, accident prevention and environmental protection regulations must be adhered.

- The user must be informed about the valid industrial safety regulations and determine in an endangerment evaluation additionally dangers, which arise as a result of the special conditions for the product on the place of operation. This is to be transcribed with working instructions for the operation of the product.
- These working instructions must be kept in direct environment of the product and accessible at any time for people, which work with the product.
- The working instructions must fully be adhered.
- The product is only to be operated in a technically flawless condition.

1.7 Protective devices**Protection**

The place of installation of the safe field bus modules must comply for devices according to IP20.

1.8 Education of the personnel



WARNING

Risk of injury resulting from insufficient qualification!

Improper use can cause considerable personal injury and material damage.

Therefore: The special activities may only be executed by personnel nominated by the respective chapters.

1.8.1 Qualification

In the manual the following qualifications for different activities are defined:

Operating personnel

The automation system may only be operated by persons, which are trained, instructed and authorized. Troubleshooting, maintenance, cleaning, maintenance and replacement must be performed only by skilled or trained personnel. These persons have to know the instruction manual and have to act accordingly. Commissioning and training should only be performed by qualified personnel.

Qualified personnel

These are electrical engineers and electricians of the customer or third party, which are authorized by the manufacturer and which have learned installation and commissioning by the manufacturer and are allowed to ground, mark and install electrical circuits and devices in accordance to the standard safety technology. Qualified personnel is trained and instructed according to the corresponding valid standards in safety technology in the care and use of appropriate safety equipment.

1.9 Personal protective equipment

General

During work, the wearing of personal protective equipment is needed to minimize health hazards.

- Always wear the necessary protective equipment for the corresponding job.
- For your own safety regard the signs, which are in your work space.

Work clothing



is close-fitting clothing with low tensile strength, with tight sleeves and without a protruding part. Depending on the application it should be prevented, that the carrier gets serious injured or is exposed to health risk during work. For reasons of injury no jewellery like rings and chains should be worn.

Protective helmet



for protection against falling and flying objects.

Safety shoes

for protection against falling heavy objects.

**Protective gloves**

to protect hands from friction abrasions, punctures or injuries, as well as from contact with hot objects.

**Wear at special works: Eye protector**

to protect eyes from flying parts and liquid splashes.



1.10 Special hazards

General

In the following section the residual risks are listed. Regard the listed safety warnings here and the notes in the whole manual to reduce health hazards and to avoid dangerous situations.

Electric current**DANGER****Risk of death by electric current!**

Contact with live parts is immediate danger to life. Damage of the insulation or of components can be danger to life.

Therefore: Immediately turn off the power supply when the insulation is damaged. Work on the electrical system only by qualified personnel. Always power-off and secure the electrical system during the work on it.

Risk by residual energy**DANGER****Risk of death by electric current!**

After disconnecting a device from main voltage, parts such as power connections should only be touched when the capacitors are discharged in the device.

Therefore: Regard discharge time of the capacitors, do not touch live parts before. Regard corresponding instructions on the device. If you have connected additional capacitors on the link, the discharge of the link can last considerably longer. In this case you have to determine the required waiting period or even to measure whether the device is free of voltage.

Electrical safety

Moved objects

**WARNING****Risk of injury from moving parts!**

Rotary respectively linear moved parts can cause serious injuries.

Therefore: Do not touch moving parts during operation. Do not open the cover during operation. The mechanical residual energy depends on the application. Driven components rotate respectively move for a certain time even after switching off the power supply. Here serve for suited safety devices.

1.11 Fire fighting

**DANGER****Risk of death by electric current!**

Risk of an electrical shock when using a conducting fire fighting medium.

Therefore use the following fire fighting medium:

ABC powder / CO₂



1.12 Electrical safety

General

The System SLIO Safety is designed according to IEC61131-2 for degree of pollution 2. This means only non-conductive pollution may occur during operation. Temporary conductivity by condensation is only allowed when the module is out of operation.

**WARNING****Risk of injury from conductive pollution!**

During the operation there is no conductive pollution allowed.

Therefore: Before the system is installed check and guarantee if necessary by additional measures that the degree of pollution 2 is not exceeded (e.g. installation in a cubicle with degree of protection IP54 or better).

Note to the power supply

**WARNING****Risk of injury by electric current!**

There may only devices be connected to the module, which have a safe separation of the 230V power. The power supply to generate 24V power must correspond to the requirements for PELV/SELV according to EN 50178.

1.13 Safety facilities



WARNING

Risk of death by non-functioning safety facilities!

Safety facilities serve for maximum safety during operation. Even if by safety facilities working process become complicated, its never allowed to circumvent them. The security is guaranteed only when the safety facilities are intact.

Therefore: Before beginning the work check whether the safety facilities are installed properly and functional.

1.14 Behavior with dangers and accidents

Preventive measures

- Always be prepared for accidents or fire!
- First-aid equipment (first aid kit, blankets etc.) and keep fire extinguisher handy.
- Make Personal with accident message, first-aid and rescue mechanisms familiar.

In case of emergency: act correctly

- Set immediately the device with emergency stop out of operation.
- Initiate first-aid measures.
- Rescue persons from the danger zone.
- Inform responsible on-site.
- Alarm medical and / or fire department.
- Make free the access routes for emergency vehicles.

1.15 Sign-posting



WARNING

Danger of injury by illegible symbols

In course of time stickers and symbols on the devices can get dirty or otherwise become unrecognizable.

Therefore: Please hold all the safety warnings and operation instructions on the device in always well readable condition.

1.15.1 Signs

The following symbols and signs are in the work space. They refer to the direct environment in which they are attached.

Electrical voltage

In the such marked work space only qualified personnel may work. Unauthorized may not touch the marked equipment.



DANGER

Danger of life by electrical power!

Time for discharge > 1 Minute

Stored electrical charge

Therefore: Consider discharge time of capacitor and do not touch live parts before. Consider appropriate instructions on the device. If you have connected additional capacitors at DC, the discharge of the DC link can last longer. In this case you have to determine respectively to measure the required waiting time whether the device is free of voltage.

1.16 Safety hints

The modules of the System SLIO represent the current state of the art and fulfill the valid safety regulations and the appropriate harmonized, European standards (EN)

For the user additionally is valid the:

- relevant rules for the prevention of accidents
- EG directives or other country-specific regulations
- generally accepted safety rules
- general ESD regulations

Disturbances of any kind or other damage must be reported to a responsible person. Protective and safety equipment must not be circumvented or bypassed. Dismounted protective equipment must be mounted and functionally tested before a restart. The modules are to be secured against misuse or accidental use. Original mounted signs, labels, stickers are to be always considered and be held in a readable condition.

1.17 Functional safety - safety relevant parameters

General

This chapter describes characteristics associated to functional safety. In according to IEC 61508 safety means that the residual error probability of the whole system below the standard limits. In accordance to the whole system internal safety-relevant device errors must be detected and be led to a safe condition.

Safety relevant parameters

The values here refer to the modules of this manual. Safety relevant characteristics may always be found in the according manuals of the modules.

Characteristics SDI 4xDC 24V

Characteristics according to IEC 61508	Meaning
$PFH_D = 0.25 * 10^{-9}/h$	Probability of failure per Hour: Probability of danger failure per hour.
$PFD_{avg} = 2.14 * 10^{-5}$	Probability of Failure on Demand average : Average of probability of failure on demand.
SFF according SIL 3	Safe Failure Fraction: Fraction of failure, which lead to a safe state.

Characteristics according to DIN EN ISO 13849-1	Meaning
$PFH = 0.25 * 10^{-9}/h$	Probability of Failure per Hour
$MTTF_D$: high (339 years)	Mean Time To dangerous Failure
DCavg: high	Diagnostic Coverage average
Device life: 20 years ¹	During the expected life of the device of up to 20 years, no proof test is required. After this interval, the System SLIO safety module must be decommissioned and sent back to the vendor.

¹ The device lifetime begins on the date of manufacture. This is located on the right side of the safety electronics module: "Date YYYY-MM".

**Characteristics SDO 4xDC
24V, 0.5A**

Characteristics according to IEC 61508	Meaning
$PFH_D = 0.52 * 10^{-9}/h$	Probability of failure per Hour: Probability of danger failure per hour.
$PFD_{avg} = 4.40 * 10^{-5}$	Probability of Failure on Demand average : Average of probability of failure on demand.
SFF according SIL 3	Safe Failure Fraction : Fraction of failure, which lead to a safe state.

Characteristics according to DIN EN ISO 13849-1	Meaning
$PFH = 0.52 * 10^{-9}/h$	Probability of Failure per Hour
$MTTF_D$: high (176 years)	Mean Time To dangerous Failure
DCavg: high	Diagnostic Coverage average
Device life: 20 years ¹	During the expected life of the device of up to 20 years, no proof test is required. After this interval, the System SLIO safety module must be decommissioned and sent back to the vendor.

1) The device lifetime begins on the date of manufacture. This is located on the right side of the safety electronics module: "Date YYYY-MM".


CAUTION

If the user calculates his safety application with the specified data for e.g. 10 years, the System SLIO safety module is to be decommissioned and sent back to the vendor at the end of its lifetime. A proof test cannot be established by the user.

Approvals, directives, standards

1.18 Approvals, directives, standards

Conformity and approval

Conformity		
CE	2014/30/EU	EMC Directive
	2006/42/EG	Machinery Directive
RoHS (EU)	2011/65/EU	Restriction of the use of certain hazardous substances

Protection of persons and device protection

Type of protection	-	IP20
Electrical isolation		
to the field bus	-	electrically isolated
to the process level	-	electrically isolated
Insulation resistance	EN 61131-2	-
Insulation voltage to reference earth		
Inputs / outputs	-	AC / DC 50V, test voltage AC 500V
Protective measures	-	against short circuit

Environmental conditions to EN 61131-2

Climatic		
Storage / transport	EN 60068-2-14	-25...+70°C
Operation		
Horizontal installation hanging	EN 61131-2	0...+60°C
Horizontal installation lying	EN 61131-2	0...+55°C
Vertical installation	EN 61131-2	0...+50°C
Air humidity	EN 60068-2-30	RH1 (without condensation, rel. humidity 10...95%)
Pollution	EN 61131-2	Degree of pollution 2
Installation altitude max.	-	2000m
Mechanical		
Oscillation	EN 60068-2-6	1g, 9Hz ... 150Hz
Shock	EN 60068-2-27	15g, 11ms

Mounting conditions

Mounting place	-	In the control cabinet (IP54 or better)
Mounting position	-	Horizontal hanging → 'Mounting'...page 77

EMC	Standard	Comment	
Emitted interference	EN 61000-6-4	Class A (Industrial area)	
Noise immunity zone B	EN 61000-6-2	Industrial area	
		EN 61000-4-2	ESD 8kV at air discharge (degree of severity 3), 4kV at contact discharge (degree of severity 2),
		EN 61000-4-3	HF field immunity (casing) 80MHz ... 1000MHz, 10V/m, 80% AM (1kHz) 1.4GHz ... 2.0GHz, 3V/m, 80% AM (1kHz) 2GHz ... 2.7GHz, 1V/m, 80% AM (1kHz)
		EN 61000-4-6	HF conducted 150kHz ... 80MHz, 10V, 80% AM (1kHz)
		EN 61000-4-4	Burst 3
	EN 61000-4-5	Surge 3 ¹	

1) Due to the high-energetic single pulses with Surge an appropriate external protective circuit with lightning protection elements like conductors for lightning and over-voltage is necessary.

Example of lightning protection conductors

Application	Vendor	Article	Description
Feed	Dehn	BLITZDUCTOR VT BVT AVD 24	External Lightning protection (DC24V/10A)
Digital inputs, test pulse outputs	Dehn	DEHNconnect RK DCO RK ME 24	External Lightning protection (DC24V/0.5A)
Digital outputs	Dehn	DEHNconnect RK DCO RK D 5 24	External Lightning protection (DC24V/10A)
PROFIBUS interface	Dehn	BLITZDUCTOR XT BXT ML2 BD HFS 5	External Lightning protection (RS485/5V)
PROFINET interface	Dehn	DEHNpatch DPA M CLE RJ45B 48	External Lightning protection (RJ45/48V)

Norms and standards

DIN EN 61508 part 1-7	Functional safety of electrical/electronic/programmable electronic safety-related systems
DIN EN ISO 13849-1	Safety of machinery: Safety-related parts of control systems
DIN EN 61784-3	Functional safety field buses - General rules and profile definitions
DIN EN 60204-1	Electrical equipment of machines
DIN EN 61131-2	Programmable logic controllers, part 2: Equipment requirements and tests
DIN EN 61000-4-11	Mains voltage variation
Row SN 29500	Failure rate, component, expected value, reliability
DIN EN 61496-1	Electro sensitive protective equipment

Use in difficult operating conditions

Requirements to clearance / creep-age current distances and system power supply

DIN EN 61131-2	The definition of clearance and creep-age current distances takes place in accordance to EN 61131-2. For the safe field bus coupler over-voltage category 2 and degree of pollution 2 are basis.
DIN EN 13849	The acceptance of error exclusions for short-circuits between neighbouring conductor or for short-circuits between neighbouring components must be avoided as far as possible by suitable circuit and layout measures. If an error exclusion is inevitable, measures are to be used in accordance with EN 13849 part of 2.
DIN EN 50178	The device is developed for operation on 24V power supplies, which correspond to the PELV-/SELV regulations in accordance to EN 50178.
DIN EN 61508	The normative requirements of the 61508 (increased EMC requirements and requirements concerning isolation) are to be fulfilled also for the common voltage circuit of the SLIO system.
DIN EN 50178	So that the electrical values for extra-low voltage with safe separation cannot be exceeded on the safe field bus coupler, for the system 24V power supplies are exclusively used, which correspond to the PELV /SELV regulations in accordance with EN 50178.
	In order to protect the safe field bus couplers against over-voltage, a suitable over-voltage protection is provided.
DIN EN 60204-1	The 24V power supply must keep the voltage interrupt according to EN 60204-1.

Requirements for environmental and EMC testing

DIN EN 61131-2	Programmable logic controllers, part 2: Equipment requirements and tests
DIN EN 61326-3-1	For the EMC immunity tests, the increased requirements according to EN 61326-3-1 are applied.

1.19 Use in difficult operating conditions



Without additional protective measures, the products must not be used in locations with difficult operating conditions; e.g. due to:


- dust generation
- chemically active substances (corrosive vapors or gases)
- strong electric or magnetic fields

2 Product description

2.1 System conception

2.1.1 Overview

The System SLIO is a modular automation system for assembly on a 35mm mounting rail. By means of the periphery modules with 2, 4, 8 and 16 channels this system may properly be adapted matching to your automation tasks. The wiring complexity is low, because the supply of the DC 24V power section supply is integrated to the backplane bus and defective modules may be replaced with standing wiring. By deployment of the power modules in contrasting colors within the system, further isolated areas may be defined for the DC 24V power section supply, respectively the electronic power supply may be extended with 2A.

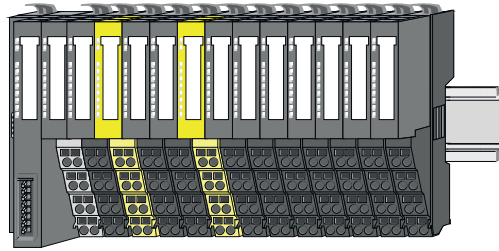


2.1.2 Components

Components

- Bus coupler
- Line extension
- 8x periphery modules
- 16x periphery modules
- Power modules
- Accessories

Bus coupler

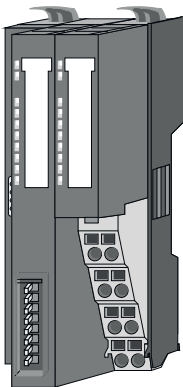

With a bus coupler bus interface and power module is integrated to one casing. With the bus interface you get access to a subordinated bus system. Via the integrated power module for power supply the bus interface is supplied as well as the electronic of the connected periphery modules. The DC 24 power section supply for the linked periphery modules is established via a further connection. By installing of up to 64 periphery modules at the bus coupler, these are electrically connected, this means these are assigned to the backplane bus, the electronic modules are power supplied and each periphery module is connected to the DC 24V power section supply.



CAUTION

Bus interface and power module may not be separated!
Here you may only exchange the electronic module!

Bus coupler for System SLIO safety modules

The System SLIO safety modules of this manual can be used with the following bus coupler:

- 053-1DP00 - PROFIBUS DP: From firmware V1.3.0 and from GSD file (SLIO) V2.2.3
- 053-1PN00 - PROFINET: From firmware V1.1.7 and from GSDML file (SLIO) V1.1.6
- 053-1PN01 - PROFINET: From firmware V1.0.2 and from GSDML file (SLIO) V3.0.3


To use PROFIsafe V2.6:

- 053-1PN01 - PROFINET: Firmware V1.3.1 and GSDML file (SLIO) V3.0.15

Configuration of the System SLIO safety modules

The System SLIO Safety modules are configured by means of the *Safety CRC Tool*. This tool can be accessed in the SIMATIC Manager from version V5.4. To completely carry out the configuration there, from version 5.4 an additional program package *S7 Distributed Safety* from Siemens is necessary. Starting from Version 1.1.0.9 of the *Safety CRC Tool* the configuration in the Siemens TIA Portal V13 is supported.

Line extension

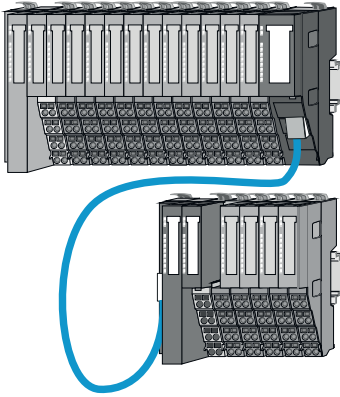


In the System SLIO there is the possibility to place up to 64 modules in on line. By means of the line extension you can divide this line into several lines. Here you have to place a line extension MainDevice at each end of a line and the subsequent line has to start with a line extension SubDevice. MainDevice and SubDevice are to be connected via a special connecting cable. In this way, you can divide a line on up to 5 lines. Depending on the line extension, the max. number of pluggable modules at the System SLIO bus is decreased accordingly. To use the line extension no special configuration is required.



Please note that some modules do not support line extensions due to the system. For more information, please refer to the compatibility list. This can be found in the 'Download Center' of www.yaskawa.eu.com under 'System SLIO Compatibility list'.

Periphery modules

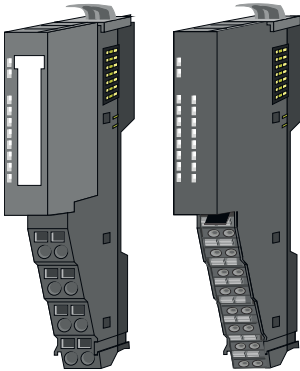


The periphery modules are available in the following 2 versions, whereby of each the electronic part can be replaced with standing wiring:


- 8x periphery module for a maximum of 8 channels.
- 16x periphery module for a maximum of 16 channels.

8x periphery modules


Each 8x periphery module consists of a *terminal* and an *electronic module*.

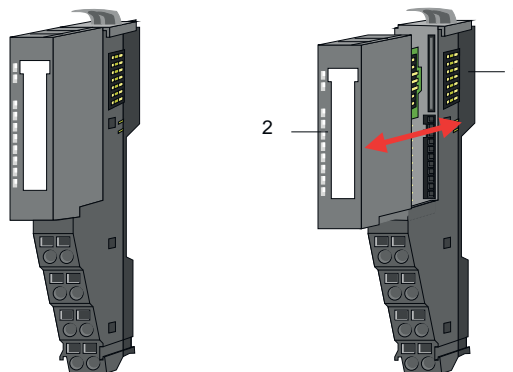


- 1 Terminal module
- 2 Electronic module

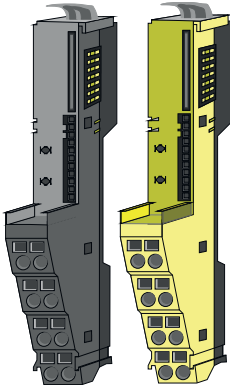Terminal module

The *terminal* module serves to carry the electronic module, contains the backplane bus with power supply for the electronic, the DC 24V power section supply and the staircase-shaped terminal for wiring. Additionally the terminal module has a locking system for fixing at a mounting rail. By means of this locking system your System SLIO may be assembled outside of your switchgear cabinet to be later mounted there as whole system.

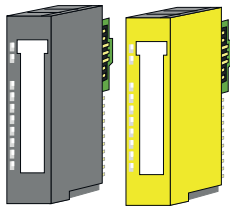Electronic module


The functionality of a System SLIO periphery module is defined by the *electronic* module, which is mounted to the terminal module by a sliding mechanism. With an error the defective module may be exchanged for a functional module with standing installation. At the front side there are LEDs for status indication. For simple wiring each module shows a corresponding connection diagram at the front and at the side.

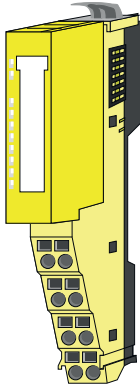Safety periphery modules

According to structure and dimensions the *safety periphery modules* correspond to the standard periphery modules of the System SLIO. For better recognition the color of the safety modules is yellow. Please consider that the safety electronic module may only be used at an yellow terminal module! The operation with mechanical compatible terminal modules is not allowed.


16x periphery modules

Each 16x periphery module consists of an *electronic unit* and a *terminal block*.

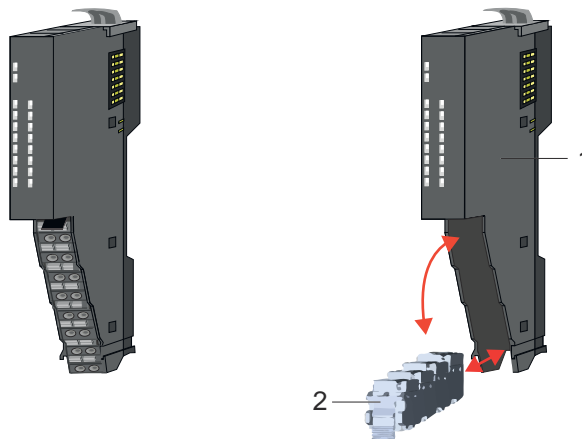

- 1 Electronic unit
- 2 Terminal block

Electronic unit

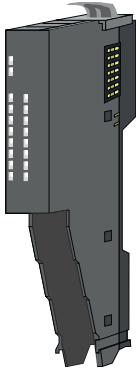


With the 16x periphery module the terminal block is connected to the *electronic unit* via a secure flap mechanism. In the case of an error you can exchange the defective electronic unit for a functional unit with standing wiring. At the front side there are LEDs for status indication. For easy wiring each electronic unit shows corresponding connection information at the side. The electronic unit provides the slot for the terminal block for the wiring and contains the backplane bus with power supply for the electronic and the connection to the DC 24V power section supply. Additionally the electronic unit has a locking system for fixing it at a mounting rail. By means of this locking system your system may be assembled outside of your switchgear cabinet to be later mounted there as whole system.

Terminal block




The *terminal block* provides the electrical interface for the signalling and supplies lines of the module. When mounting the terminal block, it is attached to the bottom of the electronic unit and turned towards the electronic unit until it clicks into place. With the wiring a "push-in" spring-clip technique is used. This allows a quick and easy connection of your signal and supply lines. The clamping off takes place by means of a screwdriver.

Power module

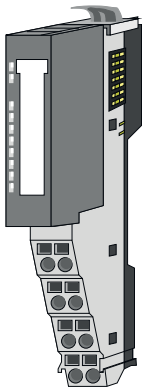

In the System SLIO the power supply is established by power modules. These are either integrated to the head module or may be installed between the periphery modules. Depending on the power module isolated areas of the DC 24V power section supply may be defined respectively the electronic power supply may be extended with 2A. For better recognition the colour of the power modules are contrasting to the periphery modules.

 
Clamp modules



A *clamp module* is a distributor module. According to the module GND respectively DC 24V of the power section supply may be accessed by the clamp connectors. The backplane bus is looped through the module. So this module has no module ID, but influences the maximum number of modules to be connected.

2.1.3 Accessories

Profile rail

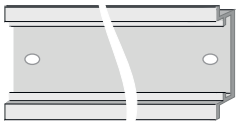

Order no.	Description
290-1AF00	35 mm profile rail length 2000mm
290-1AF30	35 mm profile rail length 530mm



NOTICE

To ensure EMC, the profile rail must be grounded!

- Ensure that the profile rail is reliably and professionally grounded.
- By mounting them on the grounded profile rail, the modules are automatically connected to the grounding system.

 
→ 'Grounding guidelines'...page 75

→ 'Installation guidelines'...page 69


Shield bus carrier




Please note that a shield bus carrier cannot be mounted on a 16x periphery module!



The shield bus carrier (order no.: 000-0AB00) serves to carry the shield bus (10mm x 3mm) to connect cable shields. Shield bus carriers, shield bus and shield fixings are not in the scope of delivery. They are only available as accessories. The shield bus carrier is mounted underneath the terminal of the terminal module. With a flat mounting rail for adaptation to a flat mounting rail you may remove the spacer of the shield bus carrier.

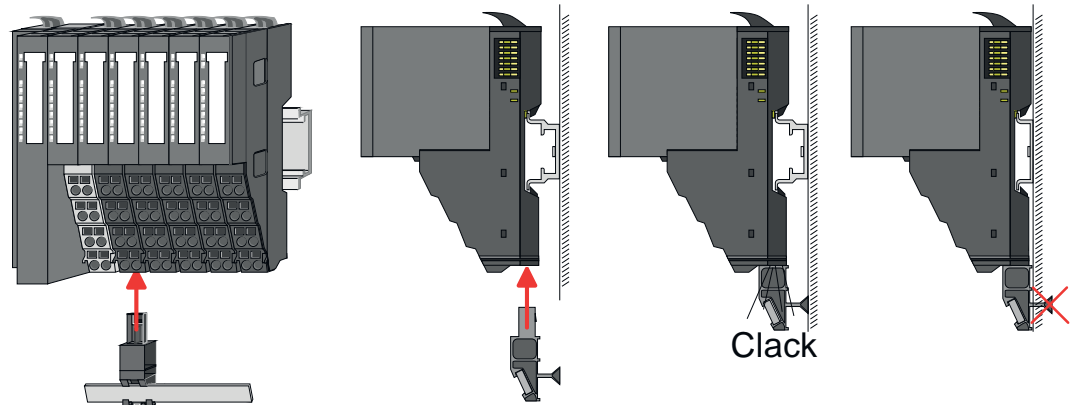

Bus cover

 

With each head module, to protect the backplane bus connectors, there is a mounted bus cover in the scope of delivery. You have to remove the bus cover of the head module before mounting a System SLIO module. For the protection of the backplane bus connector you always have to mount the bus cover at the last module of your system again. The bus cover has the order no. 000-0AA00.

Coding pins





Please note that a coding pin cannot be installed on a 16x periphery module! Here you have to make sure that the associated terminal block is plugged again when the electronics unit is replaced.

There is the possibility to fix the assignment of electronic and terminal module. Here coding pins (order number 000-0AC00) can be used. The coding pin consists of a coding jack and a coding plug. By combining electronic and terminal module with coding pin, the coding jack remains in the electronic module and the coding plug in the terminal module. This ensures that after replacing the electronic module just another electronic module can be plugged with the same encoding.

Spare parts

The following spare parts are available for the System SLIO:

Spare part	Order no.	Description	Packaging unit
	092-9BH00	Terminal block for System SLIO 16x periphery module.	5 pieces
	092-9BK00	Connector for System SLIO CPU 013C.	5 pieces


**CAUTION**

Please note that you may only use the spare parts with Yaskawa modules. Use with third-party modules is not allowed!

2.1.4 Hardware revision


Hardware revision on the front

- The hardware revision is printed on every System SLIO module.
- Since a System SLIO 8x peripheral module consists of a terminal and electronic module, you will find a hardware revision printed on each of them.
- Authoritative for the hardware revision of a System SLIO module is the hardware revision of the electronic module. This is located under the labeling strip of the corresponding electronic module.
- Depending on the module type, there are the following 2 variants e.g. to indicate hardware revision 1:
 - Current modules have a 1 on the front.
 - With earlier modules, the 1 is marked with 'X' on a number grid.

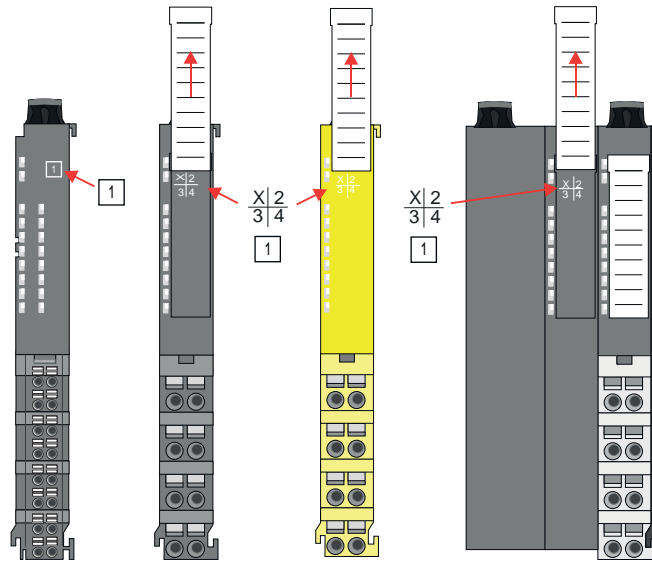


2.2 Dimensions

Dimensions bus coupler and line extension SubDevice

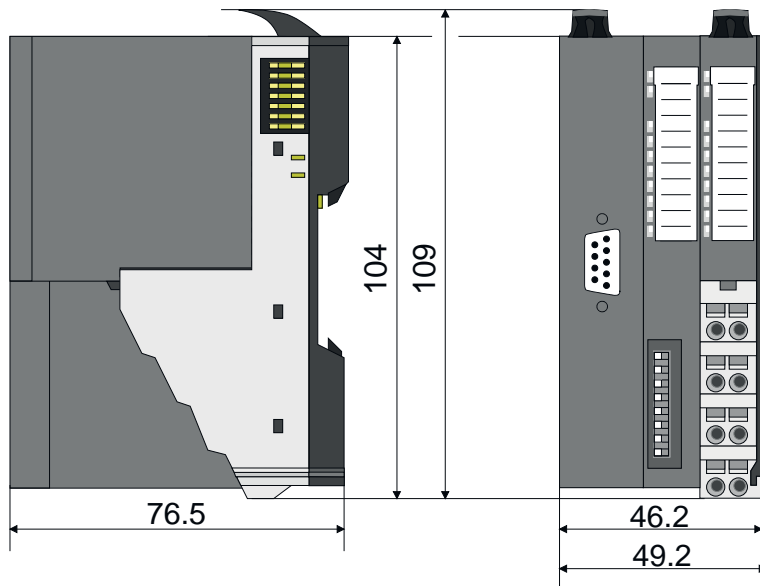


Dimensions


Line extension MainDevice

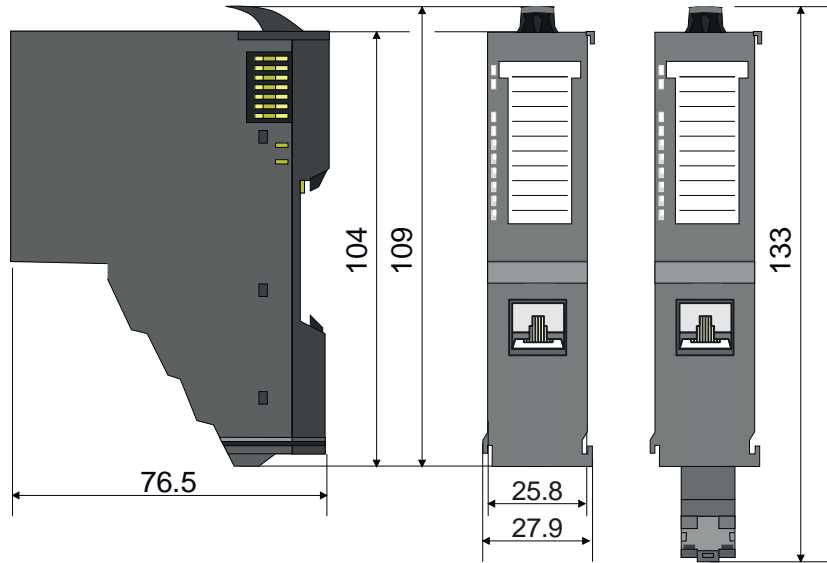

Dimensions periphery module (here Safety)

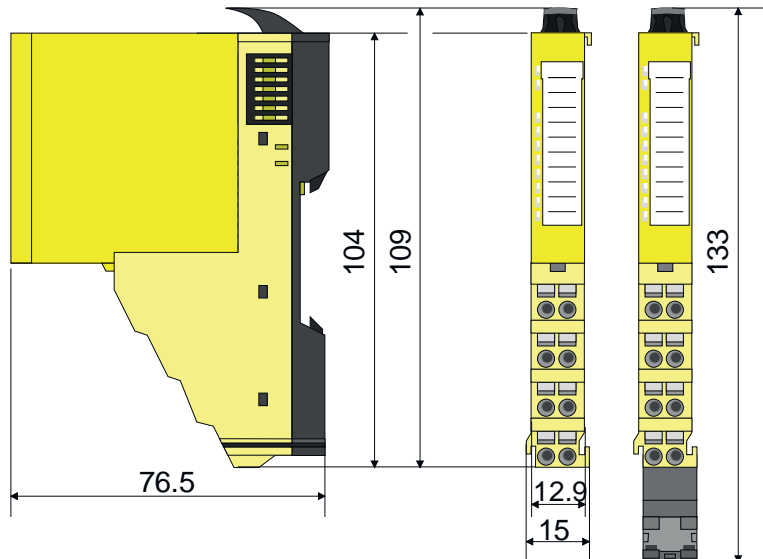

Dimensions electronic module (here Safety)

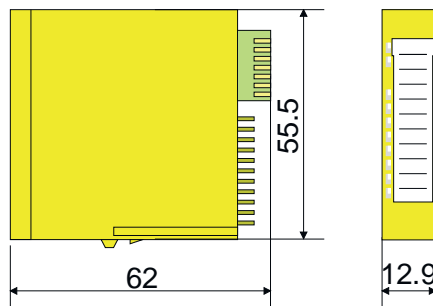

Dimensions in mm

The dimensions of the System SLIO safety modules are identical to those of the System SLIO standard modules.

2.3 SDI 4xDC 24V - Use as spare part

Spare part - Default Hardware revision HW: 2

By default, the module can be used directly as spare part, without reconfiguration. On delivery it is compatible with

↪ [‘Hardware revision’...page 31](#) HW: 2 and has the following properties:

- Protocol: PROFIsafe V2.4 (PROFIBUS, PROFINET)
- Process image byte length CRC: 3 byte
- ↪ [‘SDI 4xDC 24V - Parameter record set’...page 38](#)
 - Version ID: 1 (fix)
 - *Activation diagnostic interrupt*: When the diagnostic interrupt is enabled, the diagnostic record set can be overwritten immediately without acknowledgement. The diagnostic interrupt is disabled by default.

More can be found in the corresponding manual for HW: 2.

The following description always refers to the current hardware revision HW: 3.

Current hardware revision HW: 3



To use and configure the module with the current hardware revision, use the module with the name extension ‘(V2)’ from the hardware catalog. Here the module has the following properties:

- Protocol: PROFIsafe V2.6 (PROFINET)
- Process image byte length CRC: 4 byte
- ↪ [‘SDI 4xDC 24V - Parameter record set’...page 38](#)
 - Version ID: 2 (fix)
 - *Activation diagnostic interrupt* When the diagnostic interrupt is activated, the diagnostic data record can only be overwritten after the safety interrupt has been acknowledged and is thus retained. The diagnostic interrupt is disabled by default.

2.4 SDI 4xDC 24V - Operating and display elements


Description

The electronic module collects the binary control signals from the process level and transmits them isolated to the central bus system. It has 4 channels and their status is monitored via LEDs.

Properties


- 4 digital Inputs isolated to the backplane bus
- Status indication of the channels via LEDs
- Safety module with automatic disconnection in case of error according to IEC 61508 SIL3 and EN ISO 13849-1, Cat.4 / PL e

Structure

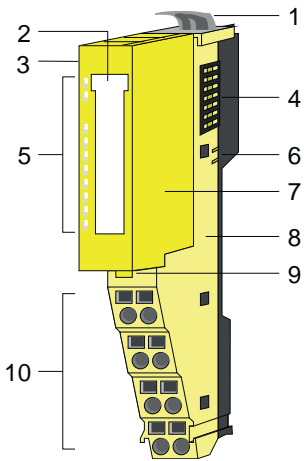

- 1 Locking lever terminal module
- 2 Labeling strip
- 3 Address switch for F-address
- 4 Backplane bus
- 5 LED status indication
- 6 DC 24V power section supply
- 7 Electronic module
- 8 Terminal module
- 9 Locking lever electronic module
- 10 Terminal

Status indication

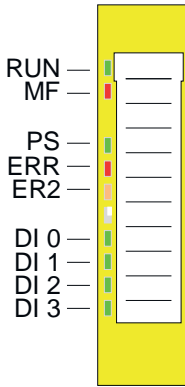

RUN	MF	Description
■ green	■ red	
■	□	Bus communication is OK. Module status is OK.
■	■	Bus communication is OK. Module status reports an error.
□	■	Bus communication is not possible. Module status reports an error.
□	□	Error at bus power supply.

LED		Description
PS	■ green	Module is in PROFIsafe data exchange - BASP is inactive.
	▣ green	Safety parametrization is expected.
	2Hz	
	▣ green	Error - acknowledgement is expected.
ERR	0.5Hz	
	□	Module is in initialization - BASP is active.
ERR	■ red	Module is in permanent fail-safe condition.
	▣ red	Blink code → 'ERR LED'...page 36
ER2	▣ yellow	Blink code → 'ER2 LED'...page 36
	▣ yellow	Requesting fail-safe state.
	0.5Hz	
DI x	■ green	Digital input is triggered.

BASP (BefehlsAusgabeSPerre) means command output disable.

- When BASP is disabled, module outputs can be controlled and inputs can be read.
- When BASP is enabled, all module outputs are switched off. In contrast to standard modules, the inputs of safety modules cannot be read when BASP is enabled.


For more information on BASP, see the manual for your head module.

RUN and MF LED

Each module has the LEDs RUN and MF on its front side. Errors or incorrect modules may be located by means of these LEDs.

In the following illustrations flashing LEDs are marked by ☼.

RUN and MF LED - Sum current of the electronic power supply exceeded

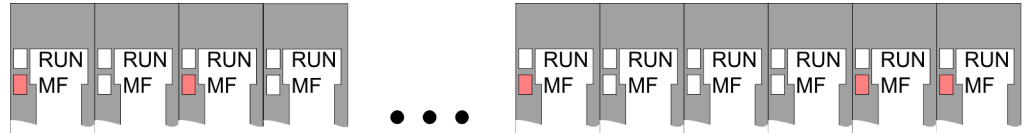


Behaviour: After PowerON the RUN LED of each module is off and the MF LED of each module is sporadically on.

Cause: The maximum current for the electronic power supply is exceeded.

Remedy: As soon as the sum current of the electronic power supply is exceeded, always place the power module 007-1AB10. → ['Wiring'...page 86](#)

RUN and MF LED - Error in configuration

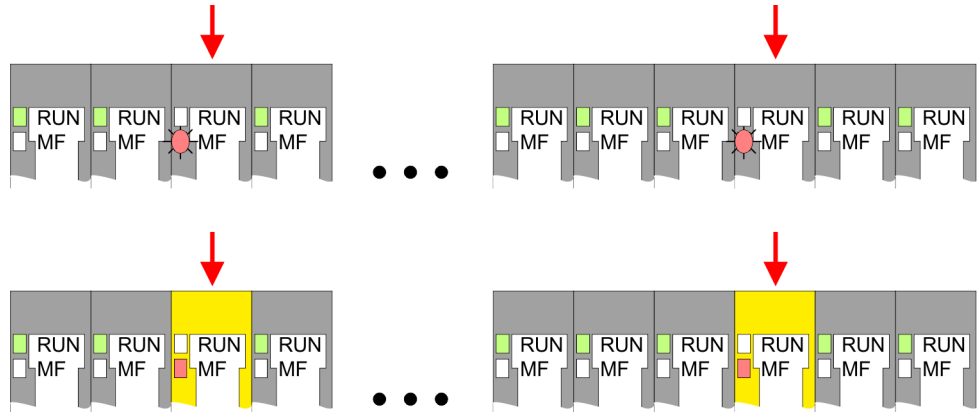


Behaviour:

- Standard module: After PowerON the MF LED of one standard module respectively more standard modules blinks. The RUN LED remains off.
- Safety module: After PowerON the MF LED of one safety module respectively more safety modules is on. The RUN LED remains off.

Cause: At this position a module is placed, which does not correspond to the configured module.

Remedy: Match configuration and hardware structure.

RUN and MF LED - Module failure

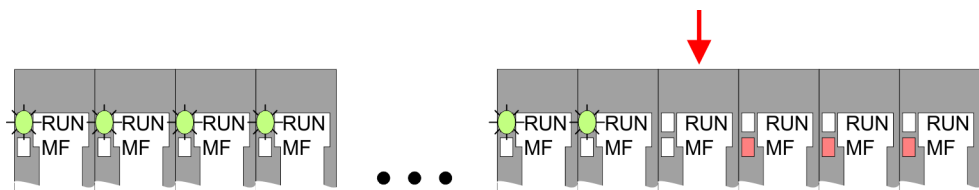

Behaviour: After PowerON all of the RUN LEDs up to the defective module are flashing. With all following modules the MF LED is on and the RUN LED is off.

Cause: The module on the right of the flashing modules is defective.

Remedy: Replace the defective module.

ERR LED

The LED is permanently on at a critical error, which led into a permanent fail-safe state, which may not be acknowledged.

On error like short-circuit, cross-circuit and so on, the ERR LED shows an error by the following blink behaviour. The LED gets off for 2s. Then it shows the following code 1 ... 6 by blinking with 1Hz:

Blink code

Blinking	Error	External error
1x	Short-circuit within a channel to DC 24V.	yes
2x	Cross-circuit error between 2 channels. → 'Fault diagnostics'...page 122	yes
3x	Discrepancy error between 2 channels.	yes
4x	---	---
5x	Other errors.	no
6x	F-address was changed. The F-address set with the DIP switches does not match the stored F-address, i.e. the safety module has already been parametrized appropriately and then the F-address has been changed. → 'Setting the F-address'...page 72	no

After the blink code the LED gets off for 2s and then starts again with the code output. Normally an *external error* is caused by wiring respectively by a connected sensor. Please check also your parameters for the sensor.


- The System SLIO input module monitors the logical correspondence between the test outputs and the associated signal inputs.
- A cross-circuit fault is reported in the event of an incorrect assignment of the test output to the associated signal input. This is typically caused by incorrect wiring (e.g., with a passive sensor). In this case, please check the external wiring.

ER2 LED


If an external error was reported by the ERR LED, the LED ER2 indicates the faulty channel by the following blink code:

- The ER2 LED gets off for 2s.
- Then it indicates the number of the faulty channel by blinking with 1Hz. Here it is valid blinking 1x...4x means channel DI 0 ... 3.
- After the blink code the LED gets off for 2s and then starts again with the code output.
- If there are more errors pending, only the 1. recognized error is indicated.
- If the LED blinks with 0.5Hz the safety PLC requests a fail-safe state of the System SLIO safety module. But there is no error on the System SLIO safety module. This request may occur, for example after a brief interrupt of the communication and may be acknowledged.

Terminal

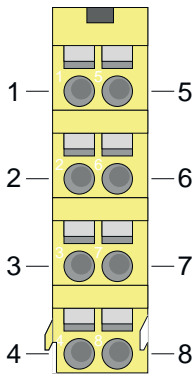


For wires with a core cross-section of 0.08mm² up to 1.5mm².

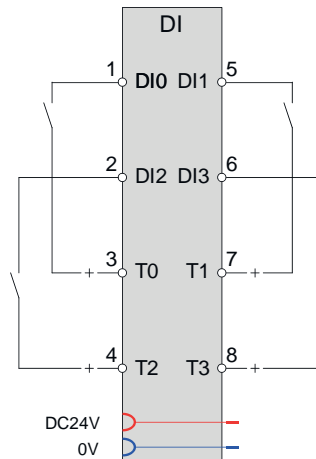

Pos.	Function	Type	Description
1	DI 0	I	Digital input DI 0
2	DI 2	I	Digital input DI 2
3	T0	O	Clock output T0
4	T2	O	Clock output T2
5	DI 1	I	Digital input DI 1
6	DI 3	I	Digital input DI 3
7	T1	O	Clock output T1
8	T3	O	Clock output T3

I: Input, O: Output

Address switch for F-address

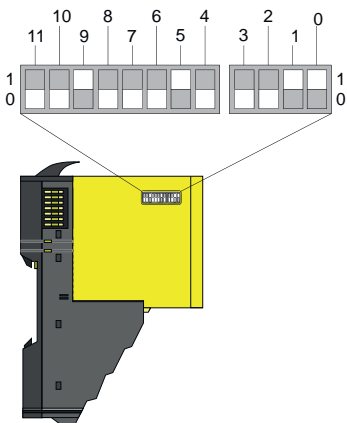

The F-address respectively "Secure user address" is to be configured by the F-address switch at the safety module and additionally in the master system e.g. hardware configurator. The F-address is to be set by the F-address switch besides on the safety module. Only if the F-address set in the hardware configurator accords to the setting of the F-address switch, it is possible to operate!

Pos	Value	Example	
		State	Address
0	1	1	1+2+32+512=547 Address: 547 Address range: 1 ... 4095
1	2	1	
2	4	0	
3	8	0	
4	16	0	
5	32	1	
6	64	0	
7	128	0	
8	256	0	
9	512	1	
10	1024	0	
11	2048	0	



The F-address switch is not accessible when safety module is plugged!
 To set the F-address on the safety module the (electronic) module is to be demounted before as described at "Demounting and module exchange".
 → 'Demounting and module exchange'...page 82

SDI 4xDC 24V - Parameter record set > Parameter data

2.5 SDI 4xDC 24 V - Process Image

Usage as spare part

→ [‘SDI 4xDC 24V - Use as spare part’...page 33](#)

The following description refers to the current hardware revision HW: 3.

Input/Output area PROFIsafe V2.6

The safety DI module occupies 5 data bytes each in the input and output image of the superordinate safety PLC system. The data to be sent and received are stored in the input and output byte 0 ... 4.

Input area

Addr.	Name	Byte	Input data
+0	PII	0	PROFIsafe Inputs <ul style="list-style-type: none"> ■ Bit 0: DI 0 ■ Bit 1: DI 1 ■ Bit 2: DI 2 ■ Bit 3: DI 3 ■ Bit 7 ... 4: reserved
+1	PII_STAT	1	PROFIsafe Status
+2	PII_CRC	2	PROFIsafe CRC2 byte 3
+3		3	PROFIsafe CRC2 byte 2
+4		4	PROFIsafe CRC2 byte 1
+5		5	PROFIsafe CRC2 byte 0

Output area

Addr.	Name	Bytes	Output data
+0	PIQ	0	reserved
+1	PIQ_CTRL	1	PROFIsafe Control
+2	PIQ_CRC	2	PROFIsafe CRC2 byte 3
+3		3	PROFIsafe CRC2 byte 2
+4		4	PROFIsafe CRC2 byte 1
+5		5	PROFIsafe CRC2 byte 0

2.6 SDI 4xDC 24V - Parameter record set

2.6.1 Parameter data

Usage as spare part

→ [‘SDI 4xDC 24V - Use as spare part’...page 33](#)

The following description refers to the current hardware revision HW: 3.

Record set 81h (iParameter) This record set is once transferred during start-up by the standard parameter telegram.

Parameter

Name	Type	Description / range of values	Default
Version ID	UINT16	Internal version ID 0x0002 (fix)	0x0002
Parameter change mode	Bit	Parameter change mode <ul style="list-style-type: none"> 0: normal parameter record set 1: Parameter change F-address 	0
Behavior after channel errors	Bit	0: Passivate the entire module	0 (fix)
Activation diagnostic interrupt	Bit	Diagnostic interrupt <ul style="list-style-type: none"> 0: deactivated 1: activated 	0
Channel 0, 1: Activation ¹	Bit	Activation channel 0, 1 <ul style="list-style-type: none"> 0: deactivated 1: activated 	1
Channel 0, 1: Input smoothing time in ms	UINT16	Input smoothing time 1-1000ms channel 0, 1 Condition: <ul style="list-style-type: none"> 'CH0,1: Activation': activated 	1
Channel 0, 1: Test pulse activation	Bit	Test pulse activation channel 0, 1 <ul style="list-style-type: none"> 0: activated 1: deactivated Condition: <ul style="list-style-type: none"> 'CH0,1: Activation': activated The test pulse activation also switches on the short-circuit and cross-circuit recognition.	0
Channel 0, 1: Evaluation of the inputs	Bit	Evaluation of the inputs channel 0, 1 <ul style="list-style-type: none"> 0: 1-channel 1: 2-channel Condition: <ul style="list-style-type: none"> 'CH0,1: Activation': activated 	1
Channel 0, 1: Signal polarity	Bit	Signal polarity channel 0, 1 <ul style="list-style-type: none"> 0: equivalent 1: antivalent Conditions: <ul style="list-style-type: none"> 'CH0,1: Activation': activated 'CH0,1: Evaluation of the inputs': 2-channel 	0
Channel 0, 1: Discrepancy time in ms	UINT16	Discrepancy time 1-30000ms channel 0, 1 Conditions: <ul style="list-style-type: none"> 'CH0,1: Activation': activated 'CH0,1: Evaluation of the inputs': 2-channel 	20
Channel 0, 1: Discrepancy error (re-integration after discrepancy error)	Bit	Discrepancy error channel 0, 1 <ul style="list-style-type: none"> 0: Test 0-signal required 1: Test 0-Signal not required Conditions: <ul style="list-style-type: none"> 'CH0,1: Activation': activated 'CH0,1: Evaluation of the inputs': 2-channel 	0

SDI 4xDC 24V - Parameter record set > Parameter data

Name	Type	Description / range of values	Default
Channel 2, 3: Activation ¹	Bit	Activation channel 2, 3 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated 	1
Channel 2, 3: Input smoothing time in ms	UINT16	Input smoothing time 1-1000ms Condition: <ul style="list-style-type: none"> ■ 'CH2,3: Activation': activated 	1
Channel 2, 3: Test pulse activation	Bit	Test pulse activation channel 2, 3 <ul style="list-style-type: none"> ■ 0: activated ■ 1: deactivated Condition: <ul style="list-style-type: none"> ■ 'CH2,3: Activation': activated The test pulse activation also switches on the short-circuit and cross-circuit recognition.	0
Channel 2, 3: Evaluation of the inputs	Bit	Evaluation of the inputs channel 2, 3 <ul style="list-style-type: none"> ■ 0: 1-channel ■ 1: 2-channel Condition: <ul style="list-style-type: none"> ■ 'CH2,3: Activation': activated 	1
Channel 2, 3: Signal polarity	Bit	Signal polarity channel 2, 3 <ul style="list-style-type: none"> ■ 0: equivalent ■ 1: antivalent Conditions: <ul style="list-style-type: none"> ■ 'CH2,3: Activation': activated ■ 'CH2,3: Evaluation of the inputs': 2-channel 	0
Channel 2, 3: Discrepancy time in ms	UINT16	Discrepancy time 1-30000ms channel 2, 3 Conditions: <ul style="list-style-type: none"> ■ 'CH2,3: Activation': activated ■ 'CH2,3: Evaluation of the inputs': 2-channel 	20
Channel 2, 3: Discrepancy error (re-integration after discrepancy error)	Bit	Discrepancy error channel 2, 3 <ul style="list-style-type: none"> ■ 0: Test 0-signal required ■ 1: Test 0-Signal not required Conditions: <ul style="list-style-type: none"> ■ 'CH2,3: Activation': activated ■ 'CH2,3: Evaluation of the inputs': 2-channel 	0

1) The deactivation of channel groups deviates from the "standard mode" and represents a potentially dangerous condition.

Version ID

Version identifier of the parametrization data structure, this is fixed to 2.

Parameter change mode

For a valid parametrization this parameter must be set to 0 (default value). If the F-address is to be changed for a System SLIO safety module, you can delete the F-address in the memory of the System SLIO safety module by setting this parameter. ➔ ['Setting the F-address'...page 72](#)

Behavior after channel errors

Currently, the parameter is not being evaluated. If the SDI module detects an error on one of the input channels (e.g. short-circuit), the entire System SLIO safety module is passivated. Here, the module provides the safety PLC as long with the fail-safe value 0 for the inputs until the error is fixed and acknowledged. → [‘Sample application’...page 129](#)

Activation diagnostic interrupt

Here you activate respectively deactivate the diagnostic interrupt function. With a set diagnostic interrupt bit in case of an error a diagnostic interrupt message is sent to the upper master system. There the diagnostics message can further be processed.



When the diagnostic interrupt is activated, the diagnostic record set can only be overwritten after the safety interrupt has been acknowledged and is thus retained. More may be found in the manual of the master system.

Channel activation

- With the *channel activation* channel groups may be activated or deactivated. With *channel activation* = 1 the corresponding channel group is in "standard operation".
- Deactivated channel groups (*channel activation* = 0) permanently supply a logical 1 as input information to the safety PLC in the cyclic data exchange as long as the module is not passivated. This serves to bridge non-existent sensors, e.g. during commissioning or with machine variants, without adapting the safety program in the safety PLC.

**CAUTION**

Deactivation of channel groups represents a potentially dangerous condition!

The usage of *channel activation* must already be taken into account when planning and creating the safety program!

Input smoothing time

Errors on the input signals can be suppressed by specifying an *input smoothing time*. This is used for debouncing sensors. If there is an active safety sensor connected to an input, which tests the wired lines by test pulses, then the *input smoothing time* must always be greater than the max. test pulse length of the sensor. Please also refer to the "Connection examples". → [‘Connection examples’...page 92](#)



The input smoothing time is included in the calculation of the max. system response time! → ‘Response times’...page 60

Test pulse activation

- When using sensors with mechanical or electromechanical contacts, to detect a short circuit to DC 24V, for each channel group a test pulse can be activated. For test pulse output the System SLIO safety module has a DC 24V power supply output for each channel group.
- When activated (*test pulse activation* = 0) the DC 24V power supply output is shortly set to 0V at defined intervals. Here the return of the test pulse is observed by each input channel, provided the sensor is currently closed. Here wiring errors or short and cross circuits can be detected.
- This function is to be deactivated (*test pulse activation* = 1) if there is an active sensor (e.g. light array) connected to the input with integrated electronic and semiconductor output. Here the active sensor serves for the observation of the connected lines by generating the test pulse to check the switch-off ability. Here the input smoothing time of the corresponding safety input must be greater than the test pulse length of the output of the safety sensor (vendor information). Please also refer to the "Connection examples". → [‘Connection examples’...page 92](#)

Evaluation of the inputs

Here for each channel group you can set the evaluation of the inputs as 1-channel or 2-channel evaluation:

- With "1-channel" evaluation one sensor with one output is connected to one channel.
- With "2-channel" evaluation one sensor with one output is connected to one channel. Here the sensor supplies by both connectors the same signal state. With "2-channel" evaluation more short and cross circuits may be detected as with "1-channel" evaluation. This kind of 2-channel connection allows to achieve higher safety levels like SIL 3 and PL e. Please also refer to the "Connection examples". → ['Connection examples'...page 92](#)

Signal polarity

With the signal polarity parameter you can physically adapt the inputs of your System SLIO safety module to the signal polarity of your sensor for 2-channel evaluation. The 1. channel always supplies the current input signal of the sensor. Independent of the signal polarity, in the safety control system the resulted input value (corresponds to the polarity of the 1. channel) is passed to both input bits of a channel group.

- With *equivalent* signal polarity the 2. channel supplies the same value as the 1. channel.
- With an *antivalent* signal polarity the signal is inverted by the 2. channel of the sensor. Antivalent signals are used, e.g. in the wiring of security doors. By this way simple manipulations can be prevented.

Discrepancy time

- During the switching operation of 2-channel sensors, temporarily both channels do not supply the same signal state. With the *discrepancy time* you can set the time until both channels have valid values after switching.
- If the discrepancy time is exceeded, the System SLIO safety module switches to the fail-safe state.
- It is valid for electrical and electromechanical sensors:
Discrepancy to be set = real signal discrepancy (switch and bounce time of the sensor) + set *Input smoothing time* + 7 ms
- It is valid for active sensors with semiconductor output (and own test pulse generation):
Discrepancy to be set = real signal discrepancy + set *Input smoothing time* * 3 + 4 ms



Please consider with mechanical sensors and increasing abrasion by e.g. contact bounce, the discrepancy time increases and this is reported as error by the System SLIO safety module.

In this case, in order to avoid failure of a sensor, during operation a defective sensor must immediately be changed!

Reintegration after discrepancy error

This parameter allows you to define how you can acknowledge a discrepancy error.

- With 0 of this parameter, a discrepancy error can only be acknowledged when the sensor supplies 0 signal. For example, an emergency stop switch must be pressed.
- With 1 of this parameter, a discrepancy error can only be acknowledged when both sensors supply a valid signal state (depending on the parametrization equivalent or antivalent).

→ ['Sample application'...page 129](#)

2.6.2 Overview PROFIsafe F-parameters

F-parameter	Description	Default
F_SIL	The parameter <i>F_SIL</i> specifies the required safety integrity class of the System SLIO safety module. The System SLIO safety module supports up to SIL3.	SIL 3
F_CRC_Length	The parameter <i>F_CRC_Length</i> specifies the length of the CRC2 key to be used in the PROFIsafe telegram. The required length depends on the length of the user data to be transferred. For PROFIsafe V2.6 this is 4 bytes.	4-Byte-CRC
F_CRC_SEED	The <i>F_CRC_SEED</i> is the mathematical start value for the CRC calculation, which integrates the F destination address (<i>F_Dest_Add</i>) into the checksum generation. It ensures that security data is only accepted as valid by the intended recipient and thus protects against addressing errors in the network.	CRC-Seed24/32
F_PASSIVATION	<i>F_PASSIVATION</i> describes the safety reaction of an F device in which the affected channel or the entire module switches to the safety state after an error is detected (e.g. communication error, discrepancy error or short circuit). In this state, predefined substitute values (fail safe values) are transmitted to or returned from the F controller instead of the current process values.	Device/Module
F_Block_ID	<i>F_Block_ID</i> defines the format of the F-Parameter record set. The value 1 indicates that the <i>F_iPar_CRC</i> is contained in the F-parameters.	1
F_Par_Version	<i>F_Par_Version</i> specifies the PROFIsafe version to be used for communication. The System SLIO Safety module supports PROFIsafe V2-mode: <ul style="list-style-type: none"> ■ PROFINET: PROFIsafe V2.4/2.6 ■ PROFIBUS: PROFIsafe V2.4 	V2-mode
F_Source_Add	<i>F_Source_Add</i> defines the PROFIsafe source address. To prevent incorrect parametrization, the address is automatically assigned by the configuration tool and cannot be changed. The parameter can take values from 1 to 65534.	-
F_Dest_Add	<i>F_Dest_Add</i> specifies the PROFIsafe destination address of the System SLIO safety module. Values from 1 to 4095 can be selected for <i>F_Dest_Add</i> . Each address value may only occur once in the communication network that is reached by the safety PLC. In order for PROFIsafe communication to be established, the parameter value must match the setting of the F address of the System SLIO safety module, which is made with the DIP switch. → ‘Setting the F-address’...page 72	-
F_WD_Time	The <i>F_WD_Time</i> PROFIsafe parameter determines the monitoring time for the PROFIsafe communication between the F PLC and the System SLIO safety module. At least one valid PROFIsafe telegram must be exchanged between the safety PLC and the System SLIO safety module within the monitoring time. If this condition is not met, the safety PLC or the System SLIO safety module initiates a safe state. The monitoring time must be selected so that telegram runtimes are tolerated, but an interrupt in the connection is detected quickly enough. → ‘Calculating the F_WD_Time’...page 44 Information on the calculation can be found below. The monitoring time can be specified in steps of 1ms. The possible range of values (20 to 65535 ms) is specified by the device description file (GSD/GSDML).	150

F-parameter	Description	Default
F_iPar_CRC	<p>The <i>F_iPar_CRC</i> parameter specifies a comparison value for the CRC value via the <i>iPar_CRC</i>. The PROFIsafe data exchange is only established if the values of the <i>F_iPar_CRC</i> and the <i>iPar_CRC</i> match.</p> <p>After confirming the set parameters, the CRC (<i>iPar-CRC</i>) is calculated and shown by the safety CRC tool.</p> <p>This value must be entered in the F-parameters of the System SLIO safety module via the configuration tool of the safety PLC.</p>	0

Calculating the F_WD_Time

Thus the running PROFIsafe watchdog in the System SLIO safety modules is reset periodically, that this does not release, the following cyclically data flow (circulation of a token) is to be considered:



The time required for this can be regarded as the full circulation time of a token. Thus the minimum PROFIsafe monitoring time to be configured results in:

$$T_{PSTO} = T_{Slave} + T_{BUS} + T_{CI} + T_{BUS} + T_{Slave} + T_{DAT}$$

$$T_{PSTO} = 2 * T_{Slave} + 2 * T_{BUS} + T_{CI} + T_{DAT}$$

Component	Time	Meaning	from
System SLIO safety module	T _{PSTO}	Configured PROFIsafe monitoring time (<i>F_WD_Time</i>)	refer to the formula above
Bus coupler	T _{Slave}	Max. response time of the decentralized peripheral system = max. delay by the bus coupler and the backplane bus	Documentation of the decentralized periphery system (for System SLIO PROFIBUS and PROFINET < 2ms)
Field bus	T _{Bus}	Response time of the field bus	T _{TR} at PROFIBUS res. T _{WD} at PROFINET
With field bus PROFIBUS	T _{TR}	max. target rotation time for the DP master system	Object properties of the DP master system, bus parameters in the HW configuration.
With field bus PROFINET	T _{WD}	threshold monitoring of the PROFINET IO device	Value from the object properties of the PROFINET IO device Tab "IO cycle", in HW config. If there is no threshold monitoring time configured for the IO device, instead of this you can take the given refresh time multiplied with 3. The refresh time can be found in the HW config. at object properties of the PROFINET IO system.
F-PLC / F-Logic	T _{CI}	Configured cycle time the F-runtime group is called	Configured timing (cycle time) for calling the F-runtime group. By processing of higher priority interrupts, by communication load, or by testing and commissioning functions, the distance between the start times can increase. The influence of these factors can be determined from the documentation and configuration of the standard system itself and then added to the value determined here.
System SLIO safety module	T _{DAT}	max. acknowledge time of the F periphery (Device Acknowledgement Time)	8ms

2.7 SDI 4xDC 24V - Technical data

Order no.	021-1SD00
Type	SM 021 - Digital input
Module ID	0C41 1E00
Current consumption/power loss	
Current consumption from backplane bus	95 mA
Power loss	1 W
Technical data digital inputs	
Number of inputs	4
Cable length, shielded	330 m
Cable length, unshielded	330 m
Rated voltage power section supply	DC 24 V
Permitted range	DC 20.4...28.8 V
Current consumption from power section supply (without load)	20 mA
Input rated voltage	DC 24 V
Permitted range	DC 20.4...28.8 V
Input voltage for signal "0"	DC 0...5 V
Input voltage for signal "1"	DC 11...28.8 V
Input voltage hysteresis	-
Signal logic input	Sinking input
Frequency range	-
Input resistance	-
Input capacitance	100 nF
Input current for signal "1"	3 mA
Connection of Two-Wire-BEROs possible	✓
Max. permissible BERO quiescent current	1.5 mA
Input delay of "0" to "1"	parameterizable 1ms - 1s
Input delay of "1" to "0"	parameterizable 1ms - 1s
Number of simultaneously utilizable inputs horizontal configuration	4
Number of simultaneously utilizable inputs vertical configuration	4
Input characteristic curve	IEC 61131-2, type 3
Initial data size	4 Bit
Status information, alarms, diagnostics	
Status display	green LED per channel
Interrupts	yes, parameterizable
Process alarm	no
Diagnostic interrupt	yes, parameterizable
Diagnostic functions	yes, parameterizable
Diagnostics information read-out	possible
Module state	green LED
Module error display	red LED
Channel error display	red ERR-LED and yellow ER2-LED
Isolation	
Between channels	-
Between channels of groups to	-
Between channels and backplane bus	✓

SDI 4xDC 24V - Technical data

Order no.	021-1SD00
Insulation tested with	DC 500 V
Safety	
Safety protocol	PROFIsafe V2.4/2.6
Safety requirements	SIL CL 3, PL e, Kat 4
Secure user address	1 - 4095
Watchdog	parameterizable 1ms - 65535ms
Two channels	Each 2 of 4 inputs switchable
Test pulse outputs	4
Datasizes	
Input bytes	5
Output bytes	5
Parameter bytes	44
Diagnostic bytes	20
Housing	
Material	PC / PPE GF10
Mounting	Profile rail 35 mm
Mechanical data	
Dimensions (WxHxD)	12.9 mm x 109 mm x 76.5 mm
Net weight	63 g
Weight including accessories	68 g
Gross weight	84 g
Environmental conditions	
Operating temperature	0 °C to 60 °C
Storage temperature	-40 °C to 70 °C
Certifications	
UL certification	in preparation
KC certification	in preparation
UKCA certification	-
ChinaRoHS certification	yes



Please consider that the signal increase of the sensor signals for signal on and signal off must have a slope of at least 13V/s, otherwise an error could be detected by the mutual monitoring of the microcontrollers!



Please note that the electrical input stage of safe digital inputs of a System SLIO safety module may affect the test pulses of connected devices (sensors) with OSSD outputs.

- *If the OSSD outputs are of the type "open collector", the input capacitance, which is specified in the technical data here, must be considered as a load capacitance in addition to the cable capacitance.*
- *The maximum permissible load capacitance of the sensor can be found in its technical data. If the actual load capacitance is higher than the permitted, then the sensor will falsely detect a short circuit to 24V and switch to a safe state, i.e. these sensors can not be operated on the System SLIO safety module.*
- *At OSSD outputs of the type "push-pull" the specified input capacitance of the test pulses of the sensor are not relevant.*

2.8 SDO 4xDC 24V 0.5A - Use as spare part

Spare part - Default Hardware revision HW: 2

By default, the module can be used directly as spare part, without reconfiguration. On delivery it is compatible with

↪ [‘Hardware revision’...page 31](#) HW: 2 and has the following properties:

- Protocol: PROFIsafe V2.4 (PROFIBUS, PROFINET)
- Process image byte length CRC: 3 byte
- ↪ [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)
 - Version ID: 1 (fix)
 - *Activation diagnostic interrupt*: When the diagnostic interrupt is enabled, the diagnostic record set can be overwritten immediately without acknowledgement. The diagnostic interrupt is enabled by default.
 - *Channel x Test pulse length*: ‘deactivated’ is not supported.

More can be found in the corresponding manual for HW: 2.

The following description always refers to the current hardware revision HW: 3.

Current Hardware revision HW: 3



To use and configure the module with the current hardware revision, the module with the name extension ‘(V2)’ must be used from the hardware catalog.

Here the module has the following properties:

- Protocol: PROFIsafe V2.6 (PROFINET)
- Process image byte length CRC: 4 byte
- ↪ [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)
 - Version ID: 2 (fix)
 - *Activation diagnostic interrupt* When the diagnostic interrupt is activated, the diagnostic data record can only be overwritten after the safety interrupt has been acknowledged and is thus retained. The diagnostic interrupt is disabled by default.
 - *Channel x Test pulse length*: ‘deactivated’ is supported.

2.9 SDO 4xDC 24V 0.5A - Operating and display elements


Description

The electronic module accepts binary control signals from the central bus system and transfers them to the process level via outputs. It has 4 channels and their status is monitored via LEDs.

Properties


- 4 digital outputs isolated to the backplane bus
- Status indication of the channels via LEDs
- Safety module with automatic disconnection in case of error according to IEC 61508 SIL3 and EN ISO 13849-1, Cat.4 / PL e

Structure

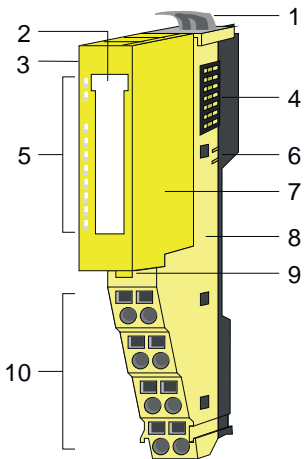

- 1 Locking lever terminal module
- 2 Labeling strip
- 3 Address switch for F-address
- 4 Backplane bus
- 5 LED status indication
- 6 DC 24V power section supply
- 7 Electronic module
- 8 Terminal module
- 9 Locking lever electronic module
- 10 Terminal

Status indication

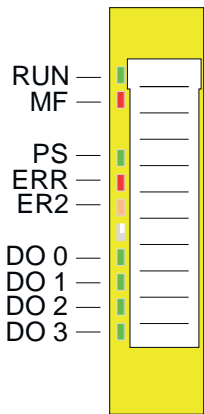

RUN	MF	Description
■ green	■ red	
■ green	□	Bus communication is OK. Module status is OK.
■ green	■ red	Bus communication is OK. Module status reports an error.
□	■ red	Bus communication is not possible. Module status reports an error.
□	□	Error at bus power supply.

LED		Description
PS	■ green	Module is in PROFIsafe data exchange - BASP is inactive.
	▣ green	Safety parametrization is expected.
	2Hz	
	▣ green	Error - acknowledgement is expected.
ERR	0.5Hz	
	□	Module is in initialization - BASP is active.
ERR	■ red	Module is in permanent fail-safe condition.
	▣ red	Blink code → 'ERR LED'...page 50
ER2	▣ yellow	Blink code → 'ER2 LED'...page 50
	▣ yellow	Requesting fail-safe state.
DO x	0.5Hz	
	■ green	Digital output is triggered.

BASP (BefehlsAusgabeSPerre) means command output disable.

- When BASP is disabled, module outputs can be controlled and inputs can be read.
- When BASP is enabled, all module outputs are switched off. In contrast to standard modules, the inputs of safety modules cannot be read when BASP is enabled.


For more information on BASP, see the manual for your head module.

RUN and MF LED

Each module has the LEDs RUN and MF on its front side. Errors or incorrect modules may be located by means of these LEDs.

In the following illustrations flashing LEDs are marked by ☼.

RUN and MF LED - Sum current of the electronic power supply exceeded

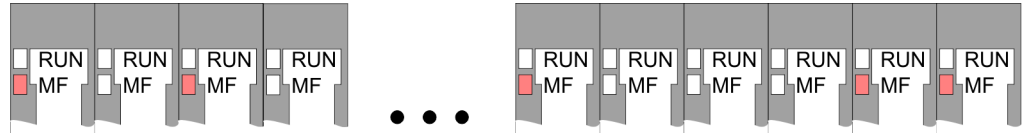


Behaviour: After PowerON the RUN LED of each module is off and the MF LED of each module is sporadically on.

Cause: The maximum current for the electronic power supply is exceeded.

Remedy: As soon as the sum current of the electronic power supply is exceeded, always place the power module 007-1AB10. → ['Wiring'...page 86](#)

RUN and MF LED - Error in configuration

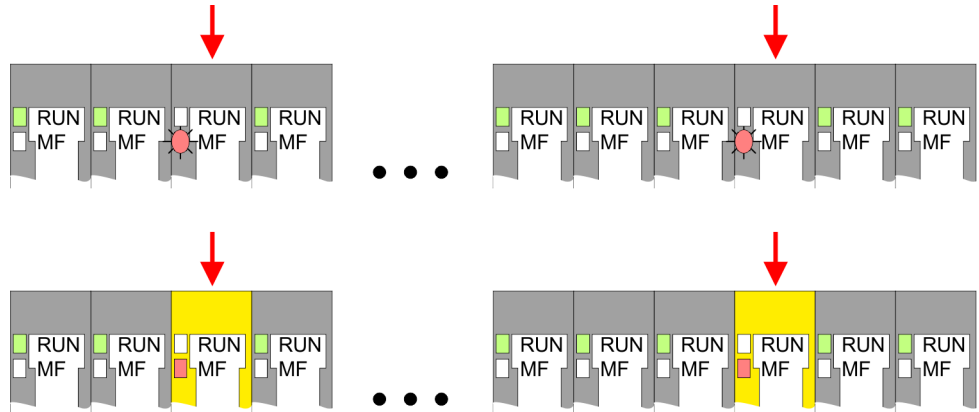


Behaviour:

- Standard module: After PowerON the MF LED of one standard module respectively more standard modules blinks. The RUN LED remains off.
- Safety module: After PowerON the MF LED of one safety module respectively more safety modules is on. The RUN LED remains off.

Cause: At this position a module is placed, which does not correspond to the configured module.

Remedy: Match configuration and hardware structure.

RUN and MF LED - Module failure

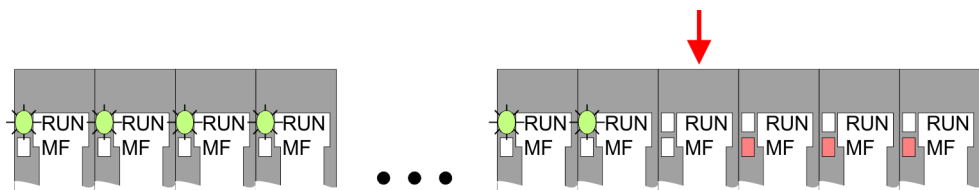

Behaviour: After PowerON all of the RUN LEDs up to the defective module are flashing. With all following modules the MF LED is on and the RUN LED is off.

Cause: The module on the right of the flashing modules is defective.

Remedy: Replace the defective module.

ERR LED

The LED is permanently on at a critical error, which led into a permanent fail-safe state, which may not be acknowledged.

On error like short-circuit, wire break error and so on, the ERR LED shows an error by the following blink behaviour. The LED gets off for 2s. Then it shows the following code 1 ... 6 by blinking with 1Hz:

Blink code

Blinking	Error	External error
1x	Short-circuit within a channel to DC 24V.	yes
2x	-	-
3x	Wire break error at a channel (current < 30mA). → ‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52	yes
4x	Read back error i.e. at a channel the setpoint state and the actual state do not match e.g. short circuit to earth.	yes
5x	Other errors	no
6x	F-address was changed. The F address set with the DIP switches does not match the stored F address, i.e. the safety module has already been parametrized appropriately and then the F address has been changed. → ‘Setting the F-address’...page 72	no


- After the blink code the LED gets off for 2s and then starts again with the code output. Normally an *external error* is caused by wiring respectively by a connected sensor. Please check also your parameters for the actuator.
- The System SLIO safety output module monitors the actual state of the output voltage level monitoring with the setpoint state (control).
- If there is a difference between the setpoint state and the actual state detected, a read back error is reported.
This can either mean that the output is "1" state, although it should have "0" state (points to a separate power supply) or the output has "0" state, although it should have "1" state (points to an external short circuit or an internal hardware malfunction).
In this case of error please check the external wiring and the configured test pulse length. If they are OK and the error occurs several times in succession, then the module is defective and you have to proceed as described at "Repair".
→ [‘Repair’...page 119](#)

ER2 LED


If an external error was reported by the ERR LED, the LED ER2 indicates the faulty channel by the following blink code:

- The ER2 LED gets off for 2s.
- Then it indicates the number of the faulty channel by blinking with 1Hz. Here it is valid blinking 1x...4x means channel DO 0 ... 3.
- After the blink code the LED gets off for 2s and then starts again with the code output.
- If there are more errors pending, only the 1. recognized error is indicated.
- If the LED blinks with 0.5Hz the safety PLC requests a fail-safe state of the System SLIO safety module. But there is no error on the System SLIO safety module. This request may occur, for example after a brief interrupt of the communication and may be acknowledged.

Terminal

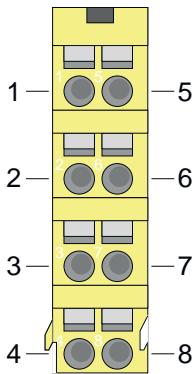

For wires with a core cross-section of 0.08mm² up to 1.5mm².

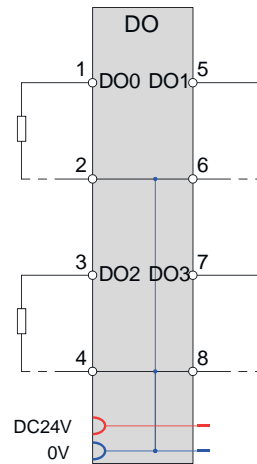


Pos.	Function	Type	Description
1	DO 0	O	Digital output DO 0
2	0V	O	GND for actuator
3	DO 2	O	Digital output DO 2
4	0V	O	GND for actuator
5	DO 1	O	Digital output DO 1
6	0V	O	GND for actuator
7	DO 3	O	Digital output DO 3
8	0V	O	GND for actuator

I: Input, O: Output

Address switch for F-address

The F-address respectively "Secure user address" is to be configured by the F-address switch at the safety module and additionally in the master system e.g. hardware configurator. The F-address is to be set by the F-address switch besides on the safety module. Only if the F-address set in the hardware configurator accords to the setting of the F-address switch, it is possible to operate!

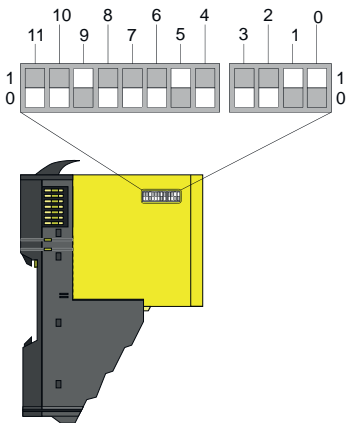

Pos	Value	Example	
		State	Address
0	1	1	1+2+32+512=547 Address: 547 Address range: 1 ... 4095
1	2	1	
2	4	0	
3	8	0	
4	16	0	
5	32	1	
6	64	0	
7	128	0	
8	256	0	
9	512	1	
10	1024	0	
11	2048	0	



The F-address switch is not accessible when safety module is plugged!
 To set the F-address on the safety module the (electronic) module is to be demounted before as described at "Demounting and module exchange".
 → 'Demounting and module exchange'...page 82

2.10 SDO 4xDC 24V 0.5A - Process Image

Use as spare part

→ [‘SDO 4xDC 24V 0.5A - Use as spare part’...page 47](#)

The following description refers to the current hardware revision HW: 3.

Input/Output area PROFIsafe V2.6

The safety DO module occupies 5 data bytes each in the input and output image of the superordinate safety PLC system. The safety PROFIsafe data to be sent and received are stored in the input and output bytes 0 ... 4.

Input area

Addr.	Name	Byte	Input data
+0	PII	0	reserved
+1	PII_STAT	1	PROFIsafe Status
+2	PII_CRC	2	PROFIsafe CRC2 byte 3
+3		3	PROFIsafe CRC2 byte 2
+4		4	PROFIsafe CRC2 byte 1
+5		5	PROFIsafe CRC2 byte 0

Output area

Addr.	Name	Bytes	Output data
+0	PIQ	0	PROFIsafe outputs
			■ Bit 0: DO 0
			■ Bit 1: DO 1
			■ Bit 2: DO 2
			■ Bit 3: DO 3
			■ Bit 7 ... 4: reserved
+1	PIQ_CTRL	1	PROFIsafe Control
+2	PIQ_CRC	2	PROFIsafe CRC2 byte 3
+3		3	PROFIsafe CRC2 byte 2
+4		4	PROFIsafe CRC2 byte 1
+5		5	PROFIsafe CRC2 byte 0

2.11 SDO 4xDC 24V 0.5A - Parameter record set

2.11.1 Parameter data

Use as spare part

→ [‘SDO 4xDC 24V 0.5A - Use as spare part’...page 47](#)

The following description refers to the current hardware revision HW: 3.

Record set 81h (iParameter) This record set is once transferred during start-up by the standard parameter telegram.

Parameter

Name	Type	Description / range of values	Default
Version ID	UINT	Internal version ID 0x0002 (fix)	0x0002
Parameter change mode	Bit	Parameter change mode <ul style="list-style-type: none"> ■ 0: Normal parameter record set ■ 1: Parameter change F-address 	0
Activation Diagnostic interrupt	Bit	Diagnostic interrupt <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated 	0
Channel 0, 1: Activation ¹	Bit	Activation channel 0, 1 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated 	1
Channel 0, 1: Activation mode	Bit	Activation mode channel 0, 1 <ul style="list-style-type: none"> ■ 0: 1-channel ■ 1: 2-channel Condition: <ul style="list-style-type: none"> ■ 'Channel 0, 1: Activation': activated 	1
Channel 0: Wire break detection	Bit	Wire break detection channel 0 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated Condition: <ul style="list-style-type: none"> ■ 'Channel 0, 1: Activation': activated 	0
Channel 1: Wire break detection	Bit	Wire break detection channel 1 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated Condition: <ul style="list-style-type: none"> ■ 'Channel 0, 1: Activation': activated 	0
Channel 2, 3: Activation ¹	Bit	Activation channel 2, 3 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated 	1
Channel 2, 3: Activation mode	Bit	Activation mode channel 2, 3 <ul style="list-style-type: none"> ■ 0: 1-channel ■ 1: 2-channel Condition: <ul style="list-style-type: none"> ■ 'Channel 2, 3: Activation': activated 	1
Channel 2: Wire break detection	Bit	Wire break detection channel 2 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated Condition: <ul style="list-style-type: none"> ■ 'Channel 2, 3: Activation': activated 	0

Name	Type	Description / range of values	Default
Channel 3: Wire break detection	Bit	Wire break detection channel 3 <ul style="list-style-type: none"> ■ 0: deactivated ■ 1: activated Condition: <ul style="list-style-type: none"> ■ 'Channel 2, 3: Activation': activated 	0
Channel 0: Test pulse length	UINT16	Test pulse length channel 0 <ul style="list-style-type: none"> ■ Selectable values: 0 (deactivated), 500µs ... 10000µs Condition: <ul style="list-style-type: none"> ■ 'Channel 0, 1: Activation': activated 	500
Channel 1: Test pulse length	UINT16	Test pulse length channel 1 <ul style="list-style-type: none"> ■ Selectable values: 0 (deactivated), 500µs ... 10000µs Condition: <ul style="list-style-type: none"> ■ 'Channel 0, 1: Activation': activated 	500
Channel 2: Test pulse length	UINT16	Test pulse length channel 2 <ul style="list-style-type: none"> ■ Selectable values: 0 (deactivated), 500µs ... 10000µs Condition: <ul style="list-style-type: none"> ■ 'Channel 2, 3: Activation': activated 	500
Channel 3: Test pulse length	UINT16	Test pulse length channel 3 <ul style="list-style-type: none"> ■ Selectable values: 0 (deactivated), 500µs ... 10000µs Condition: <ul style="list-style-type: none"> ■ 'Channel 2, 3: Activation': activated 	500

1) Deactivation of channel groups deviates from "normal operation" and represents a potentially dangerous condition.

Version ID

Version identifier of the parametrization data structure, this is fixed to 2.

Parameter change mode

For a valid parametrization this parameter must be set to 0 (default value). If the F-address is to be changed for a System SLIO safety module, you can delete the F-address in the memory of the System SLIO safety module by setting this parameter. → ['Setting the F-address'...page 72](#)

Activation diagnostic interrupt

Here you activate respectively deactivate the diagnostic interrupt function. With a set diagnostic interrupt bit in case of an error a diagnostic interrupt message is sent to the upper master system. There the diagnostics message can further be processed.



When the diagnostic interrupt is activated, the diagnostic record set can only be overwritten after the safety interrupt has been acknowledged and is thus retained. More may be found in the manual of the master system.

Channel activation

- With the *channel activation* channel groups may be activated or deactivated. With *channel activation* = 1 the corresponding channel group is in "standard operation".
- Deactivated channel groups (*channel activation* = 0) permanently provide a logical 0 as output signal, independent from the defined signal of the safety PLC. This can be useful during the first start-up.

**CAUTION**

Deactivation of channel groups represents a potentially dangerous condition!
The usage of *channel activation* must already be taken into account when planning and creating the safety program!

Activation mode

Here you can specify for each channel group, if the outputs of the safety output module are controlled by the safety PLC individually (*1-channel*) or in pairs (*2-channel*). The paired control option simplifies the creation of the safety logic in the safety PLC. Please consider that regardless of the type of the activation mode, in the System SLIO safety module, each output is always 2-channel driven and switched off (double PP switching)

- With *1-channel* 1 or 2 actuators with one input are connected to one channel. Here respectively one bit is used to control an output. By means of 2-channel actuators, a higher safety level like SIL3 or PLe can be achieved, if you can exclude the errors cross-circuit or external power supply or there is a superior shut-down on error.
- With *2-channel* a 2-channel actuator with 2 inputs or 2 actuators with respectively 1 input are connected to a channel group. Here bit 0 switches the outputs DO 0 and DO 1 respectively bit 2 switches the outputs DO 2 and DO 3. Here the actuator / actuators get the output signal via both channels. Errors in cross circuits and external power supply at the channel group can be identified and controlled, if this relates to only one of the two lines. This enables to achieve higher safety levels like SIL 3 and PLe.
→ '[Connection examples](#)'...page 92

**NOTICE**

In case of error with a switched-off output, a short-time turn-on pulse with a max. length of the error detection time can occur.
The error detection time is $6\text{ms} + 2 \times \text{test pulse length}$.

Wire break detection

If this parameter is set, the System SLIO safety module observes the outputs with output state 1, whether there is a min. current of 10mA...30mA. By this way a line break can be detected. Here the System SLIO safety module gets to fail-safe state and the outputs are switched off.

**CAUTION**

This function must not be used as safety function. This means a safety function must not depend on this function.

Test pulse length

Each output with "1" state is continuously observed whether this can still be switched off. Here wiring errors e.g. short circuit to DC 24V and errors within the System SLIO safety module can be detected.

**NOTICE**

Setting the test pulse length to 0 deactivates the test pulses on the respective channel. This means that the module can no longer test the output's shutdown capability in the active state for this channel. In this case, ensure that the output can be switched off by taking appropriate measures!

This can be done, for example, by regularly switching off the output via the user program. The output module automatically detects the failure when the output is switched off (setpoint state) in the event that the switch-off capability no longer functions.

**NOTICE**

Once the test pulses are disabled for one channel, the internal serial redundant design is no longer applicable to all other output channels (due to the lack of testing capability), and each individual output channel now represents only a single-channel output.



Please note that due to hardware limitations, test pulse lengths over 1ms are limited to 1ms!

2.11.2 Overview PROFIsafe F-parameters

F-parameter	Description	Default
F_SIL	The parameter <i>F_SIL</i> specifies the required safety integrity class of the System SLIO safety module. The System SLIO safety module supports up to SIL3.	SIL 3
F_CRC_Length	The parameter <i>F_CRC_Length</i> specifies the length of the CRC2 key to be used in the PROFIsafe telegram. The required length depends on the length of the user data to be transferred. For PROFIsafe V2.6 this is 4 bytes.	4-Byte-CRC
F_CRC_SEED	The <i>F_CRC_SEED</i> is the mathematical start value for the CRC calculation, which integrates the F destination address (<i>F_Dest_Add</i>) into the checksum generation. It ensures that security data is only accepted as valid by the intended recipient and thus protects against addressing errors in the network.	CRC-Seed24/32
F_PASSIVATION	<i>F_PASSIVATION</i> describes the safety reaction of an F device in which the affected channel or the entire module switches to the safety state after an error is detected (e.g. communication error, discrepancy error or short circuit). In this state, predefined substitute values (fail safe values) are transmitted to or returned from the F controller instead of the current process values.	Device/Module
F_Block_ID	<i>F_Block_ID</i> defines the format of the F-Parameter record set. The value 1 indicates that the <i>F_iPar_CRC</i> is contained in the F-parameters.	1
F_Par_Version	<i>F_Par_Version</i> specifies the PROFIsafe version to be used for communication. The System SLIO Safety module supports PROFIsafe V2-mode: <ul style="list-style-type: none"> ■ PROFINET: PROFIsafe V2.4/2.6 ■ PROFIBUS: PROFIsafe V2.4 	V2-mode
F_Source_Add	<i>F_Source_Add</i> defines the PROFIsafe source address. To prevent incorrect parametrization, the address is automatically assigned by the configuration tool and cannot be changed. The parameter can take values from 1 to 65534.	-
F_Dest_Add	<i>F_Dest_Add</i> specifies the PROFIsafe destination address of the System SLIO safety module. Values from 1 to 4095 can be selected for <i>F_Dest_Add</i> . Each address value may only occur once in the communication network that is reached by the safety PLC. In order for PROFIsafe communication to be established, the parameter value must match the setting of the F address of the System SLIO safety module, which is made with the DIP switch. → ‘Setting the F-address’...page 72	-
F_WD_Time	The <i>F_WD_Time</i> PROFIsafe parameter determines the monitoring time for the PROFIsafe communication between the F PLC and the System SLIO safety module. At least one valid PROFIsafe telegram must be exchanged between the safety PLC and the System SLIO safety module within the monitoring time. If this condition is not met, the safety PLC or the System SLIO safety module initiates a safe state. The monitoring time must be selected so that telegram runtimes are tolerated, but an interrupt in the connection is detected quickly enough. → ‘Calculating the F_WD_Time’...page 58 Information on the calculation can be found below. The monitoring time can be specified in steps of 1ms. The possible range of values (20 to 65535 ms) is specified by the device description file (GSD/GSDML).	150

F-parameter	Description	Default
F_iPar_CRC	<p>The <i>F_iPar_CRC</i> parameter specifies a comparison value for the CRC value via the <i>iParameters</i> (<i>iPar_CRC</i>). The PROFIsafe data exchange is only established if the values of the <i>F_iPar_CRC</i> and the <i>iPar_CRC</i> match.</p> <p>After confirming the set parameters, the CRC (<i>iPar-CRC</i>) is calculated and shown by the safety CRC tool.</p> <p>This value must be entered in the F-parameters of the System SLIO safety module via the configuration tool of the safety PLC.</p>	0

Calculating the F_WD_Time

Thus the running PROFIsafe watchdog in the System SLIO safety modules is reset periodically, that this does not release, the following cyclically data flow (circulation of a token) is to be considered:



The time required for this can be regarded as the full circulation time of a token. Thus the minimum PROFIsafe monitoring time to be configured results in:

$$T_{PSTO} = T_{Slave} + T_{BUS} + T_{CI} + T_{BUS} + T_{Slave} + T_{DAT}$$

$$T_{PSTO} = 2 * T_{Slave} + 2 * T_{BUS} + T_{CI} + T_{DAT}$$

Component	Time	Meaning	from
System SLIO safety module	T _{PSTO}	Configured PROFIsafe monitoring time (<i>F_WD_Time</i>)	refer to the formula above
Bus coupler	T _{Slave}	Max. response time of the decentralized peripheral system = max. delay by the bus coupler and the backplane bus	Documentation of the decentralized periphery system (for System SLIO PROFIBUS and PROFINET < 2ms)
Field bus	T _{Bus}	Response time of the field bus	T _{TR} at PROFIBUS res. T _{WD} at PROFINET
With field bus PROFIBUS	T _{TR}	max. target rotation time for the DP master system	Object properties of the DP master system, bus parameters in the HW configuration.
With field bus PROFINET	T _{WD}	threshold monitoring of the PROFINET IO device	Value from the object properties of the PROFINET IO device Tab "IO cycle", in HW config. If there is no threshold monitoring time configured for the IO device, instead of this you can take the given refresh time multiplied with 3. The refresh time can be found in the HW config. at object properties of the PROFINET IO system.
F-PLC / F-Logic	T _{CI}	Configured cycle time the F-runtime group is called	Configured timing (cycle time) for calling the F-runtime group. By processing of higher priority interrupts, by communication load, or by testing and commissioning functions, the distance between the start times can increase. The influence of these factors can be determined from the documentation and configuration of the standard system itself and then added to the value determined here.
System SLIO safety module	T _{DAT}	max. acknowledge time of the F periphery (Device Acknowledgement Time)	8ms

2.12 SDO 4xDC 24V 0.5A - Technical data

Order no.	022-1SD00
Type	SM 022 - Digital output
Module ID	0C81 2E00
Current consumption/power loss	
Current consumption from backplane bus	75 mA
Power loss	1 W
Technical data digital outputs	
Number of outputs	4
Cable length, shielded	1000 m
Cable length, unshielded	600 m
Rated load voltage	DC 24 V
Permitted range	DC 20.4...28.8 V
Current consumption from power section supply (without load)	20 mA
Total current per group, horizontal configuration, 40°C	2 A
Total current per group, horizontal configuration, 60°C	-
Total current per group, vertical configuration	-
Output current at signal "1", rated value	0.5 A
Signal logic output	Sourcing output
Output delay of "0" to "1"	20 µs
Output delay of "1" to "0"	100 µs
Minimum load current	-
Lamp load	5 W
Parallel switching of outputs for redundant control of a load	not possible
Parallel switching of outputs for increased power	not possible
Actuation of digital input	✓
Switching frequency with resistive load	max. 50 Hz
Switching frequency with inductive load	max. 0.5 Hz
Switching frequency on lamp load	max. 10 Hz
Internal limitation of inductive shut-off voltage	L+ (-68 V)
Short-circuit protection of output	yes, electronic
Trigger level	1.7 A
Number of operating cycle of relay outputs	-
Switching capacity of contacts	-
Output data size	4 Bit
Status information, alarms, diagnostics	
Status display	green LED per channel
Interrupts	yes, parameterizable
Process alarm	no
Diagnostic interrupt	yes, parameterizable
Diagnostic functions	yes, parameterizable
Diagnostics information read-out	possible
Supply voltage display	green LED
Group error display	red SF LED
Channel error display	red ERR-LED and yellow ER2-LED
Isolation	
Between channels	-

Response times

Order no.	022-1SD00
Between channels of groups to	-
Between channels and backplane bus	✓
Insulation tested with	DC 500 V
PWM data	
PWM channels	-
PWM time basis	-
Period length	-
Minimum pulse width	-
Type of output	-
Safety	
Safety protocol	PROFIsafe V2.4/2.6
Safety requirements	SIL CL 3, PL e, Kat 4
Secure user address	1 - 4095
Watchdog	parameterizable 1ms - 65535ms
Two channels	Each 2 of 4 outputs switchable
Test pulse length	parameterizable 500µs - 10ms
Circuit monitoring	✓
Datasizes	
Input bytes	5
Output bytes	5
Parameter bytes	44
Diagnostic bytes	20
Housing	
Material	PC / PPE GF10
Mounting	Profile rail 35 mm
Mechanical data	
Dimensions (WxHxD)	12.9 mm x 109 mm x 76.5 mm
Net weight	63 g
Weight including accessories	68 g
Gross weight	84 g
Environmental conditions	
Operating temperature	0 °C to 60 °C
Storage temperature	-40 °C to 70 °C
Certifications	
UL certification	in preparation
KC certification	in preparation
UKCA certification	-
ChinaRoHS certification	yes

2.13 Response times

General

The response times of the System SLIO safety modules are listed below. The response time of the safety modules is included in the calculation of the fail-safe system response time.

Response time safety digital inputs

The response time specifies the time between a signal transition at the digital input and the reliable availability of the safety message frame on the backplane bus.

Response time safety digital outputs

The response time specifies the interval between the receipt of a safety message from the backplane bus and the signal transition at the digital output.

 
Maximum response time of the system

These response times are required for plant design. Hereby you can determine whether the maximum error tolerance time of a process is not exceeded. Here, the following cases are to be distinguished, which are described below:

- Error-free case
- Existing error
- Arbitrary run times at single errors

2.13.1 Error-free case

In error-free case it is assumed that none of the monitoring time is exceeded and the transition of the signal of the input connector of a System SLIO safety IN to the output connector of the safety SLIO OUT is considered:

**Max expected response time in error-free case**

$$T_{\max NF} = T_{E_{GL}} + T_{E_{WCDT}} + T_{E_{Slave}} + T_{E_{BUS}} + T_{C_{CI}} + T_{F_{PROG}} + T_{A_{BUS}} + T_{A_{Slave}} + T_{A_{WCDT}}$$

For plant design sensor and actuator run times are to be taken into account:

$$T_{\max NFSA} = T_{\text{SensorDly}} + T_{\max NF} + T_{\text{ActuatorDly}}$$

2.13.2 Existing error**Possible single errors**

If there is an error it is assumed that a monitoring time is exceeded and a error reaction is released. Possible reasons could be errors of the system, wrong listed run time in the documentation of the standard system or a extension of the calculated value of the run time, by changing the configuration of the standard system. In case of no error the total response time increases by the maximum duration of the possible single errors:

- Discrepancy error in the System SLIO safety SDI. Here, the discrepancy time must be considered in addition: ($T_{E_{DIS}}$)
- A single error occurs in the System SLIO safety SDI. Here the possibly larger max. response time during an error ($T_{E_{OFDT}}$) is to be considered with the max. response time in error-free case ($T_{E_{WCDT}}$): ($T_{E_{OFDT}} - T_{E_{WCDT}}$)
- Once or permanent interrupted communication between System SLIO safety SDI and the safety PLC. Here the PROFIsafe monitoring time of the System SLIO safety SDI and the configured cyclic time of the safety controller must be considered: ($T_{E_{PSTO}} + T_{C_{CI}}$)
- Once or permanent interrupted communication between System SLIO safety SDO and the safety PLC respectively failure of the safety PLC. Here the PROFIsafe monitoring time of the System SLIO safety SDO and Acknowledge time of the System SLIO safety SDO must be considered: ($T_{A_{PSTO}} + T_{A_{DAT}}$)
- A single error occurs in the System SLIO safety SDO. Here the possibly larger max. response time during an error ($T_{E_{OFDT}}$) is to be considered with the max. response time in error free case ($T_{A_{WCDT}}$): ($T_{A_{OFDT}} - T_{A_{WCDT}}$)

Max. response time on error

$$T_{\max OF} = T_{\max NF} + \text{MAX}((T_{E_{DIS}}), (T_{E_{OFDT}} - T_{E_{WCDT}}), (T_{E_{PSTO}} + T_{C_{CI}}), (T_{A_{PSTO}} + T_{A_{DAT}}), (T_{A_{OFDT}} - T_{A_{WCDT}}))$$

For plant design sensor and actuator run times are to be taken into account:

$$T_{\max OFSA} = T_{\text{SensorDLY}} + T_{\max OF} + T_{\text{ActuatorDLY}}$$

Response times > Arbitrary run times at single errors

2.13.3 Arbitrary run times at single errors

Times to be considered

At arbitrary run times of the standard system in addition to an existing error, it is assumed that the values of all the relevant run times lie nearby the limit of the monitored times.

- The max processing time to and in the System SLIO safety SDI:
($T_{EGL} + T_{EDIS} + T_{EWCDT} + T_{EPSTO}$)
- The smallest of the possible monitoring times, from this moment the defined behaviour of an error is:
($\text{MIN}(T_{EPSTO}, T_{CL_MAX}, T_{APSTO})$)
- The max. processing time to and in the System SLIO safety SDO:
($T_{AWCDT} + T_{APSTO}$)
- The possibly increased processing times in case of an error within the System SLIO safety modules, here but only the larger of them, because it is assumed that there is a single error:
($\text{MAX}((T_{EOFDT} - T_{EWCDT}), (T_{AOFDT} - T_{AWCDT}))$)
- For the entire process chain a good PROFIsafe telegram could be sent before to the System SLIO safety SDI or -SDO. Here the largest of the two timeouts must be considered:
($\text{MAX}(T_{EPSTO}, T_{APSTO})$)

Max. response time at arbitrary run times at one error

$$\begin{aligned}
 T_{\max} &= T_{EGL} + T_{EDIS} + T_{EWCDT} + T_{EPSTO} \\
 &+ \text{MIN}(T_{EPSTO}, T_{CL_MAX}, T_{APSTO}) \\
 &+ T_{AWCDT} + T_{APSTO} \\
 &+ \text{MAX}((T_{EOFDT} - T_{EWCDT}), (T_{AOFDT} - T_{AWCDT})) \\
 &+ \text{MAX}(T_{EPSTO}, T_{APSTO})
 \end{aligned}$$

For plant design sensor and actuator run times are to be taken into account:

$$T_{\max SA} = T_{\text{SensorDLY}} + T_{\max} + T_{\text{ActuatorDLY}}$$

2.13.4 Designations

Designations

Abbreviations sorted by components

Components	Time ¹	Description	From
Sensor	$T_{\text{SensorDLY}}$	Delay time of the sensor	Documentation sensor
System SLIO Safety SDI	TE_{GL}	Input smoothing time of the inputs of the SLIO safety SDI	Configuration of the F periphery, matched to the sensor used.
System SLIO Safety SDI	TE_{DIS}	With two-channel evaluation discrepancy time otherwise 0	Configuration of the F periphery, matched to the sensor used.
System SLIO Safety SDI	TE_{WCDDT} TA_{WCDDT}	Max. response time in error-free case (Worst Case Delay Time)	11ms
Safety SDO			
System SLIO Safety SDI	TE_{OFDDT} TA_{OFDDT}	Max. response time at one error (One Fault Delay Time)	11ms
Safety SDO			
System SLIO Safety SDI	TE_{DAT} TA_{DAT}	max. acknowledge time of the F periphery (Device Acknowledgement Time)	8ms
Safety SDO			
System SLIO Safety SDI	TE_{PSTO} TA_{PSTO}	Configured PROFIsafe monitoring time (ProfiSafeTimeOut)	PROFIsafe monitoring time of the HW-config.
Safety SDO			
Bus coupler	TE_{Slave} TA_{Slave}	Max. response time of the decentralized periphery system = max. delay by the coupler and the backplane bus	Documentation of the decentralized periphery system (for System SLIO PROFIBUS and PROFINET < 2ms)
Field bus (PROFIBUS)	TE_{TR} TA_{TR}	Max. target rotation time for the DP master system	Object properties of the DP master system, bus parameters in HW config.
Field bus (PROFINET)	TE_{WD} TA_{WD}	Threshold monitoring time of the PROFINET IO device	<p>Values of the object properties of the PROFINET IO device at tab "IO cycle", in HW configuration.</p> <p>If there is no threshold monitoring time configured for the IO device, instead of this you can take the given refresh time multiplied with 3.</p> <p>The refresh time can be found in the HW config. at object properties of the PROFINET IO system.</p>
F-SPS / F-Logic	T_{CI}	Configured cycle time the F-runtime group is called	<p>Configured timing (cycle time) for calling the F-runtime group.</p> <p>By processing of higher priority interrupts, by communication load, or by testing and commissioning functions, the distance between the start times can increase. The influence of these factors can be determined from the documentation and configuration of the standard system itself and then added to the value determined here.</p>

Compatibility list

Components	Time ¹	Description	From
F-SPS / F-Logic	T _{Cl_MAX}	Cycle monitoring time the F-runtime group is called	Configured monitoring time of the F cycle time (= Parameter "Max. cycle time of the F-runtime in ms" in the dialog "F-Runtime groups")
F-SPS / F-Logik	T _{FPROG}	Run time of the F-runtime group (of the safety program)	max. runtime of the F-runtime group
Actuator	T _{ActuatorDLY}	Delay time of the actuator	Documentation of the actuator
Entire inputs, outputs	T _{maxNF}	Response time in error-free case (maxNoFault)	Refer to the formula → 'Error-free case'...page 61
Entire sensors, actuator	T _{maxNFSA}	Response time in error free case (maxNoFaultSensorAktor)	
Entire inputs, outputs	T _{maxOF}	Response time at one error (maxOneFault)	Refer to the formula → 'Existing error'...page 61
Entire sensors, actuators	T _{maxOFSA}	Response time at one error (maxOneFaultSensorAktor)	
Entire inputs, outputs	T _{max}	Response time at one error (maxOneFault)	
Entire sensors, actuators	T _{maxSA}	Response time at one error (maxOneFaultSensorAktor)	Refer to the formula → 'Arbitrary run times at single errors'...page 62

1) "E" or "A" behind "T" corresponds input or output.

2.14 Compatibility list

Sensors

The System SLIO safety input module was successfully tested with the following sensors:

- SICK L41S-11MA1A Single-beam photoelectric safety switch
- SICK ES21-SA10E1 Emergency stop pushbutton
- SICK i10-PA213 Safety position switch
- SICK miniTwin4 Safety light curtain
- SICK T4000-E0101K Safety switch

Actuators

The System SLIO safety output module was successfully tested with the following actuators:

- Pilz Safety switch device PNOZ X2.7P



You can also use sensors and actuators from other producers, which have the properties suitable for the application and the corresponding type examination.

Controllers

The System SLIO safety input and output modules were successfully tested with the following controller:

- Siemens CPU 1510SP F-1 PN (6ES7 510-1SK03-0AB0, FW 4.0)

3 Deployment

3.1 Planning of a safety-related control system

General

In the planning phase the complete definition of the safety function(s) takes place. Besides the risk evaluation the planning contains the detailed definition of all system components, the definition of the system parameters, the detailed installation and wiring of the components.



DANGER

A careful executed planning serves for avoidance of errors. Errors in safety-related machines can lead to irreversible injuries and to death.



CAUTION

In the phase of planning the "Check list planning" is to be used. → ['Checklist planning'...page 145](#)

Risk evaluation

The risk evaluation shows the risk, which can come from a machine and which plant components must be equipped with safety equipment. Due to the safety measures the residual risk is reduced to an acceptable level.



CAUTION


As a manufacturer of machine you are obliged under the machinery directive to execute a risk evaluation to identify all hazards associated with the machine and reduce the residual risk to an acceptable minimum.



CAUTION

The risk evaluation must necessarily be conducted in the planning phase and before realization and conversion works.

Sequence of a risk evaluation in accordance to DIN EN ISO 12100-1 and EN ISO 14121

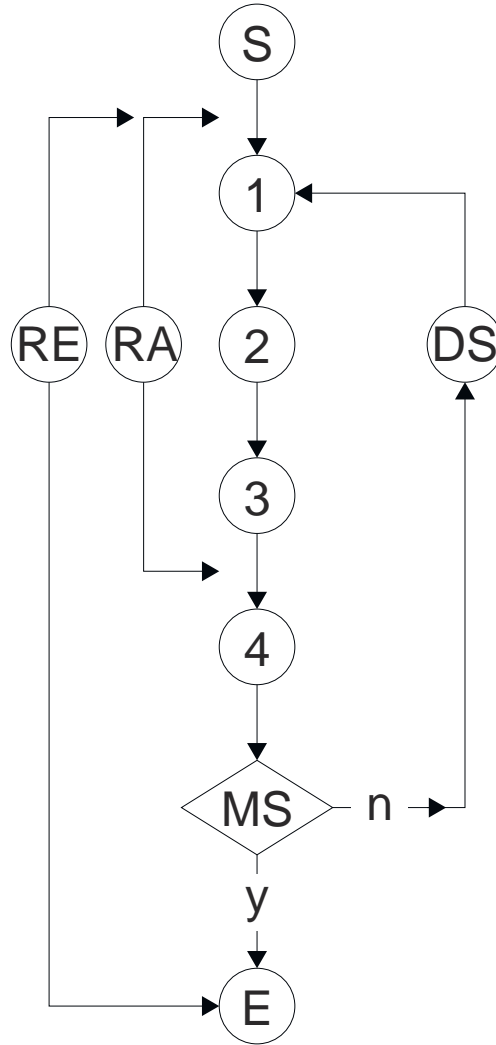

- S Start of the risk evaluation
- 1 Delimitation of the system
- 2 Hazard analysis
- 3 Risk estimation
- 4 Risk evaluation
- RE Risk evaluation
- RA Risk analysis
- DS Definition safety function
- MS Machine sufficiently safe?
- y yes
- n no
- E End

Installation and wiring diagram

In the phase of planning an installation and a wiring diagram for the total safety system are to be created. It contains all system components and their wiring.



CAUTION

Please consider a separation of voltage ranges higher than extra-low voltage in the installation and wiring diagram for the exclusion of cross- or short circuits to potentials > 60V.

This can be achieved for the System SLIO by a separate installation and appropriate isolation.

With the production of the wiring diagram valid standards and guidelines are to be considered for the proper installation of lines.

Determining the device parameters

The available safety parameters can be found in the chapter "Product description" → *'Product description'...page 25*.

The parameters of further standard modules can be found in the according user manual.

**CAUTION**

In the phase of planning a list of parameters to be adjusted is to be created with a determination of the individual parameters and their verification.

Sequence of the phase of planning

The system is planned according to the respective need of the plant or machine. The components available for the control technology are more described at "Installation" further down. Before the commissioning of a module the following must be checked and ensured:

- Compatibility of the modules (→ *'Compatibility list'...page 64* and technical data).
- Sufficient supply of the control system by attached power supplies, respectively attached safety components.

3.2 Industrial security in information technology

Latest version

This chapter can also be found as a guide *'Industrial IT Security'* in the *'Download Center'* of www.yaskawa.eu.com

Hazards

The topic of data security and access protection has become increasingly important in the industrial environment. The increased networking of entire industrial systems to the network levels within the company together with the functions of remote maintenance have all served to increase vulnerability. Hazards can arise from:

- Internal manipulation such as technical errors, operating and program errors and deliberate program or data manipulation.
- External manipulation such as software viruses, worms and trojans.
- Human carelessness such as password phishing.

Precautions

The most important precautions to prevent manipulation and loss of data security in the industrial environment are:

- Encrypting the data traffic by means of certificates.
- Filtering and inspection of the traffic by means of VPN - "Virtual Private Networks".
- Identification of the user by "Authentication" via save channels.
- Segmenting in protected automation cells, so that only devices in the same group can exchange data.
- Deactivation of unnecessary hardware and software.

Further Information

You can find more information about the measures on the following websites:

- Federal Office for Information Technology → www.bsi.bund.de
- Cybersecurity & Infrastructure Security Agency → us-cert.cisa.gov
- VDI / VDE Society for Measurement and Automation Technology → www.vdi.de

3.2.1 Protection of hardware and applications

Precautions

- Do not integrate any components or systems into public networks.
 - Use VPN "Virtual Private Networks" for use in public networks. This allows you to control and filter the data traffic accordingly.
- Always keep your system up-to-date.
 - Always use the latest firmware version for all devices.
 - Update your user software regularly.
- Protect your systems with a firewall.
 - The firewall protects your infrastructure internally and externally.
 - This allows you to segment your network and isolate entire areas.
- Secure access to your plants via user accounts.
 - If possible, use a central user management system.
 - Create a user account for each user for whom authorization is essential.
 - Always keep user accounts up-to-date and deactivate unused user accounts.
- Secure access to your plants via secure passwords.
 - Change the password of a standard login after the first start.
 - Use strong passwords consisting of upper/lower case, numbers and special characters. The use of a password generator or manager is recommended.
 - Change the passwords according to the rules and guidelines that apply to your application.
- Deactivate inactive communication ports respectively protocols.
 - Only the communication ports that are used for communication should be activated.
 - Only the communication protocols that are used for communication should be activated.
- Consider possible defence strategies when planning and securing the system.
 - The isolation of components alone is not sufficient for comprehensive protection. An overall concept is to be drawn up here, which also provides defensive measures in the event of a cyber attack.
 - Periodically carry out threat assessments. Among others, a comparison is made here between the protective measures taken and those required.
- Limit the use of external storage media.
 - Via external storage media such as USB memory sticks or SD memory cards, malware can get directly into a system while bypassing a firewall.
 - External storage media or their slots must be protected against unauthorized physical access, e.g. by using a lockable control cabinet.
 - Make sure that only authorized persons have access.
 - When disposing of storage media, make sure that they are safely destroyed.
- Use secure access paths such as HTTPS or VPN for remote access to your plant.
- Enable security-related event logging in accordance with the applicable security policy and legal requirements for data protection.

3.2.2 Protection of PC-based software

Precautions

Since PC-based software is used for programming, configuration and monitoring, it can also be used to manipulate entire systems or individual components. Particular caution is required here!

- Use user accounts on your PC systems.
 - If possible, use a central user management system.
 - Create a user account for each user for whom authorization is essential.
 - Always keep user accounts up-to-date and deactivate unused user accounts.
- Protect your PC systems with secure passwords.
 - Change the password of a standard login after the first start.
 - Use strong passwords consisting of upper/lower case, numbers and special characters. The use of a password generator or manager is recommended.
 - Change the passwords according to the rules and guidelines that apply to your application.
- Enable security-related event logging in accordance with the applicable security policy and legal requirements for data protection.
- Protect your PC systems by security software.
 - Install virus scanners on your PC systems to identify viruses, trojans and other malware.
 - Install software that can detect phishing attacks and actively prevent them.
- Always keep your software up-to-date.
 - Update your operating system regularly.
 - Update your software regularly.
- Make regular backups and store the media at a safe place.
- Regularly restart your PC systems. Only boot from storage media that are protected against manipulation.
- Use encryption systems on your storage media.
- Perform security assessments regularly to reduce the risk of manipulation.
- Use only data and software from approved sources.
- Uninstall software which is not used.
- Disable unused services.
- Activate a password-protected screen lock on your PC systems.
- Always lock your PC systems as soon as you leave your PC workstation.
- Do not click any links that come from unknown sources. If necessary ask, e.g. on e-mails.
- Use secure access paths such as HTTPS or VPN for remote access to your PC system.

3.3 Installation guidelines

General

The installation guidelines contain information about the interference free deployment of the System SLIO. There is the description of the ways, interference may occur in your PLC, how you can make sure the electromagnetic compatibility (EMC), and how you manage the isolation.

What does EMC mean?

Electromagnetic compatibility (EMC) means the ability of an electrical device, to function error free in an electromagnetic environment without being interfered respectively without interfering the environment.

All System SLIO components are developed for the deployment in industrial environments and meets high demands on the EMC. Nevertheless you should project an EMC planning before installing the components and take conceivable interference causes into account.

Possible interference causes

Electromagnetic interferences may interfere your control via different ways:

- Electromagnetic fields (RF coupling)
- Magnetic fields with power frequency
- Bus system
- Power supply
- Protected earth conductor

Depending on the spreading medium (lead bound or lead free) and the distance to the interference cause, interferences to your control occur by means of different coupling mechanisms.

There are:

- galvanic coupling
- capacitive coupling
- inductive coupling
- radiant coupling

Basic rules for EMC

In the most times it is enough to take care of some elementary rules to guarantee the EMC. Please regard the following basic rules when installing your PLC.

- Take care of a correct area-wide grounding of the inactive metal parts when installing your components.
 - Install a central connection between the ground and the protected earth conductor system.
 - Connect all inactive metal extensive and impedance-low.
 - Please try not to use aluminium parts. Aluminium is easily oxidizing and is therefore less suitable for grounding.
- When cabling, take care of the correct line routing.
 - Organize your cabling in line groups (high voltage, current supply, signal and data lines).
 - Always lay your high voltage lines and signal respectively data lines in separate channels or bundles.
 - Route the signal and data lines as near as possible beside ground areas (e.g. suspension bars, metal rails, tin cabinet).
- Proof the correct fixing of the lead isolation. → [‘Isolation of conductors’...page 71](#)
 - Data lines must be laid isolated.
 - Analog lines must be laid isolated. When transmitting signals with small amplitudes the one sided laying of the isolation may be favourable.
 - Lay the line isolation extensively on an isolation/protected earth conductor rail directly after the cabinet entry and fix the isolation with cable clamps.
 - Make sure that the isolation/protected earth conductor rail is connected impedance-low with the cabinet.
 - Use metallic or metallised plug cases for isolated data lines.
- In special use cases you should appoint special EMC actions.
 - Consider to wire all inductivities with erase links.
 - For lightening cabinets you should avoid luminescent lamps.
- Create a homogeneous reference potential and ground all electrical operating supplies when possible.
 - Please take care for the targeted employment of the grounding actions. The grounding of the PLC serves for protection and functionality activity.
 - Connect installation parts and cabinets with the System SLIO in star topology with the isolation/protected earth conductor system. So you avoid ground loops.
 - If there are potential differences between installation parts and cabinets, lay sufficiently dimensioned potential compensation lines.

Isolation of conductors

Electrical, magnetically and electromagnetic interference fields are weakened by means of an isolation, one talks of absorption. Via the isolation rail, that is connected conductive with the rack, interference currents are shunt via cable isolation to the ground. Here you have to make sure, that the connection to the protected earth conductor is impedance-low, because otherwise the interference currents may appear as interference cause.

When isolating cables you have to regard the following:

- If possible, use only cables with isolation tangle.
- The hiding power of the isolation should be higher than 80%.
- Normally you should always lay the isolation of cables on both sides. Only by means of the both-sided connection of the isolation you achieve high quality interference suppression in the higher frequency area. Only as exception you may also lay the isolation one-sided. Then you only achieve the absorption of the lower frequencies. A one-sided isolation connection may be convenient, if:
 - the conduction of a potential compensating line is not possible.
 - analog signals (some mV respectively μA) are transferred.
 - foil isolations (static isolations) are used.
- With data lines always use metallic or metallised plugs for serial couplings. Fix the isolation of the data line at the plug rack. Do not lay the isolation on the PIN 1 of the plug bar!
- At stationary operation it is convenient to strip the insulated cable interruption free and lay it on the isolation/protected earth conductor line.
- To fix the isolation tangles use cable clamps out of metal. The clamps must clasp the isolation extensively and have well contact.
- Lay the isolation on an isolation rail directly after the entry of the cable in the cabinet. Lead the isolation further on to the System SLIO module and don't lay it on there again!



CAUTION

Please regard at installation!


At potential differences between the grounding points, there may be a compensation current via the isolation connected at both sides.

Remedy: Potential compensation line

3.4 Setting the F-address

Address switch for F-address

The F-address respectively "Secure user address" is to be configured by the F-address switch at the safety module and additionally in the master system e.g. hardware configurator. The F-address is to be set by the F-address switch besides on the safety module. Only if the F-address set in the hardware configurator accords to the setting of the F-address switch, it is possible to operate!

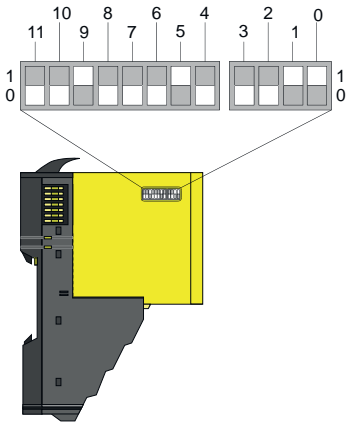

Pos	Value	Example	
		State	Address
0	1	1	$1+2+32+512=547$ Address: 547 Address range: 1 ... 4095
1	2	1	
2	4	0	
3	8	0	
4	16	0	
5	32	1	
6	64	0	
7	128	0	
8	256	0	
9	512	1	
10	1024	0	
11	2048	0	



The F-address switch is not accessible when safety module is plugged!

To set the F-address on the safety module the (electronic) module is to be demounted before as described at "Demounting and module exchange".
 → 'Demounting and module exchange'...page 82



The PROFIsafe modules 02x-1SD00 exclusively support 'FSCP 3/1 Address Type 1'.

- FSCP 3/1 Address Type 1
 - The uniqueness of the connection is primarily ensured by the F-address.
 - The receiver checks whether the destination address stored in the F-parameter configuration matches the address received in the telegram.

- **Before setting take the field bus coupler of circuit!**
- **F-address must be unique!**
 - F-addresses from 1 to 4095 may be set.
 - Each F-address must be unique in the communication network of the safety PLC!
- **Only use suitable tools for the setting!**
 - The switching elements of the F-address switch must be set only with a suitable tool like a screwdriver or a clockmaker.
 - In no case should pressure be exerted on the switching elements.
- **Setting the F-address via safety parameter dialog**
 - In addition the F-address setting of the F-address switch must be configured by the safety parameter dialog of the master system.

3.4.1 Changing the F-address

The following 2 steps are required to change the F-address:

- Changing an existing F-address at the module
- Changing the F-address in the hardware configuration



For this please consider the hints below at "Demounting and module exchange". → ['Demounting and module exchange'...page 82](#)

3.4.1.1 Changing an existing F-address at the module

If you want to change the F-address of a System SLIO module, which just operates with a valid configuration, there are the following options to initiate the change process:

- At the module by means of the F-address switch
- Start the Siemens SIMATIC Manager.

At the module via the F-address switch

With the following approach the System SLIO safety module is to be powered off and to demounted.

- 1.** Switch off the DC 24V power supply of your System SLIO safety module.
- 2.** Demount the System SLIO safety module.
- 3.** Switch all the DIP switches of the F-address switch to 0 position.
- 4.** Mount the System SLIO safety module.
- 5.** Switch on the DC 24V power supply for the System SLIO safety module.
- 6.** Please wait for about 5s and switch the DC 24V power supply for the System SLIO module off again. Hereby the internal F-address memory of the System SLIO safety module is cleared.
- 7.** Demount the System SLIO safety module.
- 8.** Switch the F-address switch to the wished F-address.
- 9.** Mount the System SLIO safety module.
- 10.** Switch on again the DC 24V power supply for the System SLIO safety module.

Online via the Siemens SIMATIC Manager

With the following approach the System SLIO safety module is to be powered off and to demounted.

1. Switch off the DC 24V power supply of your System SLIO safety module.
2. Demount the System SLIO safety module.
3. Switch the F-address switch to the wished F-address.
4. Mount the System SLIO safety module.
5. Switch on the DC 24V power supply for the System SLIO safety module.
6. Start the Siemens SIMATIC Manager with your project.
7. Open in the Siemens hardware configurator by a double-click to the properties dialog of your System SLIO safety module.
8. Set the parameter *Parameter change mode*.
9. Close the Siemens properties dialog.
10. For the validation of the parameters, click at the System SLIO safety module and choose *'context menu → Start device tool → ... Safety CRC-Tool'*.
11. Examine the validation. Here the re-generation of the safety program is not necessary. → ['Deployment with PROFIBUS'...page 105](#), → ['Deployment with PROFINET'...page 110](#)
12. Translate and transfer your project to your CPU.
13. Re-open the properties dialog of the System SLIO safety module and reset the parameter *parameter change mode*.
14. Examine the validation with re-generation of the safety program. This always includes the verification of the F-address of the module, which is set by the DIP switches.
15. Translate and transfer your project to your CPU.

3.4.1.2 Changing the F-address in the hardware configuration

For the following approach, it is assumed that the wished F-address is set and the System SLIO safety module is mounted.

1. Open the hardware configuration with your project.
2. Open the properties dialog of the System SLIO safety module, whose address you want to change.
3. Switch to the tab *'PROFIsafe'*.
4. Enter at *'F_Dest_Add'* your F-address.
5. Close the properties dialog with [OK]. Save and translate your hardware project and transfer it into your CPU. Then you can close the hardware configurator.
6. Open in the Siemens SIMATIC Manager the dialog *'Edit safety program'*. "Generate" your safety program and "upload" it into your CPU.
 - ➔ The program is now executable with the new F-address.

3.5 Grounding concept

Grounding guidelines

For reliable grounding, ensure that all common ground connections and the functional earth (FE) of your System SLIO and all connected devices are connected to a central point and grounded there.



NOTICE

To ensure EMC, the profile rail must be grounded!

- Ensure that the profile rail is reliably and professionally grounded.
- By mounting them on the grounded profile rail, the modules are automatically connected to the grounding system.


→ ['Installation guidelines'...page 69](#)

- To avoid potential differences, use grounding cables that are as short as possible and have a large cross-section.
- When selecting grounding points, observe the applicable safety regulations.
- When assembling your components, ensure that the inactive metal parts are properly grounded over a large area.
 - Connect all inactive metal parts over a large area and with low impedance.
 - Avoid using aluminium parts if possible. Aluminium is easily oxidizing and is therefore less suitable for grounding.

3.5.1 Shielding

Overview


Shielding is required for interference-free signal transmission. This weakens electrical, magnetic or electromagnetic interference fields. To attach the shield the mounting of shield bus carriers are necessary. The shield bus carrier (available as accessory) serves to carry the shield bus to connect cable shields. → ['Installation guidelines'...page 69](#)

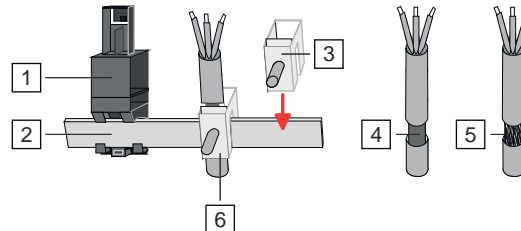


- 1 Shield bus carrier
- 2 Shield bus (10mm x 3mm)
- 3 Shield clamp
- 4 Cable shield with metal foil
- 5 Cable shield with wire mesh (close-meshed)
- 6 Cable shield mounted with shield clamp

Shield attachment

1. → System SLIO head and 8x periphery modules have a carrier hole for the shield bus carrier. Push the shield bus carrier, until they engage into the module. With a flat profile rail for adaptation to a flat profile rail you may remove the spacer of the shield bus carrier.
2. → Put your shield bus into the shield bus carrier.

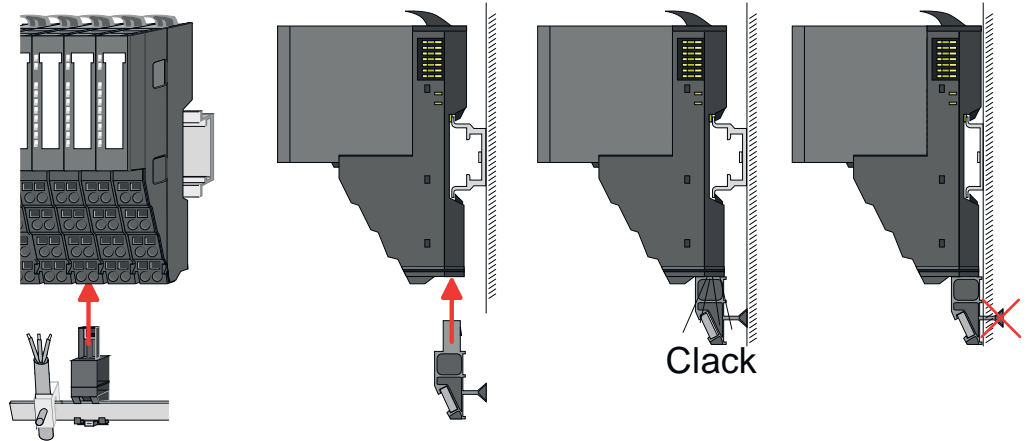

3. → Attach the cables with the accordingly stripped cable screen and fix it by the shield clamp with the shield bus.
4. → The shield bus must always be grounded. Keep all cable connections as short as possible. To ground the shield bus, connect a FE conductor to the shield bus via a shield clamp and screw it to the base plate as close as possible and with low impedance.

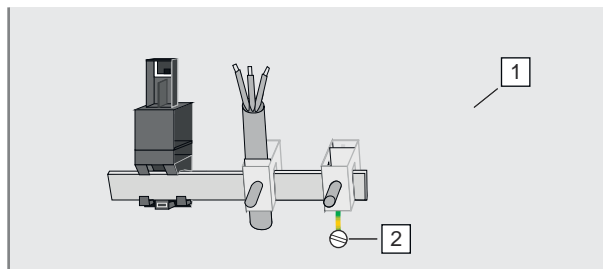

- 1 Base plate
- 2 FE conductor screwed to base plate

3.6 Mounting



CAUTION

In the phase of installation the "Check list Installation" of the appendix is to be used. → ['Checklist installation'...page 146](#)

- Make sure that the installation is complete in accordance with the installation and wiring plan.
- Make sure that you bring a supply voltage separation in the wiring in accordance to SELV / PELV.
- After the installation make a visual inspection and check all components for visible damages.
- Check the system for wiring errors.
- Check the tensile strength of the electrical terminal and screw connections.
- Ensure the installation and wiring in accordance to valid standards and guidelines.
- Make sure that the environmental characteristics of the system, which are described in chapter 2, are not exceeded. → ['SDI 4xDC 24V - Technical data'...page 45](#), → ['SDO 4xDC 24V 0.5A - Technical data'...page 59](#)
- Make sure that the type of safety system is sufficient.
- Make sure that the safety system will not be damaged by moving parts or working in the environment of the installed safety components.
- Make sure that the system components do not get in contact to aggressive media (e.g. acid, leaches, gear oil).

3.6.1 Requirements to the operating personnel

Qualified personnel are persons who, based on their education, experiences, instructions about valid standards and regulations, accident prevention regulations and operation conditions, are authorized by the plant safety executive manager to execute the required actions and to recognize and avoid potential hazards. The required qualifications for this duty are e.g.:

- Training or instruction in accordance with the standards of the safety engineering in care and use of appropriate safety equipment.



DANGER


Risk of life by electrical current!

Devices and the environment in the switch gear cabinet can remain at dangerous potentials.


- For this before you start with work make sure that the device and the environment are off circuit.
- Observe the relevant safety regulations when handling with high-voltage devices.
- Make sure that only qualified personnel installs this module.

3.6.2 Functional principle

There is a locking lever at the top side of the terminal module. For mounting and demounting this locking lever is to be turned upwards until this engages audible. For mounting plug the module to the module installed before and push the module to the mounting rail guided by the strips at the upper and lower side of the module. The module is fixed to the mounting rail by pushing downward the locking lever. The modules may either separately be mounted to the mounting rail or as block. Here is to be considered that each locking lever is opened.

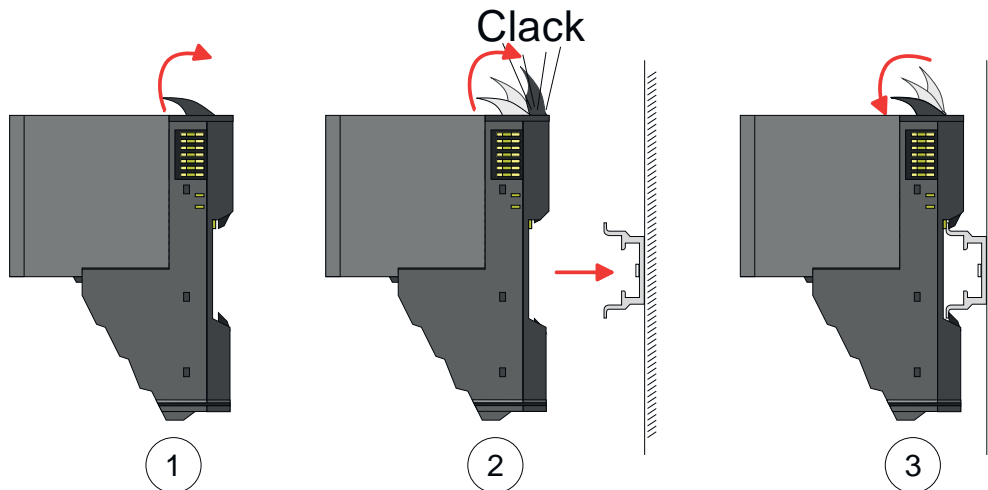

For the exchange of a electronic module, the electronic module may be pulled forward after pressing the unlocking lever at the lower side of the module. For installation plug the electronic module guided by the strips at the lower side until this engages audible to the terminal module.

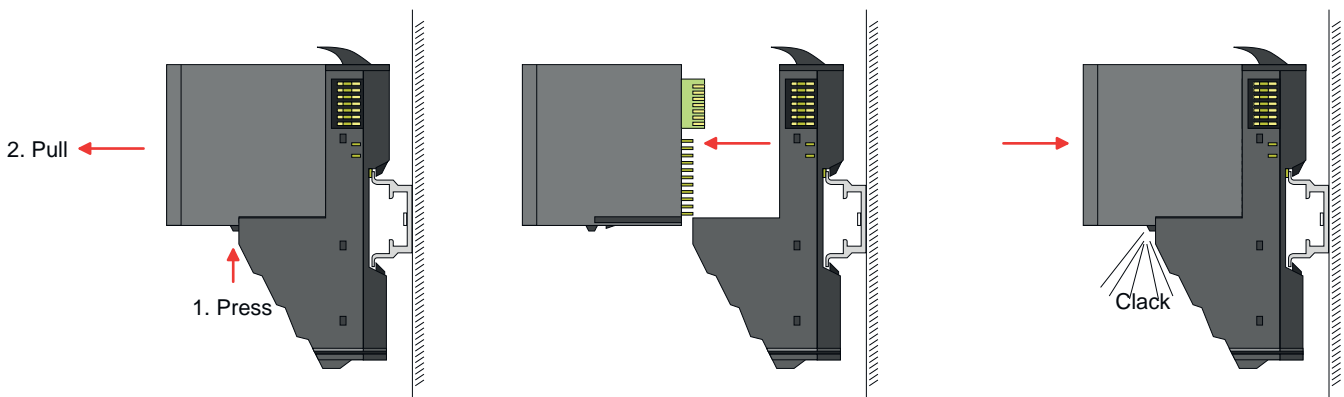


3.6.3 Mounting Proceeding


The modules were directly be mounted to the mounting rail and so connected to the backplane bus and the power supply for the electronic and power section. Up to 64 modules may be mounted. Please consider here that the sum current of the electronic power supply does not exceed the maximum value of 3A. By means of the power module 007-1AB10 the current of the electronic power supply may be expanded with 2A. More about this may be found at "Wiring". → ['Wiring'...page 86](#)

Possibilities

Horizontal hanging or lying

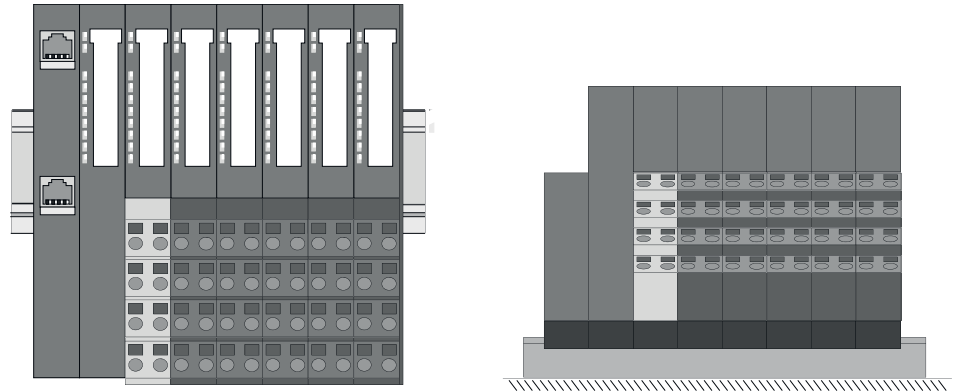


Mounting mounting rail

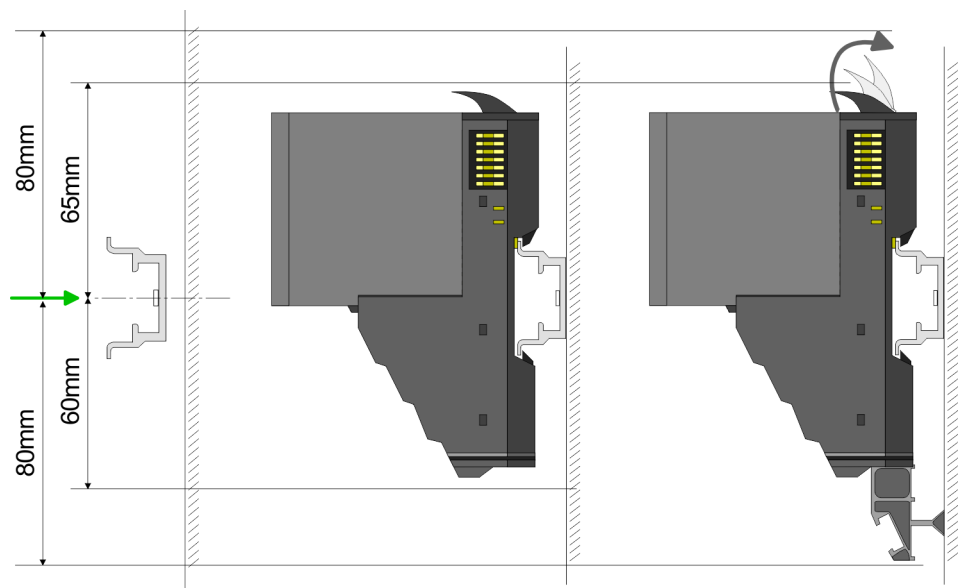


- Mount the mounting rail! Please consider that a clearance from the middle of the mounting rail of at least 80mm above and 60mm below, respectively 80mm by deployment of shield bus carriers, exist.

Mounting head module (e.g. bus coupler)

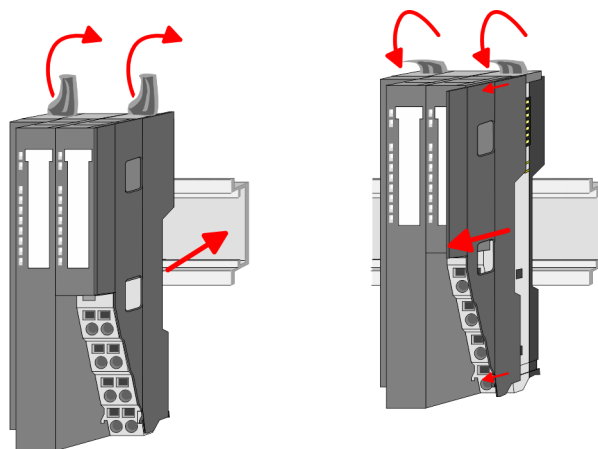

1. → Start at the left side with the head module (e.g. bus coupler). For this turn both locking lever upwards, put the head module to the mounting rail and turn both locking lever downward.
2. → Before mounting the periphery modules you have to remove the bus cover at the right side of the Head module by pulling it forward. Keep the cover for later mounting.


Mounting periphery modules

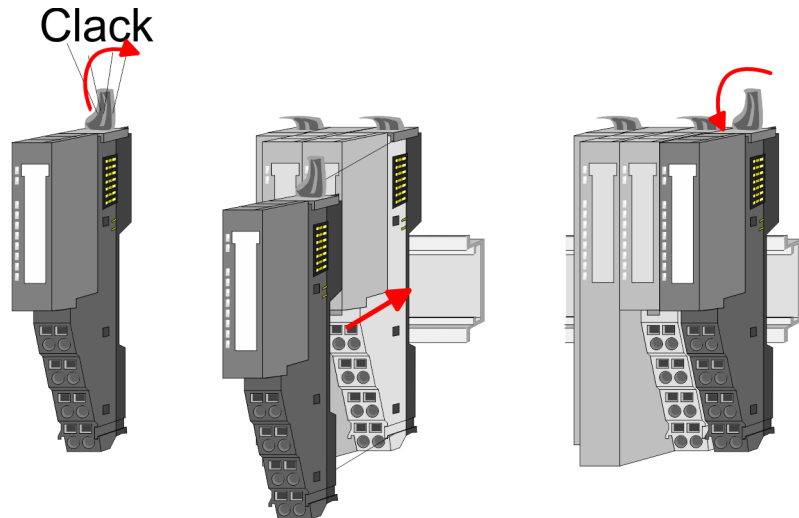


➔ Mount the periphery modules you want.

Characteristics when installing System SLIO safety modules


- Please consider when planning with System SLIO safety modules that you may not install a System SLIO safety module before and or behind System SLIO clamp modules!

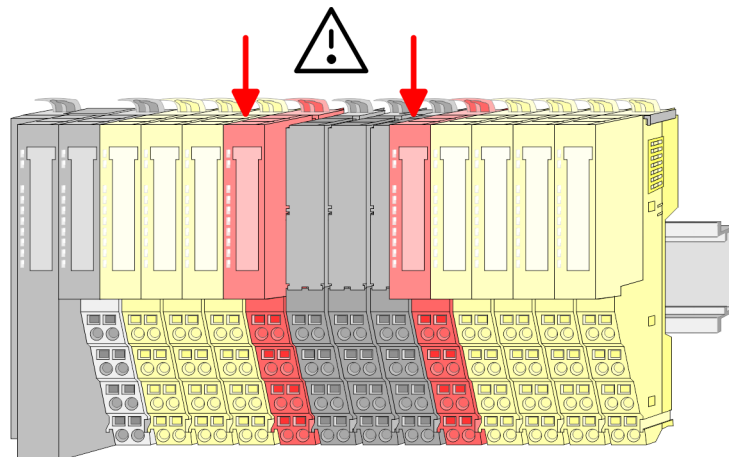

- Please consider when planning with System SLIO safety modules that you may not install a System SLIO safety module behind a slave extension module of the System SLIO line extension!

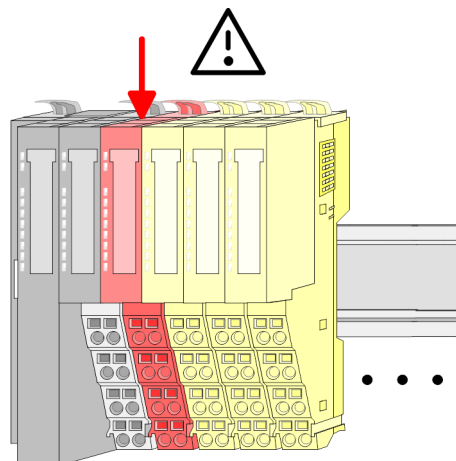


Mounting the bus cover at a peripheral module

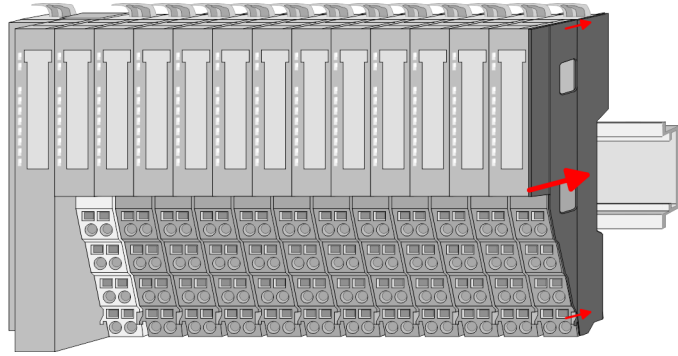


- After mounting the whole system, to protect the backplane bus connectors at the last module you have to mount the bus cover, now.

Mounting the bus cover at a clamp module

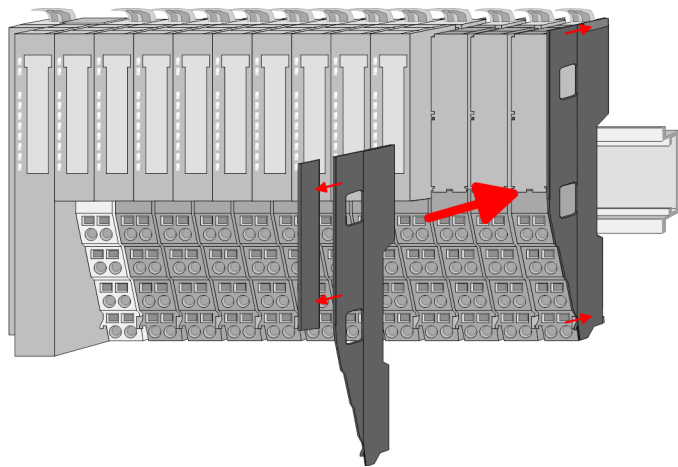

- If the last module is a clamp module, for adaptation the upper part of the bus cover is to be removed.

Mounting shield bus carrier

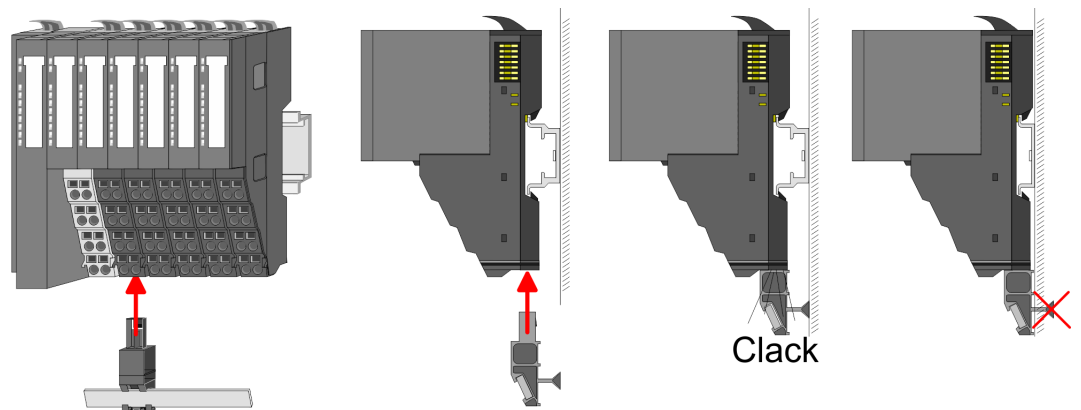

- The shield bus carrier (available as accessory) serves to carry the shield bus to connect cable shields. The shield bus carrier is mounted underneath the terminal of the terminal module. With a flat mounting rail for adaptation to a flat mounting rail you may remove the spacer of the shield bus carrier.

3.7 Demounting and module exchange

A defective module must be replaced immediately.




CAUTION

- Demounting respectively module exchange may be performed only by authorized and qualified personnel.
- A defective System SLIO safety module may only be replaced by a System SLIO safety module with the same order number respectively by a module of the compatibility list, which is under construction.
- After the module exchange a complete function test inclusive verification and validation for the system must be accomplished. This should accordingly be documented.
- Proceed with the function test accordingly carefully, since you may reckon that after the module exchange there is an incorrect behavior of the machine respectively plant.
- Defective modules must be labelled as defective and should be sent back to Yaskawa. A re-use is absolutely prevented by measures within the quality management with the user.

3.7.1 Proceeding

With demounting and exchange of a module, head module (e.g. bus coupler) or a group of modules for mounting reasons you have always to remove the electronic module of the just mounted right module. After the mounting it may be plugged again.


Exchange of an electronic module

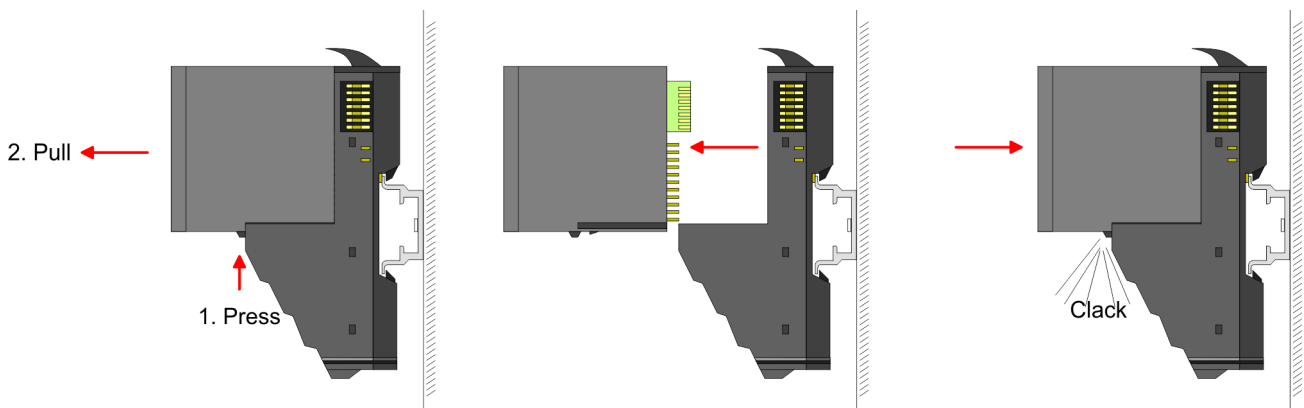


1. For the exchange of an electronic module, the electronic module may be pulled forward after pressing the unlocking lever at the lower side of the module.
2. To exchange a System SLIO safety module read the F-address of the address switch of the module to be changed and take these settings for the replacement module.
3. For installation plug the electronic module guided by the strips at the lower side until this engages audible to the terminal module.

Exchange of a module

1. → Remove if exists the wiring at the module. → ['Wiring'...page 86](#)

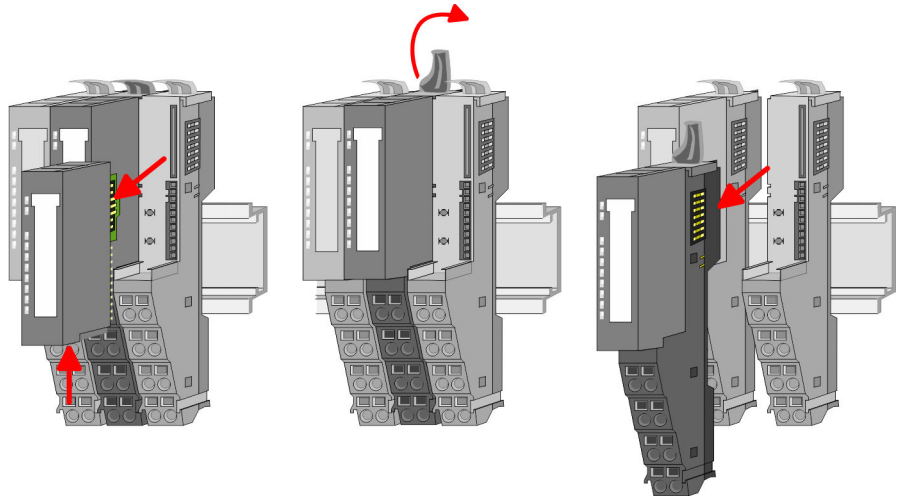

2. → Press the unlocking lever at the lower side of the just mounted right module and pull it forward.
 3. → Turn the locking lever of the module to be exchanged upwards.
 4. → Pull the module forward.

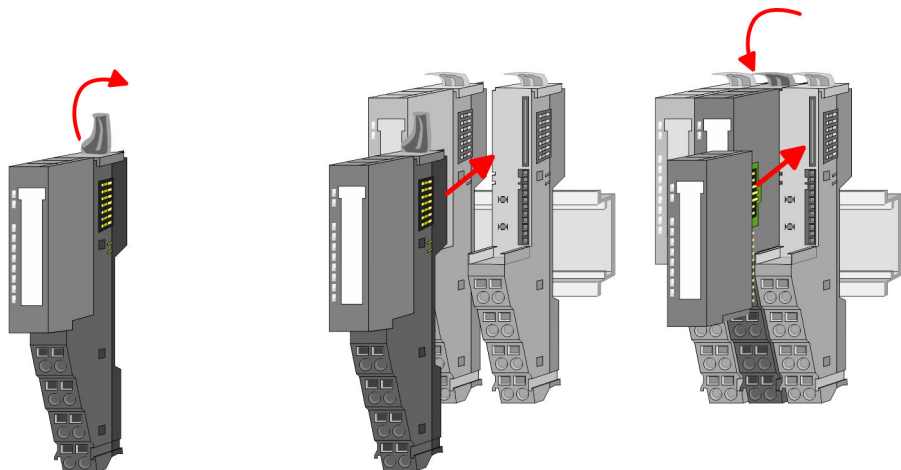

5. → For mounting turn the locking lever of the module to be mounted upwards.
 6. → To mount the module put it to the gap between the both modules and push it, guided by the stripes at both sides, to the mounting rail.
 7. → Turn the locking lever downward again.
 8. → Plug again the electronic module, which you have removed before.


Exchange of a head module (e.g. bus coupler)




CAUTION

Bus interface and power module of a head module may not be separated!
Here you may only exchange the electronic module!

1. Remove if exists the wiring of the head module. → ['Wiring'...page 86](#)

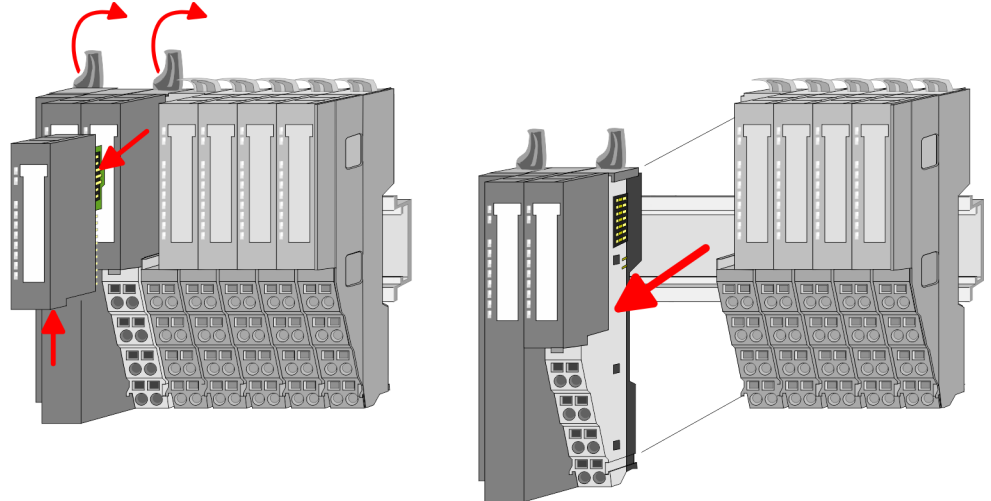


2. Press the unlocking lever at the lower side of the just mounted right module and pull it forward.
3. Turn all the locking lever of the head module to be exchanged upwards.
4. Pull the head module forward.

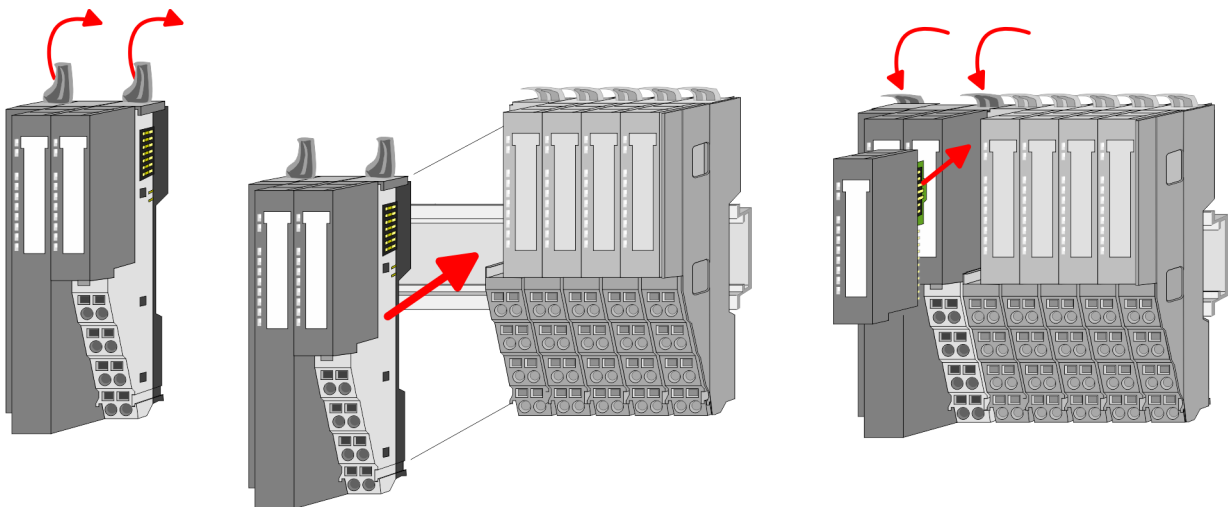


5. For mounting turn all the locking lever of the head module to be mounted upwards.
6. To mount the head module put it to the left module and push it, guided by the stripes, to the mounting rail.
7. Turn all the locking lever downward again.
8. Plug again the electronic module, which you have removed before.

Exchange of a module group

1. → Remove if exists the wiring of the module group. → *'Wiring'...page 86*

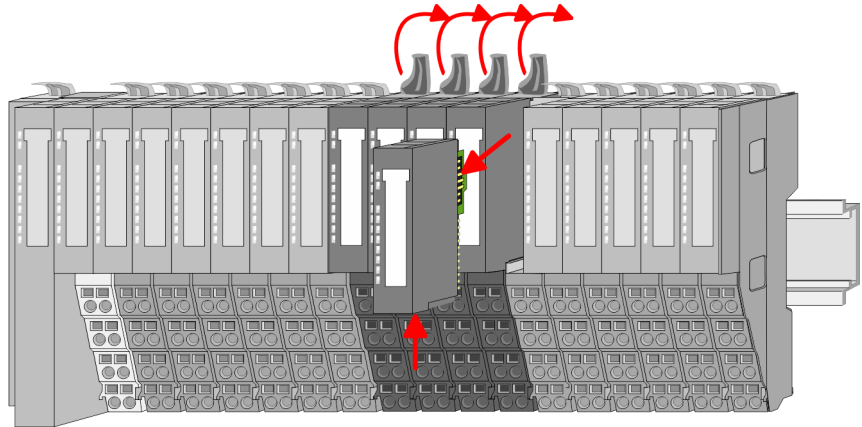


2. → Press the unlocking lever at the lower side of the just mounted right module of the module group and pull it forward.

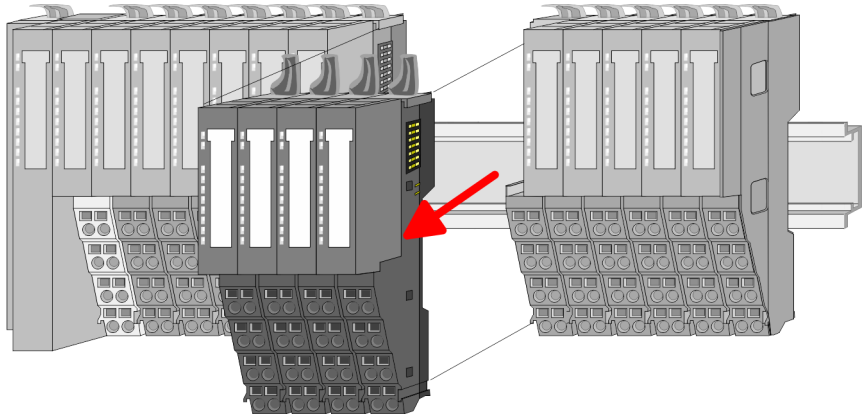


3. → Turn all the locking lever of the module group to be exchanged upwards.

4. → Pull the module group forward.

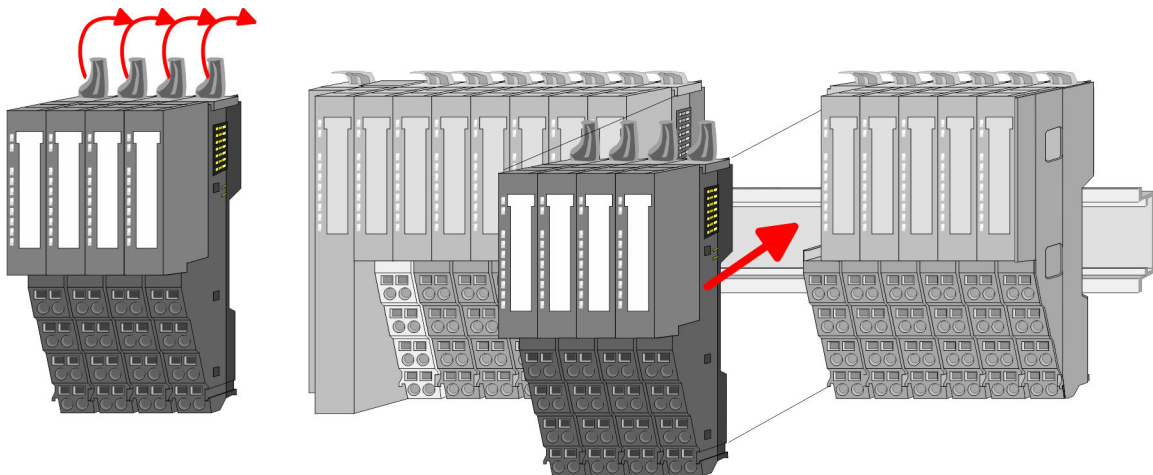

5. → For mounting turn all the locking lever of the module group to be mounted upwards.

6. → To mount the module group put it to the gap between the both modules and push it, guided by the stripes at both sides, to the mounting rail.

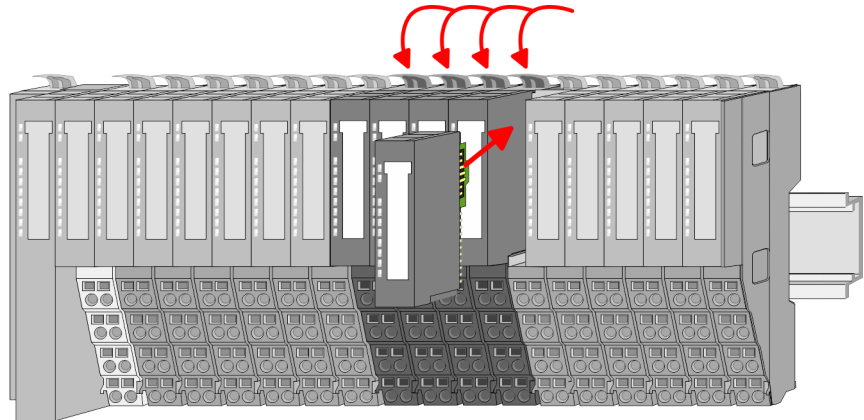

7. Turn all the locking lever downward again.
8. Plug again the electronic module, which you have removed before.

3.8 Wiring

Requirements on the electrical connection

To be able to fulfil the standard EN 60 204-1 (electrical equipment of machines), you have to use the cables, which are suggested there. The connectors may not drop away, otherwise the risk of short-cuts, external voltages etc. exists.

Pay attention to a EMC-compatible installation of the cables.



CAUTION

Danger by electrical current!

The module can be destroyed/damaged, if you do not ensure the requirements for the electrical connection of the module.

- Make sure that the connected loads specified in the technical data are kept and that the connections are made in accordance with the specifications.
- Prevent a short-circuit between inputs and outputs. In the case of a short-circuit between inputs and outputs the electronic module can be destroyed.



CAUTION

Please regard in particular that electromechanical sensors (safety switch-gears) are supplied with suitable clock pulses for short circuit detection.

Electromechanical switches must correspond to the requirements in accordance with IEC 60947-5-1.

Requirement to the power supply

For the adherence to the NAMUR recommendation NE 21 IEC 61131-2 and EN 298 you have to use power supply units (AC 230V / DC 24V) with a mains buffering of at least 20ms.



WARNING

Risk of injury by electric current!

There may only devices be connected to the controller, which have a safe separation of the 230V power.

The power supply to generate 24V power must correspond to the requirements for PELV according to EN 60204-1.

Terminals

Terminals with spring clamp technology are used for wiring. The spring clamp technology allows quick and easy connection of your signal and supply lines.

In contrast to screw terminal connections this type of connection is vibration proof.

 
Requirements for the connecting cable

U_{max} : 240V AC / 30V DC


I_{max} : 10A

Cross section: 0.08 ... 1.5mm² (AWG 28 ... 16)



Stripping length: 10mm



Wiring procedure

 

- 1 Pin number at the connector
- 2 Opening for screwdriver
- 3 Connection hole for wire

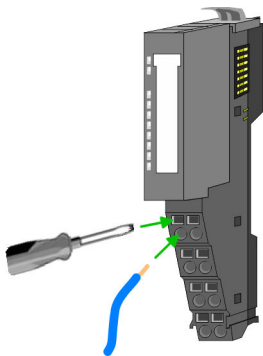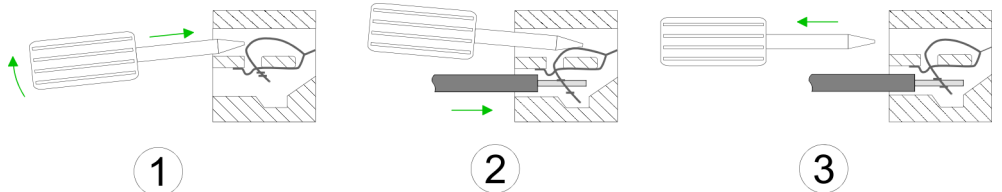


- 1.** Insert a suited screwdriver at an angle into the square opening as shown. Press and hold the screwdriver in the opposite direction to open the contact spring.
- 2.** Insert the stripped end of wire into the round opening. You can use wires with a cross section of 0.08mm² up to 1.5mm²
- 3.** By removing the screwdriver, the wire is securely fixed via the spring contact to the terminal.

Shield attachment → [‘Shielding’...page 75](#)

Wiring

Wiring power supply

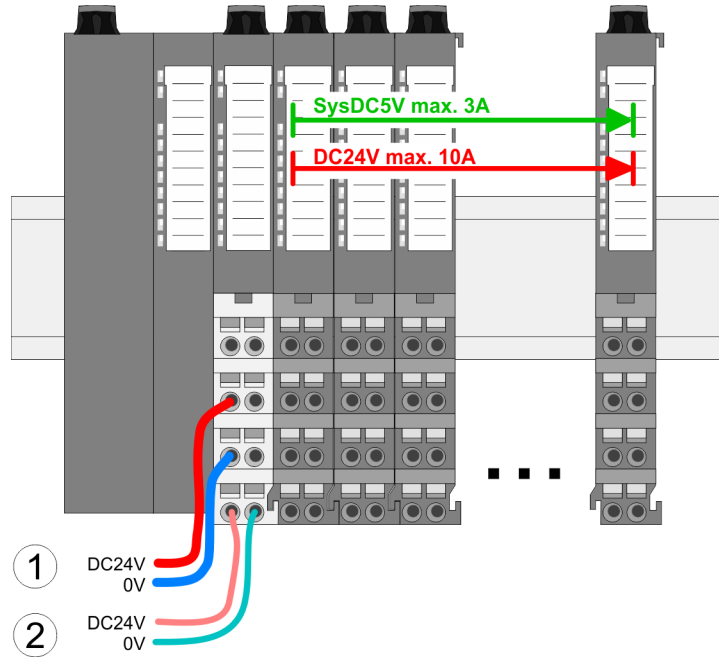

- (1) DC 24V for power section supply I/O area (max. 10A)
- (2) DC 24V for electronic power supply bus coupler and I/O area



NOTICE

Since the power section supply is not internally protected, it is to be externally protected with a fuse, which corresponds to the maximum current. This means max. 10A is to be protected by a 10A fuse (fast) respectively by a line circuit breaker 10A characteristics Z!



The electronic power section supply is internally protected against higher voltage by fuse.

The fuse is within the power module. If the fuse releases, its electronic module must be exchanged!

Fusing

- The power section supply is to be externally protected with a fuse, which corresponds to the maximum current. This means max. 10A is to be protected with a 10A fuse (fast) respectively by a line circuit breaker 10A characteristics Z!
- It is recommended to externally protect the electronic power supply for bus coupler and I/O area with a 2A fuse (fast) respectively by a line circuit breaker 2A characteristics Z.
- The electronic power supply for the I/O area of the power module 007-1AB10 should also be externally protected with a 1A fuse (fast) respectively by a line circuit breaker 1A characteristics Z.


State of the electronic power supply via LEDs

After PowerON of the System SLIO the LEDs RUN respectively MF get on so far as the sum current does not exceed 3A. With a sum current greater than 3A the LEDs may not be activated. Here the power module with the order number 007-1AB10 is to be placed between the peripheral modules.


Deployment of the power modules

- If the 10A for the power section supply is no longer sufficient, you may use the power module with the order number 007-1AB00. So you have also the possibility to define isolated groups.
- The power module with the order number 007-1AB10 is to be used if the 3A for the electronic power supply at the backplane bus is no longer sufficient. Additionally you get an isolated group for the DC 24V power section supply with max. 4A.
- By placing the power module 007-1AB10 at the following backplane bus modules may be placed with a sum current of max. 2A. Afterwards a power module is to be placed again. To secure the power supply, the power modules may be mixed used.

Power module 007-1AB00

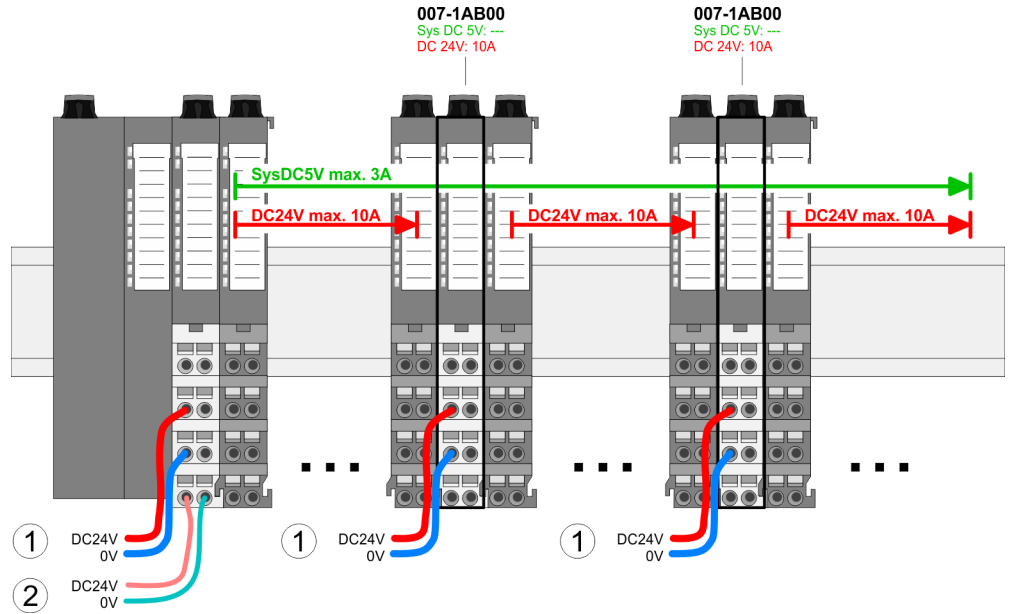

Power module 007-1AB10

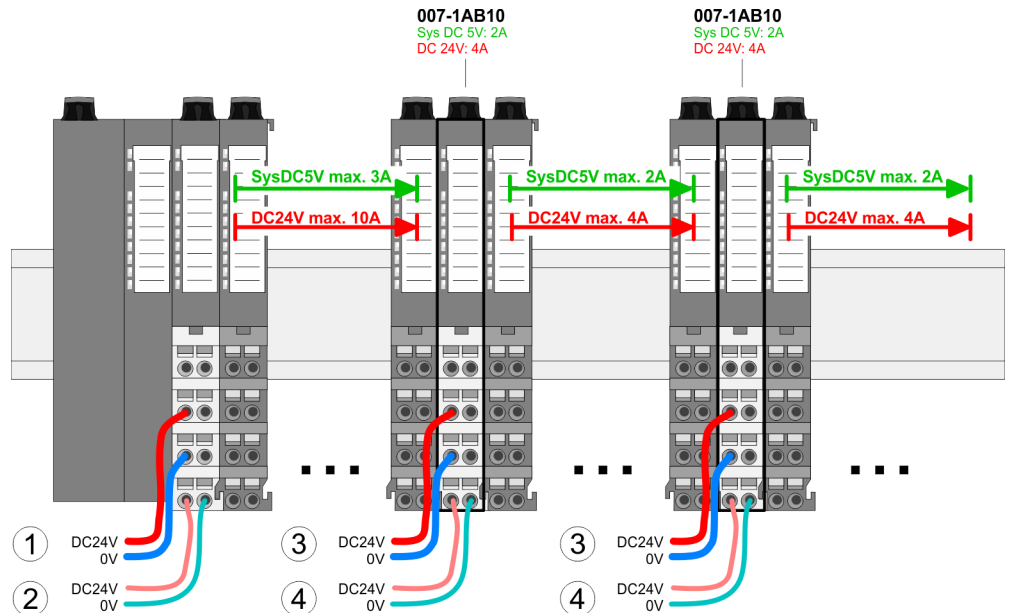

- (1) DC 24V for power section supply I/O area (max. 10A)
- (2) DC 24V for electronic power supply bus coupler and I/O area
- (3) DC 24V for power section supply I/O area (max. 4A)
- (4) DC 24V for electronic power supply I/O area

3.8.1 Requirements to the sensor and actuators

Note the following warning in terms of safety-oriented operation of sensors and actuators:



CAUTION


- A safety system always consists of sensors, logic and actuators. The usage of the sensors and actuators lies outside of our sphere of influence. We equipped our electronics safety-relevant in such a way that we can offer you for the sensors and actuators 85% of the maximally permissible probability of dangerous errors (corresponds to the recommended dispatch between sensors, actuators and the electronic circuits for input, processing and output in expenditure in safety technology).
- Instrumentation using sensors and actuators poses considerable safety responsibility. For all sensors and actuators, the probabilistic proof must be calculated using "SISTEMA" or an appropriate tool. "SISTEMA" is a software tool for evaluating safety-related machine controls according to DIN EN ISO 13849. This ensures that the safety circuit consisting of sensor + logic + actuator fulfils the normative requirement in total. This must generally be ensured for all safety circles!
- A safety function must comply in terms of the probability and rate of hazardous faults with limits determined by the safety integrity level (SIL). For the System SLIO safety modules, you can find the values achieved at "Safety-relevant parameters". → ['Functional safety - safety relevant parameters'...page 20](#)
- When planning proof tests for the entire safety system, note that sensors and actuators generally require significantly shorter proof test intervals than the System SLIO safety modules with a device life of 20 years without a proof test.

Requirements to the sensors

The System SLIO safety DI module can be used with cable length up to 330m (capacity up to 100nF, ohmic resistance up to 22.4Ω). General rule: A single-channel sensor is sufficient to achieve SIL2/Cat. 3/PLd; to achieve SIL3/Cat.4/PLe, sensors must be connected via two channels.

Duration of the sensor signals

Note the following requirements on the sensor signals:

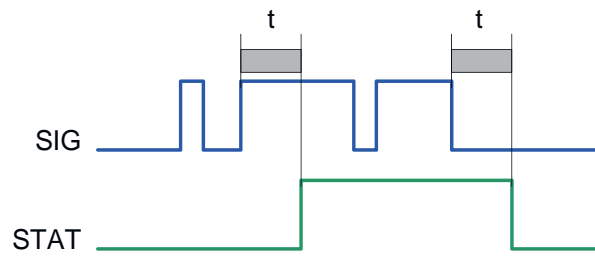

SIG Sensor signal
 STAT Status
 t Minimum switch-on and switch-off duration

**CAUTION**

In order to guarantee accurate detection of sensor signals by the safety DI module, you must ensure that the sensor signals have a defined *minimum duration*.

The *minimum duration* is a minimum switch-on and switch-off duration, which is necessary to detect a signal in the worst case. The time interval between two signal transitions must be greater than the PROFIsafe monitoring time to allow reliable detection of the pulses. → [‘Overview PROFIsafe F-parameters’...page](#)

Reliable detection by the safety DI module

Parameter short-circuit test	Parametrized input delay		
	1ms	3ms	15ms
de-activated	7ms	9ms	23ms
activated	8ms	12ms	37ms

In the table exemplary the minimum duration of the sensor signals of the safety DI module is shown. It depends on the configuration of the short-circuit test and the input delay in STEP®7 from Siemens.

Requirements to the actuators

The safety-related output modules perform a cyclic test of the outputs. The F module briefly disables the activate outputs. This test pulse lengths can be parametrized to match the load current and the cable capacitance / length.

High-speed actuators may briefly drop out or be activated during this test. If your process does not tolerate this, then use actuators with sufficient inertia (> 0.5ms).

In accordance with the resulting safety considerations, the test pulses can also be disabled per channel.

**CAUTION**

The outputs of a fail-safe output module must be electrically isolated to EN 50178 from components which carry higher voltages if the actuators are operated at voltages higher than 24V DC, for example, at 230 V DC, or are being used to switch higher voltages. → [‘Planning of a safety-related control system’...page 65](#)

Relays and contactors usually comply with this rule, is to be proved separately. This aspect is of particular importance when using semiconductor switchgear.

These components must be considered in the security calculation like the SLIO safety modules.

3.9 Connection examples



WARNING

Warning against personal and property damage!

The use of the connection examples described in this section alone is not enough to execute the safety function according to the SIL, Cat./PL determined from the risk analysis. In connection with safe devices, sensors and actuators, additional measures may be necessary to ensure the safety function. This includes, for example, the appropriate wiring and parametrization of digital inputs and outputs, as well as measures to exclude unforeseeable errors.

More information is available in the user manuals of the safe devices used.

General

The section generally describes possible applications, in which the functions of the System SLIO safety module for implementation of a safety function are used. You can only use the depicted connection examples in a tangible safety application after a performed risk analysis.



CAUTION

Please consider at single-channel operation!

At single-channel operation the demand rate of the safety functions is max. 1/100 of the test rate!

- System SLIO safety input
 - The test rate for the System SLIO safety input module at single-channel operation is 1x per 150ms. This means the max. demand rate is 1x per 15s.
 - You have to evaluate the external components, which are used in single-channel operation, regarding the demand rate (e.g.: manual check of a single-channel protection door switch).
- System SLIO safety output
 - In 1-channel operation, each output of the System SLIO safety output module is internally designed as a 2-channel (serially redundant) output. Therefore, the requirement regarding the request rate does not apply. This only applies as long as the test pulse length > 0 is configured for all channels.
 - But you have to evaluate the external components, regarding the demand rate, which are used in single-channel operation.



CAUTION

Please note for 1-channel operation of the safety output module!

With 1-channel operation according to Cat.2 / PL d of the safety output module, the user program must always react in the event of a diagnostic so that a safe state is initiated. This must be ensured by the application and can not be realized by the safety module itself.

3.9.1 Connection examples for digital safety inputs

You can operate e.g. the following sensors on the digital safety inputs:

- Potential-free, contact emergency off buttons
- Protective door switches
- Light array (general contactless protection system) with the following characteristics:
 - the outputs are source-mode outputs
 - the outputs must be compatible to IEC 61131-2




WARNING

Achievable SIL, Cat./PL for single-channel use of the digital safety inputs!


The achievable SIL, Cat./PL depends on the quality of the safe sensors. This must be certified according to EN 60947-5-1 /-5.

3.9.1.1 Emergency Off connection, single-channel

Connection 4 x emergency off, single-channel, Test pulse activation active

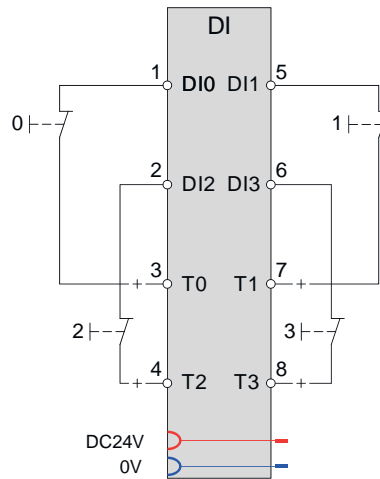

Connection 4 x emergency off, single-channel, *Test pulse activation* not active

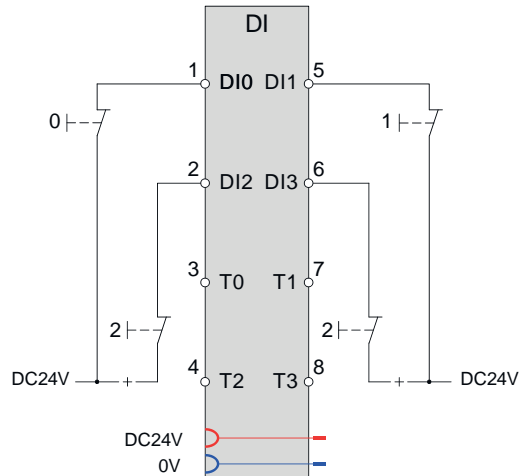


- You can connect the digital input via a switching element (e.g., an emergency off switch) either to the associated clock output or to the field supply voltage U_v directly. Alternatively, you can connect the semiconductor output of a sensor to the digital input directly. For the single-channel use of a digital input, you must set the parameter *Evaluation of the inputs* to "1-channel".
- If you do not connect the digital input via a switching element to the associated clock output (e.g., semiconductor output), set the *Test pulse activation* to "deactivated". Otherwise, the safety module detects a short circuit on the input and reports the "Short circuit" diagnostic message.
- If you connect the digital input via the switching element to the associated clock output and the safety module should monitor the signal line for short circuits, you have to set the parameter *Test pulse activation* to "activated".



Please consider the instructions for single-channel operation with regard to the demand rate. → 'Connection examples'...page 92

Connection 2 x emergency-off switch, dual channel, equivalent evaluation

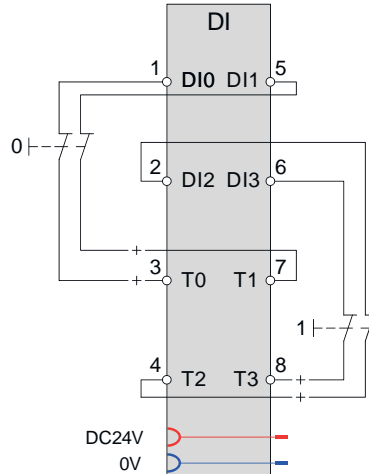

WARNING


Pay attention to the protected installation of signal lines during *Test pulse activation* is "deactivated"!

If you have set the parameter *Test pulse activation* to "deactivated", as condition of fault exclusion, the signal lines must be installed protected among each other and between the sensors and inputs according to EN 60204-1 or EN ISO 13849-2 (e.g., as separate sheathed lines or in separate cable ducts).

- For emergency off applications that require single fault security, you can connect two digital inputs via two switching elements (two-channel emergency off switches with two break contacts) to the safety module.
- Use the hardware configuration together with the Safety CRC-Tool to set the parameters. → [‘Deployment with PROFIBUS’...page 105](#), → [‘Deployment with PROFINET’...page 110](#)
- Set the parameter *Evaluation of the inputs* to "2-channel" and *Signal polarity* to "equivalent". In addition, set the *Discrepancy timeout* parameter to the discrepancy time required for the two switching elements. In addition, set the *Discrepancy timeout* parameter to the discrepancy time required for the two switching elements.
- You can set the *Test pulse activation* of both inputs used to "activated" or "not active". Please note that the *Test pulse activation* parameter must be set the same for both digital inputs. If you connect the digital inputs via the switching elements directly to the field voltage of DC +24 V or to two semiconductor outputs of a sensor, then you have to set the *Test pulse activation* parameter to "deactivated" because otherwise the safety module wrongly detects a short circuit and reports the "Short circuit" diagnostic message.
- The safe sensors used must be certified according to EN 60947-5-1 /-5.
- When using electronic sensors with semiconductor outputs you can achieve SIL3/ Cat.4/PLe.

3.9.1.2 Connection interlock monitoring


Connection 1 x interlock monitoring, dual channel, antivalent evaluation

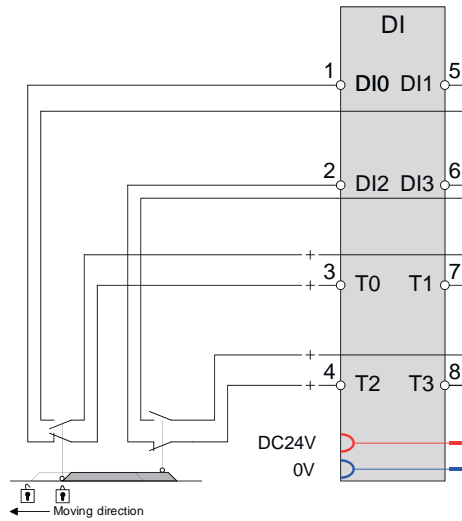

- To monitor protective devices, you can connect the normally open contact of a protective door switch to four digital inputs of the safety module.
- Use the hardware configuration together with the Safety CRC-Tool to set the parameters. → [‘Deployment with PROFIBUS’...page 105](#), → [‘Deployment with PROFINET’...page 110](#)
- Set the parameter *Evaluation of the inputs* to "2-channel".
- So that the signal lines of the digital inputs of the safety module are monitored for short circuits, for every input set the *Test pulse activation* to "activated".
- You must set the parameter *Signal polarity* to "antivalent". In addition, set the *Discrepancy timeout* parameter to the discrepancy time required for the normally open contact of the protective door switch.
- You can achieve SIL3/Cat.4/PLe with this circuit.

3.9.1.3 Connection light array

Connecting a light array

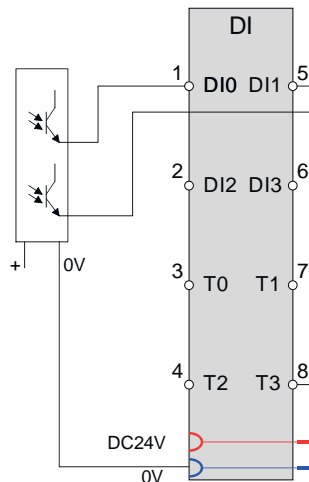

- For light array applications which require single fault security, you can connect two digital safety inputs to the according light array outputs.
- Here set the parameter *Evaluation of the inputs* of the digital safety inputs to "2-channel".
- For this the *Input smoothing time* of the according safety input must always be greater than the *Test pulse length* of the light array output (manufacturer data).
- Set the parameter *Test pulse activation* to "deactivated". Otherwise, the safety module wrongly detects a short circuit on the input and reports the "Short circuit" diagnostic message.

3.9.2 Connection examples for digital safety outputs

The following loads can be operated on the digital safety outputs:

- resistive loads
- inductive load after DC13 according EN 60947-5-1



Wire break detection at the digital safety output

To detect a wire break between the safety outputs DO 0 ... 3 and 0V to the connected load, for each safety output the parameter wire break detection may separately be set. The error wire break is reported if the output current is less than 10 ... 30mA. This error stops the module.

3.9.2.1 Switching inductive loads

You can operate inductive loads on the digital safety outputs of the SLIO safety module by using the internal recovery circuit. Consider the maximum switching frequency of 0.1Hz.



WARNING

Defect by thermal overheating if the switching frequency is too high!

If the inductivity and load current you have selected is too high for the selected switching frequency, it can lead to thermal destruction of the digital safety output.

Destruction of the digital safety output can cause the safety function to fail.

Selecting an external diode recovery circuit

If you use a suitable external diode recovery circuit, then the magnetic energy when shutting down the inductive load is not converted in the SLIO safety module, but on the external diode recovery circuit.




NOTICE

The external diode recovery circuit must be designed for the resulting heat loss.

Connection with diode recovery circuit

When shutting down an inductive load, the magnetic energy stored in the inductive load must be dissipated. This magnetic energy is converted by a diode recovery circuit into heat. You can convert the magnetic energy into heat with the SLIO safety module or with a suitable external diode recovery circuit.

These components must be considered in the security calculation like the System SLIO safety modules.

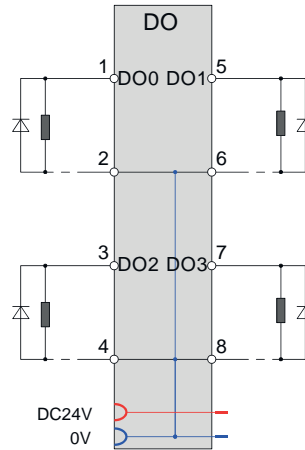

Please consider the instructions for single-channel operation with regard to the demand rate. → [‘Connection examples’...page 92](#)

3.9.2.2 Switching electronic loads

You can switch electronic loads (e.g., electronically controlled door locking device) using the System SLIO safety module.




Switching electronic loads

When switching electronic loads, increased inrush currents that significantly exceed the rated current can be caused by internal capacities in the electronic loads. This can lead to passivation of the System SLIO safety module with the "Overload" diagnostic message. You can remedy this by limiting the inrush current, e.g., by placing an additional series resistor between the digital safety output and the electronic load.

Schematic diagram


The following schematic diagram shows the internal two channel system of the System SLIO safety module. This only applies as long as the test pulse length > 0 is configured for all channels.

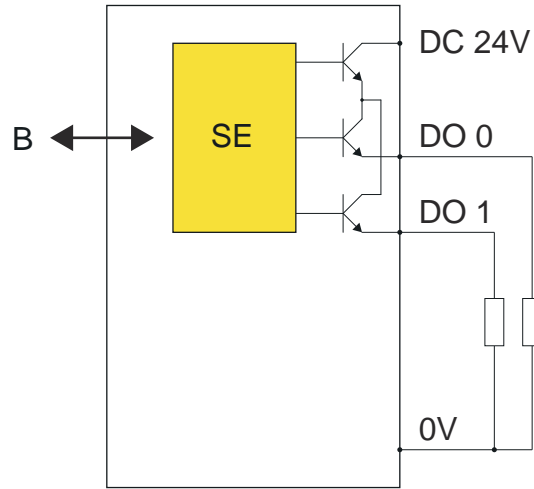

B System SLIO backplane bus
SE Safety electronics


Connection a load to a safety output

In the following the connection of a load (relay respectively pneumatic valve) to an output with optional feedback (switch respectively pneumatic pressure switch) to a System SLIO safety input module is shown.

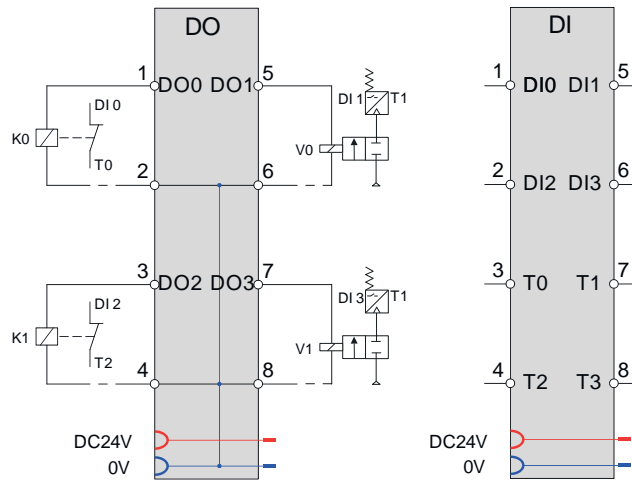

Connection 2 parallel connected loads to a safety output

With this connection, you can achieve SIL3/Cat.4/PLe by re-reading the relay states on the condition that in the external wiring a short-circuit to the power supply can be excluded.

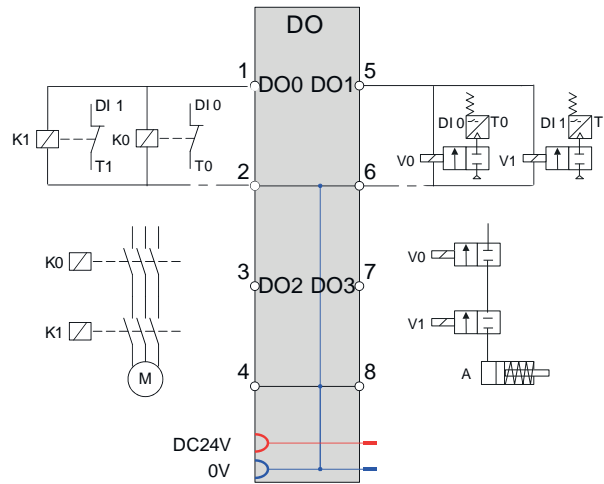

WARNING

Pay attention to the protected installation of signal lines!


To prevent a short circuit between the connecting cables of the safe sensors and the safety module, the signal lines must be installed protected between the safe sensor and the safety module according to EN 60204-1 or EN ISO 13849-2 (e.g. as separated sheathed lines or in sep. cable ducts).



Set the parameter Activation mode of the according safety output to 1-channel.

Connection loads to safety output and ground 0V

With this connection, you can achieve SIL3/Cat.4/PLe by re-reading the relay states.

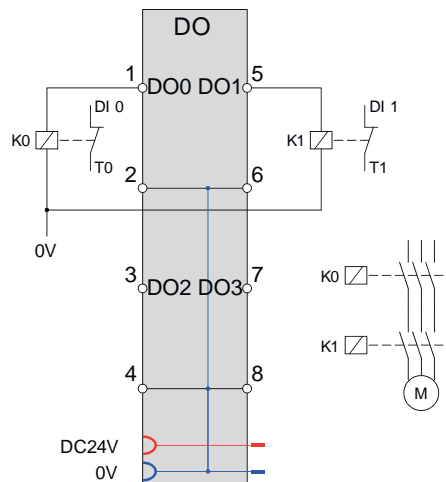


You can connect a load (e.g., a relay) between a digital safety output DO 0 ... 3 and the ground connection 0V of the field power supply. It is not necessary to lead back the ground connection to the according connection of the System SLIO safety module.

Please observe the following conditions:

- Ensure for the fact that the relay and the System SLIO safety module have the same reference potential.
- For single fault security, you need at least 2 relays and the short-circuit fault on the supply voltage must be excluded by a protected wiring
- You must connect the normally open contacts (K0 and K1) of 2 relays in series to the load to be switched.

Connection digital safety outputs to digital safety inputs

In the following it is shown how to connect the safety outputs DO 0 ... 3 to the safety inputs of a System SLIO safety input module.

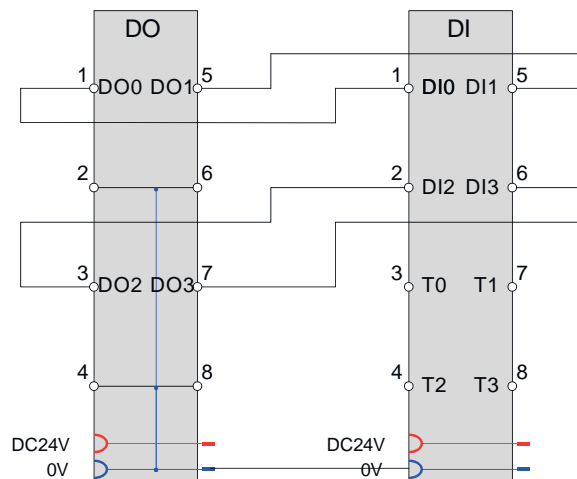

- For the according safety input you have to set the parameter *Test pulse activation* to "deactivated". Otherwise, the safety module detects a short circuit on the input and reports the "Short circuit" diagnostic message.
- For this the *Input smoothing time* of the according safety input must always be greater than the *Test pulse length* of the safety output.




In this case wire break detection is not possible!

Connection 4 motors, external single-channel with feedback (1 contactor per motor)

You can connect a contactor to a digital safety output and connect a motor single-channel using normally open contacts of the contactor. Connection is possible to each of the four digital safety outputs. You must observe the warning messages for single-channel use. With this connection, you can achieve SIL2/Cat.2/PLd by re-reading the relay states.



Please consider the instructions for single-channel operation with regard to the demand rate. → 'Connection examples'...page 92

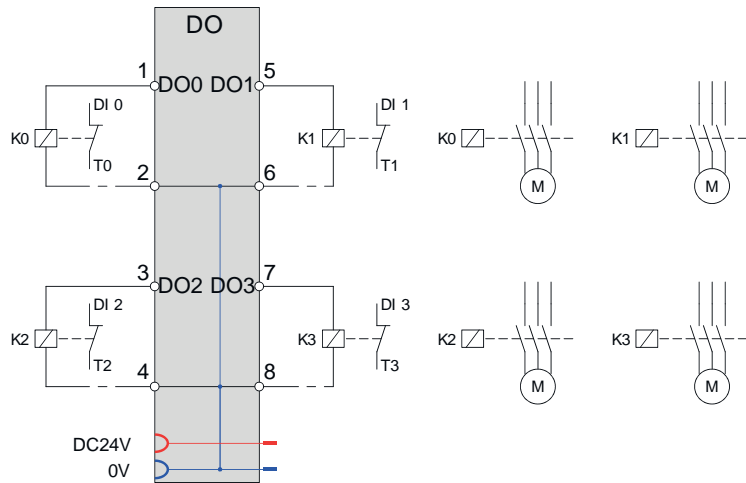

WARNING


Important note to single fault security!

Never use a single digital safety output alone for the safety function if single fault security is required!

If single fault security is required, you have to integrate a second disconnection facility (e.g., a line contactor K4) in the safety application by e.g. analysing the relay states read back.


Connection 4 motors, 2-channel with feedback (2 contactor per motor)

With this connection, you can achieve SIL3/Cat.4/PLe by re-reading the relay states.

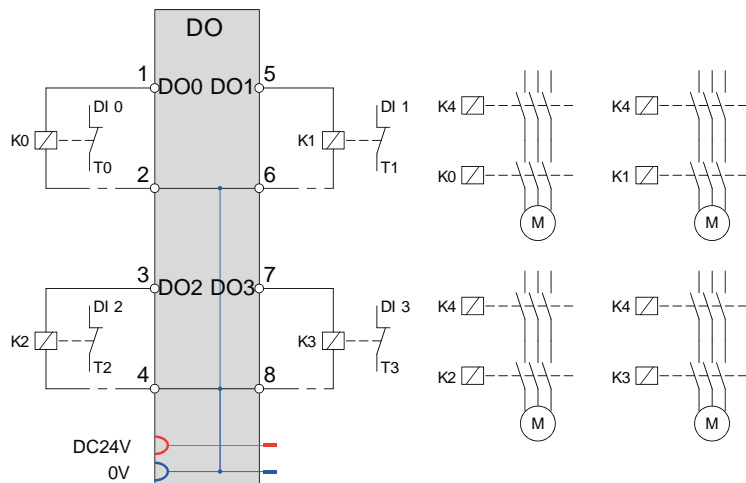

Connection 2 motors, 2-channel with feedback (2 contactor per motor)

With this connection, you can achieve SIL3/Cat.4/PLe by re-reading the relay states.

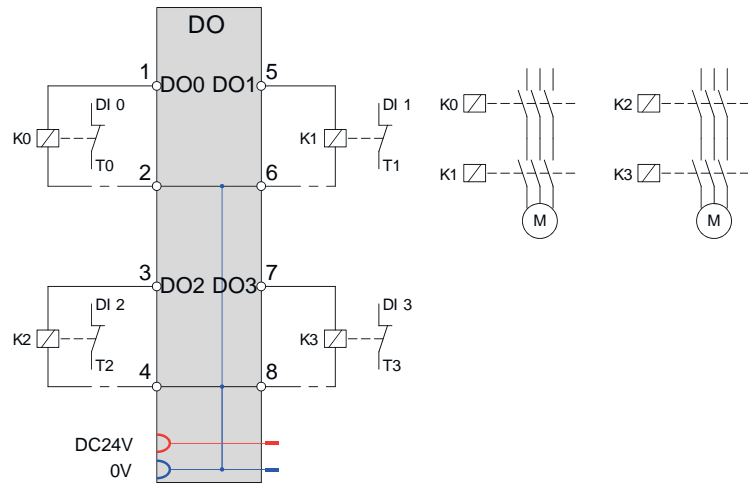

- To achieve signal fault security, we recommend the use of two positively driven normally open contacts of a contactor in series to the motor to be connected. These can originate from one contactor or from two different contactors.
- Connect the contactors between the digital safety outputs.

3.10 Notes for commissioning

General

The Commissioning guarantees that the System SLIO safety module functions correctly. Guarantee before commissioning that the following conditions are fulfilled:

- The digital module is correctly installed.
- The digital module is connected to safety components (Emergency stop device, safety light array etc.).
- The safety devices are activated.



For the operation the ambient data, which are specified in the technical data must be adhered to! Commissioning is only permitted after the acclimation of the System SLIO safety modules! → 'SDI 4xDC 24V - Technical data'...page 45 → 'SDO 4xDC 24V 0.5A - Technical data'...page 59



WARNING

Risk of injury by electric current!

In the phase commissioning the check list "Check list commissioning and validation" in the appendix must be used. → *'Checklist commissioning, parametrization and validation'...page 147*

- Make sure that the system is exclusively commissioned by qualified personnel.
- Make sure during the commissioning that there is no person in the danger zone. You always may reckon that the machine, plant or safety device do not behave in such a way, as it is intended.
- If there are changes or extensions on the system during commissioning, influences to the system behaviour must be checked. Here the check lists for planning and installation must be handled again.

**DANGER****Risk of injury from moving parts!**

During the commissioning machine parts / components or the entire machine / plant can move.

- Keep a sufficient distance from any moving parts of machinery / equipment or parts from the moving machine / plant.
- Note that via attached further modules the parts of machinery / equipment or parts from the moving machine / plant can set to motion.
- Activate in each case their safety devices.

Requirements to the operating personnel

The work for commissioning must be performed by professionally trained personnel, who in particular understands and acts on the safety regulations and notes.

**DANGER****Risk by mechanical influence!**

During the commissioning of the module the machine / plant or parts of the machine / plant may be moved by a completely available application program.

- Keep a sufficient distance from any moving parts of machinery / equipment or parts from the moving machine / plant.

Change of the safe parametrization

With each change of the safe parametrization you get the message from the Siemens SIMATIC Manager, that safety-relevant changes were accomplished. So that these changes become effective, you have to generate the safety program again as indicated. For this you have to start the function "Generate" at "Calculate the safety program" in the Siemens SIMATIC Manager.

***Behaviour on changes of the safe parametrization***

If the safety program was not again generated and transferred to the F PLC after changing the safety parametrization, the System SLIO safety module does not report any error. Then the F PLC passivates the module and the inputs and outputs remain at 0.

3.11 Deployment with PROFIBUS

General

- Within PROFIBUS, the safety modules exclusively support PROFIsafe V2.4.
- PROFIBUS coupler for System SLIO safety modules:
 - 053-1DP00 - PROFIBUS DP: Firmware V1.3.0 and up and GSD file (SLIO) V223 and up.
- During the project engineering the System SLIO I/O modules are assigned to the PROFIBUS DP master via the System SLIO DP slave.
- The project engineering happens in the Siemens SIMATIC Manager as hardware configuration for a Siemens F CPU.
- A direct assignment takes place via the PROFIBUS address that you set at the DP slave and in the master project at slave properties.
- By installing the corresponding GSD file the IM 053-1DP00 is listed at the hardware catalog as "... 053-1DP00".



Due to the restrictions of PROFIBUS in the parameter telegram you can operate maximally 5 System SLIO safety modules at the backplane bus of the PROFIBUS DP slave.

More information about the project engineering and the parameters of the PROFIBUS DP slave IM 053-1DP00 may be found in the manual HB300_IM_053-1DP00.

GSD file

For every PROFIBUS slave from Yaskawa there is a GSD file available. This file may be found at the Download Center of www.yaskawa.eu.com. Please always use for the System SLIO safety modules the DP-V1 variant. Install the file VI010C19.gsd in the Siemens SIMATIC Manager. Details on the installation of the GSD and/or type files are available from the manual respectively in the online help of Siemens. After the installation of the GSD file you will find the DP-V1 slave in the hardware catalog from Siemens at:

PROFIBUS DP > Additional Field devices > I/O > ..._SLIO > ... 053-1DP00 (DPV1)

The assignment of the GSD file to your slave is shown in the following table:

Variant	GSD file
... 053-1DP00 (DP-V1)	VI010C19.gsd

Project engineering

1. ➤ Mount your PROFIBUS system.
2. ➤ Set on your System SLIO safety module a F-address.
3. ➤ Start your project engineering tool with a new project.
4. ➤ Configure a master system with a F CPU from Siemens and create a new PROFIBUS subnet.
5. ➤ For the project engineering of the IM 053-1DP00 take the "... 053-1DP00 (DPV1)" from the hardware catalog and drag it to the DP master subnet.
6. ➤ Parametrize the DP slave. Here enter among others a PROFIBUS address between 1 and 125 and set the same address at the address switch.
7. ➤ Place the System SLIO modules on the DP slave in the plugged sequence starting with slot 1, by dragging them from the hardware catalog.
8. ➤ Place in this way your System SLIO Safety I/O modules.
9. ➤

**Use as spare parte**

- ➔ [‘SDI 4xDC 24V - Use as spare part’...page 33](#)
- ➔ [‘SDO 4xDC 24V 0.5A - Use as spare part’...page 47](#)

To use and configure a safety module with the current hardware revision, use the module with the name extension '(V2)' from the hardware catalog. Here the module has the following properties:

- Protocol: PROFIsafe V2.6
- Process image byte length CRC: 4 byte
- ➔ [‘SDI 4xDC 24V - Parameter record set’...page 38](#)
 - Version ID: 2 (fix)
 - Activation diagnostic interrupt When the diagnostic interrupt is activated, the diagnostic data record can only be overwritten after the safety interrupt has been acknowledged and is thus retained. The diagnostic interrupt is disabled by default.
- ➔ [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)
 - Version ID: 2 (fix)
 - Activation diagnostic interrupt When the diagnostic interrupt is activated, the diagnostic data record can only be overwritten after the safety interrupt has been acknowledged and is thus retained. The diagnostic interrupt is disabled by default.
 - Channel x Test pulse length: ‘deactivated’ is supported.

For each System SLIO safety module a parametrization is necessary. In addition you must validate the parameters my means of the Safety CRC-Tool and take the resulting checksum to the parametrization.








10. ➤ Save and transfer your project to the PLC.

3.11.1 Parametrization System SLIO safety module




The parameters of a System SLIO safety module can only be assumed, if the set parameters are validated by the Safety CRC-Tool and the resulting checksum is taken to the parameter F_iParCRC. In this way it is ensured that the transmitted parameters are always consistent.

Installation of the Safety CRC-Tool

From Yaskawa you get the software "Safety CRC-Tool". This software can be found at the Download Center of www.yaskawa.eu.com via "CRC-Tool". It serves for the validation of the set module parameters.

1.  Close the Siemens SIMATIC Manager before installing the Safety CRC-Tool.
2.  For installation start setup.exe from the data carrier.
3.  Select the language for installation and click at [OK]. The InstallShield-Wizard is started.
4.  Accept the terms of license and click on [Next].
5.  Enter your user information and click on [Next].
6.  Select a destination folder and click on [Next].
7.  Start the installation with [Install].
 - ➔ After the installation the Safety CRC-Tool is available in the hardware configurator via the context menu.

Parameter setting

1.  Open in the Siemens hardware configurator by a double-click to the properties dialog of your System SLIO safety module.
2.  Enter the according parameters. Information about the parameters may be found in the chapter "Product description". ➔ [‘SDI 4xDC 24V - Parameter record set’...page 38](#) ➔ [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)
3.  Close the properties dialog.

Parameter validation




With this step the safety-related test of the parameters is examined.



DANGER

By incorrect configuration there is a hazard for man and machine!

1.  For the validation of the parameters, click at the System SLIO safety module and choose *'context menu → Start device tool' "... Safety CRC-Tool"*.

SLIO Safety CRC-Tool

File Settings

Vendor/Device

Vendor : VIPA GmbH

Device : VIPA 053-1DP00 (DPV1)

Label : VIPA 053-1DP00 (DPV1)

Modul : SM 021-1SD00

Parameter

- ? VIPA GmbH
- [-] ? VIPA 053-1DP00 (DPV1)
 - ? Bus Address
 - [-] ? SM 021-1SD00
 - ? Version ID
 - ? Module type ID
 - ? Parameter change mode
 - ? Behaviour after channel errors
 - ? Diagnostic interrupt
 - ? Channel 0,1: Activation
 - ? Channel 0,1: Input smoothing time (ms)
 - ? Channel 0,1: Test pulse activation
 - ? Channel 0,1: Evaluation of the inputs
 - ? Channel 0,1: Signal polarity
 - ? Channel 0,1: Discrepancy time (ms)
 - ? Channel 0,1: Discrepancy error
 - ? Channel 2,3: Activation
 - ? Channel 2,3: Input smoothing time (ms)
 - ? Channel 2,3: Test pulse activation
 - ? Channel 2,3: Evaluation of the inputs
 - ? Channel 2,3: Signal polarity
 - ? Channel 2,3: Discrepancy time (ms)
 - ? Channel 2,3: Discrepancy error

Accept

Calc-CRC

CRC-Modul

Hex

Dec

Exit

Overview

Name	Value	min.
Version ID	1	0
Module type ID	0x0c411e00	0x00000000
Parameter change mode	normal	
Behaviour after channel errors	Passivate the entire module	
Diagnostic interrupt	deactivated	
Channel 0,1: Activation	activated	
Channel 0,1: Input smoothing time (ms)	1	1
Channel 0,1: Test pulse activation	activated	
Channel 0,1: Evaluation of the inputs	2 channel	
Channel 0,1: Signal polarity	equivalent	
Channel 0,1: Discrepancy time (ms)	1	1
Channel 0,1: Discrepancy error	Test 0-signal required	
Channel 2,3: Activation	activated	
Channel 2,3: Input smoothing time (ms)	1	1

2. In this tool among others every module parameter is listed. Here you must validate each parameter, but you cannot change a parameter. Please check and validate each parameter with [Accept]. Per default the tool starts in English. With settings an other language may be selected.

- For information about the currently being validated module, at 'Vendor/Device' you will find information about the module such as vendor, bus coupler to which the System SLIO safety module is connected and the order number of the module.
- In 'Overview' all the module parameters are listed.

3. → Start the validation of each parameter by clicking in '*Parameter*' at the entries, checking and accepting each entry with [Accept].
 - In the 1. position in '*Parameter*' there is the vendor, followed by the bus coupler with PROFIBUS address, to which the System SLIO safety module is connected. Please check here again the PROFIBUS address.
 - The parameter '*Version ID*' is only be found in the Safety CRC-Tool. This is the version ID of the safety parameter in the GSD file. The current *Version ID* is 1.
 - The *Module type ID* shows the type ID of the System SLIO safety module. Also this parameter is exclusively be found in the Safety CRC-Tool.
There are the following type IDs:
 - SM 021-1SD00 - Type ID: 0x0C411E00
 - SM 022-1SD00 - Type ID: 0x0C812E00
 - Starting with '*Parameter change mode*' the parameters are listed, which you have entered in the hardware configuration.
4. → After you have accepted each parameter the button [Calc-CRC] is activated. Depending on the specifications of the hardware configuration there is the possibility to calculate the CRC as hexadecimal or as decimal value.
5. → Copy the calculated CRC value to clipboard and close the Safety CRC-Tool with [Exit]. Since the Safety CRC-Tool does not store any entry, there is a confirmation request before exiting the tool. Confirm this.

Enter CRC in HW configuration

1. → Return to the hardware configurator and open the properties dialog of the System SLIO safety module.
2. → Open the register '*PROFIsafe*' and select the parameter '*F_iPar_CRC*'.
3. → Click on [Change value] and insert from the clipboard the CRC value. With [OK] the value is accepted.

3.11.2 Generate safety program

Proceeding

1. → Save and translate the hardware configuration and return to your project in the Siemens SIMATIC Manager.
2. → To confirm the new safety hardware configuration you have to start '*Calculate the safety program* → *Generate*'.



*As soon as you change a parameter of a System SLIO safety module in the hardware configuration, you must validate this with the Safety CRC-Tool and you have to enter the calculated CRC value to '*F_iPar_CRC*' of the module. Afterwards the safety program in the Siemens SIMATIC Manager must be generated again.*

3.12 Deployment with PROFINET

General

- PROFINET coupler for System SLIO safety modules
PROFIsafe V2.4:
 - 053-1PN00 - PROFINET: Firmware V1.1.7 and up and GSDML file (SLIO) V1.1.6 and up
 - 053-1PN01 - PROFINET: Firmware V 1.0.2 and up and GSDML file (SLIO) V3.0.3 and up
- PROFINET coupler for System SLIO safety modules
PROFIsafe V2.6:
 - 053-1PN01 - PROFINET: Firmware V 1.3.1 and up and GSDML file (SLIO) V3.0.15 and up
- During the project engineering the SLIO I/O modules are assigned to the PROFINET IO controller via the System SLIO IO device.
- The project engineering happens in the Siemens SIMATIC Manager as hardware configuration for a Siemens F CPU.
- A direct assignment takes place via the PROFINET address that you set at the IO device and in IO controller project at IO device properties.
- By installing the corresponding GSDML file the IM 053-1PN0x is listed at the hardware catalog as "... 053-1PN0x".



With PROFINET, you can operate, taking into account the maximum current on the backplane bus, System SLIO safety modules up to the maximum expansion.

More information about the maximum expansion, the project engineering and the parameters of the PROFINET IO device IM 053-1PN0x may be found in the manual HB300_IM_053-1PN0x.

GSDML file

From Yaskawa there is a GSDML files for the IO device available. This file may be found at the Download Center of www.yaskawa.eu.com. Please install the GSDML file in your Siemens SIMATIC Manager. Details on the installation of the GSDML file may be found in the manual of Siemens SIMATIC Manager. For configuration in your configuration tool every SLIO module may be found in the GSDML file as XML data. After the installation of the GSDML file you will find the System SLIO IO device in the hardware catalog from Siemens at:

PROFINET IO > Additional field devices > I/O > ... SLIO System > ... 053-PN0x

Project engineering

1. → Execute an initialization of the PROFINET IO device. More may be found in the additional manual HB300_IM_053-1PN0x.
2. → Mount your PROFINET system.
3. → Set at the System SLIO Safety module a F address.
4. → Start your project engineering tool with a new project.
5. → Configure a master system with a Siemens F-CPU and create a new PROFINET subnet.
6. → For the project engineering of the IM 053-1PN0x take the "... 053-1PN0x" from the hardware catalog and drag it to the PROFINET subnet.
7. → Open via double click to the inserted symbol the properties dialog of the PROFINET device and enter at "General" the device name, which was preset by the address switch during the initialization. Confirm with [OK].
8. → For parametrization of the PROFINET device the product specific properties dialog may be opened in the slot overview.

9. →

**Use as spare parte**

- → [‘SDI 4xDC 24V - Use as spare part’...page 33](#)
- → [‘SDO 4xDC 24V 0.5A - Use as spare part’...page 47](#)

To use and configure a safety module with the current hardware revision, use the module with the name extension '(V2)' from the hardware catalog. Here the module has the following properties:

- Protocol: PROFIsafe V2.6
- Process image byte length CRC: 4 byte
- → [‘SDI 4xDC 24V - Parameter record set’...page 38](#)
 - Version ID: 2 (fix)
 - Activation diagnostic interrupt When the diagnostic interrupt is activated, the diagnostic data record can only be overwritten after the safety interrupt has been acknowledged and is thus retained. The diagnostic interrupt is disabled by default.
- → [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)
 - Version ID: 2 (fix)
 - Activation diagnostic interrupt When the diagnostic interrupt is activated, the diagnostic data record can only be overwritten after the safety interrupt has been acknowledged and is thus retained. The diagnostic interrupt is disabled by default.
 - Channel x Test pulse length: 'deactivated' is supported.

Insert the peripheral modules from the hardware catalog and parameterize them if necessary.








10. → Save and transfer your project to the PLC.

3.12.1 Parametrization System SLIO safety module




The parameters of a System SLIO safety module can only be assumed, if the set parameters are validated by the Safety CRC-Tool and the resulting checksum is taken to the parameter F_iParCRC. In this way it is ensured that the transmitted parameters are always consistent.

Installation of the Safety CRC-Tool

From Yaskawa you get the software "Safety CRC-Tool". This software can be found at the Download Center of www.yaskawa.eu.com via "CRC-Tool". It serves for the validation of the set module parameters.

1.  Close the Siemens SIMATIC Manager before installing the Safety CRC-Tool.
2.  For installation start setup.exe from the data carrier.
3.  Select the language for installation and click at [OK]. The InstallShield-Wizard is started.
4.  Accept the terms of license and click on [Next].
5.  Enter your user information and click on [Next].
6.  Select a destination folder and click on [Next].
7.  Start the installation with [Install].
 - ➔ After the installation the Safety CRC-Tool is available in the hardware configurator via the context menu.

Parameter setting


1.  Open in the Siemens hardware configurator the properties dialog of your System SLIO safety module by double-click.
2.  Enter the according parameters. ➔ [‘SDI 4xDC 24V - Parameter record set’...page 38](#)
➔ [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)
3.  Close the properties dialog.

Parameter validation

With this step the safety-related test of the parameters is examined.

**DANGER**

By incorrect configuration there is a hazard for man and machine!

1.  For the validation of the parameters, click at the System SLIO safety module and choose *‘context menu → Start device tool’* "Safety CRC-Tool".

SLIO Safety CRC-Tool

File Settings


Vendor/Device

Vendor : VIPA GmbH

Device : VIPA 053-1PN00-000

Label : VIPA053-1PN00-000-1

Modul : SM 021-1SD00

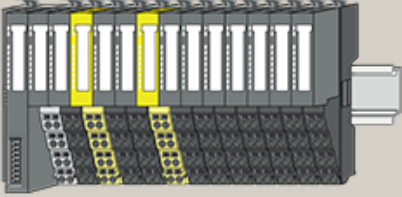

Parameter

- ? VIPA GmbH
- [-] ? VIPA 053-1PN00-000
 - ? Bus Address
 - [-] ? SM 021-1SD00
 - ? Version ID
 - ? Module type ID
 - ? Parameter change mode
 - ? Behaviour after channel errors
 - ? Diagnostic interrupt
 - ? Channel 0,1: Activation
 - ? Channel 0,1: Input smoothing time (ms)
 - ? Channel 0,1: Test pulse activation
 - ? Channel 0,1: Evaluation of the inputs
 - ? Channel 0,1: Signal polarity
 - ? Channel 0,1: Discrepancy time (ms)
 - ? Channel 0,1: Discrepancy error
 - ? Channel 2,3: Activation
 - ? Channel 2,3: Input smoothing time (ms)
 - ? Channel 2,3: Test pulse activation
 - ? Channel 2,3: Evaluation of the inputs
 - ? Channel 2,3: Signal polarity
 - ? Channel 2,3: Discrepancy time (ms)
 - ? Channel 2,3: Discrepancy error

Accept

Calc-CRC

CRC-Modul

Hex

Dec

Exit

Overview

Name	Value	min.
Version ID	1	0
Module type ID	0x0c411e00	0x00000000
Parameter change mode	normal	
Behaviour after channel errors	Passivate the entire module	
Diagnostic interrupt	activated	
Channel 0,1: Activation	activated	
Channel 0,1: Input smoothing time (ms)	1	1
Channel 0,1: Test pulse activation	activated	
Channel 0,1: Evaluation of the inputs	2 channel	
Channel 0,1: Signal polarity	equivalent	
Channel 0,1: Discrepancy time (ms)	20	1
Channel 0,1: Discrepancy error	Test 0-signal required	
Channel 2,3: Activation	activated	
Channel 2,3: Input smoothing time (ms)	1	1

2. In this tool among others every module parameter is listed. Here you must validate each parameter, but you cannot change a parameter. Please check and validate each parameter with [Accept]. Per default the tool starts in English. With 'settings' an other language may be selected.

- For information about the currently being validated module, at 'Vendor/Device' you will find information about the module such as vendor, bus coupler to which the System SLIO safety module is connected and the order number of the module.
- In 'Overview' all the module parameter are listed.

3. → Start the validation of each parameter by clicking in *'Parameter'* at the entries, checking and accepting each entry with [Accept].
 - In the 1. position in *'Parameter'* there is the vendor, followed by the bus coupler with PROFINET address, to which the System SLIO safety module is connected. Please check here again the PROFINET address.
 - The parameter *'Version ID'* is only be found in the Safety CRC-Tool. This is the version ID of the safety parameter in the GSD file. The current version ID is 1.
 - The *'Module type ID'* shows the type ID of the System SLIO safety module. Also this parameter is exclusively be found in the Safety CRC-Tool.
There are the following type IDs:
 - SM 021-1SD00 - Module type ID: 0x0C411E00
 - SM 022-1SD00 - Module type ID: 0x0C812E00
 - Starting with *'Parameter change mode'* the parameters are listed, which you have entered in the hardware configuration.
4. → After you have accepted each parameter the button [Calc-CRC] is activated. Depending on the specifications of the hardware configuration there is the possibility to calculate the CRC as hexadecimal or as decimal value.
5. → Copy the calculated CRC value to clipboard and close the Safety CRC-Tool with [Exit]. Since the Safety CRC-Tool does not store any entry, there is a confirmation request before exiting the tool. Confirm this.

Enter CRC in HW configuration

1. → Return to the hardware configurator and open the properties dialog of the System SLIO safety module.
2. → Open the register *'PROFIsafe'* and select the parameter *'F_iPar_CRC'*.
3. → Click on [Change value] and insert from the clipboard the CRC value. With [OK] the value is accepted.

3.12.2 Generate safety program

Procedure

1. → Save and translate the hardware configuration and return to your project in the SIMATIC Manager.
2. → To confirm the new safety hardware configuration you have to start the function *'Calculate the safety program → Generate'*.



*As soon as you change a parameter of a System SLIO safety module in the hardware configuration, you must validate this with the Safety CRC-Tool and you have to enter the calculated CRC value to *'F_iPar_CRC'* of the module. Afterwards the safety program in the Siemens SIMATIC Manager must be generated again.*

3.12.3 Diagnostic messages PROFINET

Code	Description
0x0000	no error
0x0001:	<p><i>Short circuit detected</i></p> <p>Short circuit within one channel to DC 24V</p> <ul style="list-style-type: none"> ■ ERR LED: 1x blinking ■ Diagnostic data: CHxERR Bit 0 is set

Code	Description
0x0040	<p><i>Mismatch of safety destination address (F_Dest_Add)</i></p> <p>The F address set by the DIP switch and the F-address configured by F parameter configuration (HW configuration) do not agree.</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0040
0x0041	<p><i>Safety destination address not valid (F_Dest_Add)</i></p> <p>The F address, which was set by the F parameter configuration is not valid (e.g. = 0).</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0041
0x0042	<p><i>Safety source address not valid (F_Source_Add)</i></p> <p>The F source address, which was set by the F parameter configuration is not valid (e.g. = 0).</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0042
0x0043	<p><i>Safety watchdog time value is 0 ms (F_WD_Time)</i></p> <p>The watchdog time, which was set by the F parameter configuration is not valid (e.g. = 0).</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0043
0x0044	<p><i>Parameter F_SIL exceeds SIL from specific device application</i></p> <p>The safety integrity class, which was set by the F parameter configuration is greater than the maximum possible F-SIL value for the System SLIO safety module.</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0044
0x0045	<p><i>Parameter F_CRC_Length does not match the generated values</i></p> <p>The length of the CRC2 key, which was set by the F parameter configuration does not match the generated values.</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0045
0x0046	<p><i>F parameter version is incorrect</i></p> <p>The version of the F parameters, which was set by the F parameter configuration is not understood by the safety module.</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0046
0x0047	<p><i>CRC1 error</i></p> <p>The calculated CRC1 checksum is incorrect.</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x0047
0x0048	<p><i>Device-specific diagnostic information</i></p> <p>There is an internal error or a specific status message.</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x0048</p>

Code	Description
0x0049	<p><i>Saving the iParameters - monitoring time exceeded</i></p> <p>The attempt to save the iParameters permanently in the module failed because the internal monitoring time has expired.</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x0049</p>
0x004A	<p><i>Restore iParameters - monitoring time exceeded</i></p> <p>During start-up or after a reset, the stored iParameters could not be read from the memory in time.</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x004A</p>
0x004B	<p><i>Inconsistent iParameters (iParCRC error)</i></p> <p>The checksum of the iParameters is incorrect.</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_F: 0x004B
0x004C	<p><i>F_Block_ID not supported</i></p> <p>The transmitted structure of the F parameters (block ID) is not recognized by the module firmware (version conflict GSDML/hardware).</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x004C</p>
0x004D	<p><i>Transfer error: Data not consistent (CRC2 error)</i></p> <p>The CRC2 checksum calculated via the safety user data is incorrect. There is an inconsistency in the PROFIsafe telegram.</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x004D</p>
0x004E	<p><i>Transfer error: Timeout period (F_WD_Time or F_WD_Time_2 expired)</i></p> <p>The configured monitoring time was exceeded. The module has not received a valid security telegram from the F-CPU in time.</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x004E</p>
0x004F	<p><i>Confirmation required to activate the channels</i></p> <p>The module waits for an operator acknowledgement to reactivate the channels after an error or start-up.</p> <p>ERR LED: -</p> <p>Diagnostic data: ERR_F: 0x004F</p>
0x0102	<p><i>Channel cross-circuit detected</i></p> <p>Cross-circuit error between 2 channels</p> <ul style="list-style-type: none"> ■ ERR LED: 2x blinking ■ Diagnostic data: CHxERR: Bit 3 is set
0x0103	<p><i>Safety module I parameter error detected</i></p> <p>Error in the I parameters</p> <ul style="list-style-type: none"> ■ ERR-LED: - ■ Diagnostic data: ERR_D: Bit 4 is set

Code	Description
0x0104	<p><i>Safety module F parameter error detected</i></p> <p>Error in the F parameters</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_D: Bit 5 is set
0x0105	<p><i>Safety module F address EEPROM unequal DIP switch</i></p> <p>F address was changed: The F address set with the DIP switches does not match the stored F address, i.e. the safety module has already been parametrized appropriately and then the F address has been changed.</p> <ul style="list-style-type: none"> ■ ERR LED: 6x blinking ■ Diagnostic data: ERR_D: Bit 6 is set
0x0106	<p><i>Safety module F address in EEPROM has been reset</i></p> <p>The stored F address has been reset (either all DIP switches in the 0 position or via parametrization)</p> <ul style="list-style-type: none"> ■ ERR LED: - ■ Diagnostic data: ERR_D: Bit 7 is set
0x0107	<p>Only SDI 4xDC 24V:</p> <p><i>Channel discrepancy detected</i></p> <p>Discrepancy error between 2 channels</p> <ul style="list-style-type: none"> ■ ERR LED: 3x blinking ■ Diagnostic data: CHxERR: Bit 4 is set
0x0006	<p>Only SDO 4xDC 24V 0.5A:</p> <p><i>Channel wire break error detected</i></p> <p>Wire break error at one channel (current <30mA)</p> <ul style="list-style-type: none"> ■ ERR LED: 3x blinking ■ Diagnostic data: CHxERR: Bit 2 is set
0x000E	<p>Only SDO 4xDC 24V 0.5A:</p> <p><i>Channel earth fault detected</i></p> <p>Read back error, i.e. at one channel the setpoint and current state do not match, e.g. short circuit to ground.</p> <ul style="list-style-type: none"> ■ ERR LED: 4x blinking ■ Diagnostic data: CHxERR: Bit 1 is set

See also:

- [↪ 'Diagnostics'...page 119](#)

3.13 Validation of the system

General

With the first commissioning all the safety functions and the proper functionality of the programmed and installed system must be checked. And the check of the system must be documented.



WARNING

Danger with commissioning!

The control system may be operated only after successful testing by a competent person.

- Perform a complete functional test and check the correct assignment of the connected safety components.
- In the Appendix there is a checklist "Commissioning and validation" for commissioning and validation of the system. Perform the system validation in accordance to this checklist and document this accordingly.
→ ['Checklist commissioning, parametrization and validation'...page 147](#)
- Make sure that the service personnel is trained in the handling of the control system.

Function test

The function test is the main part of the validation of the entire system. The perfect allocation of the safety components of the network and the programmed logic of the system can be determined by the function test. Depending on the complexity of the combinational logic of the according project it is recommended to execute graded function tests. The following proceeding for function tests is recommended:

- Connect the actuators and drives with the safe output terminals only if while checking the wiring no errors were found.
- Examine a fully IO test. This means in order to bring all the sensors in each switch positions, each (normally on, off respectively actuated, not actuated).
 - Please check whether the specified and expected signal state is also the real state.
 - Please also check whether the state of the corresponding variables also accordingly changes in the safety PLC (a detailed description of this test can be found in the manual of your safety PLC).
 - You have to check the actuators as well when you want to control them with your safety output modules. You have to check each process state, which is specified in the safety application, as well.
 - If the safety PLC does not provide a suited test mode, you have to release the corresponding safety functions in your application and you have to check the reaction of the respective outputs.
- Examine a fully function test with the entire sensors (initiators), switches, actuators and drives.
- Document the result of the function test.
- To examine the function test you have to release all safety functions successively and you have to document the reaction of the system. Check whether the reaction corresponds to the expected behavior.

3.14 Operation



DANGER

During operation of the safety PLC, no changes to the system configuration are allowed.

Therefore:

Before extending the system, removing individual system components and changing the wiring, the PLC system is basically be set into a safe state dependent on the application by professional personnel.



For the operation the ambient data, which are specified in the technical data must be adhered to! Commissioning is only permitted after the acclimation of the System SLIO safety modules!

Instructions for operation

Instructions for the operation of System SLIO standard system components like power supply, bus coupler, IO modules can be found in the according manual.

3.15 Maintenance



CAUTION

Make sure by organizational measures that the interval for the repeat inspection of all system components is kept. → *'Functional safety - safety relevant parameters'...page 20*

- With the System SLIO safety module there is no repeat test possible for the user.
- If you keep the prescribed environmental conditions (see technical data) the corresponding safety module is maintenance-free.
- If you determine or assume a defect on a safety module, please contact Yaskawa.

3.16 Repair



CAUTION

Defective safety modules may only be repaired by the manufacturer.

A defective safety module cannot be repaired. Please contact Yaskawa for spare.

3.17 Diagnostics

Requirements to the operating personnel

The personnel, who works with the safety signal module, must be instructed in the safety regulations and the operation of the module to correctly operate it. In particular the reaction to error messages and states requires special knowledge which the operator must have. In the following you will find information about disturbances and the resulting error messages.

Fail safe principle

The module bases on the fail-safe principle. This means that each error automatically leads to a safety state (safety switched off outputs, every input reports off-circuit state).

**CAUTION**

Do not switch a safety-related incorrect system to operating state again, as long as you do not know the cause of the error or an error has been corrected.

Detecting errors in the periphery

The electro-mechanical error detection is ensured by the input circuit. Electronic sensors must have an own error detection relating to a short-circuit on the output.

3.17.1 Error response**Safe state**

- The safety concept is based on the existence of a safe state at all process variables. For digital safety modules, this safe state is the value "0". This applies to sensors and actuators.
- In safe condition the safety signal module safely switches off the outputs. Thus a control of the attached actuators is safely interrupted.
- When the safe state is activated, bit 4 (FV_activated) is set in the PROFIsafe status 'PIL_STAT'. This status remains until the cause of the error was fixed and the error was acknowledged.
- The safe state of the digital safety module is also indicated in the PROFIsafe status 'PIL_STAT' represented by bit 1 (Device_Fault). This status remains until the cause of the error was fixed and the error was acknowledged.



Without prior acknowledgment, neither bit 4 (FV_activated) nor bit 1 (Device_Fault) in the PROFIsafe status 'PIL_STAT' are reset. Please take this into account in your safety program.

Response to error and start-up of the safety-related system

The safety function requires the use of substitute values (safe state) instead of process values for a safety-related signal module (passivation of safety-related signal module) in the following cases:

- during the start-up of the safety-related system
- when errors in safety-oriented communication between the safety-related CPU and safety module are detected by means of the safety protocol (communication error)
- when peripheral or channel errors are detected (e.g. wire break, discrepancy error)




If possible errors are logged to the diagnostic buffer of the safety-related CPU and reported to the safety program of the safety-related CPU. Safety modules cannot store errors non volatile. After PowerOFF - PowerON during start-up a further existing error is again detected. You can make error storage however in your standard program.

**CAUTION**

Channel errors do not trigger any diagnostic reactions or error handling for channels that have been set to "deactivated", even when this channel is affected indirectly by a channel group error ("Channel activated/ deactivated" parameter).

Remedying faults in a safety-related system

To remedy errors in your fail-safe system, proceed as described in EN 61508-1 Section 7.15.2.4 and EN 61508-2 Section 7.6.2.1 e. For remedy the following steps must be performed in a safety-related system:

1.  Diagnosis and repair of the fault
2.  Revalidation of the safety function
3.  Recording in the service report

Substitute value output for safety modules

- If channels are passivated with safety DI modules, the safety-related system provides substitute values for the safety program instead of the process values applied to the safety-related inputs:
 - For safety DI modules, this is always the substitute value (0).
- In the case of safety DO modules, if passivation occurs the safety-related system transfers substitute values (0) to the safety-related outputs instead of the output values provided by the safety program. The output channels are de-energized. This also applies when the safety-related CPU goes into STOP mode. You cannot program substitute values.

Reintegration of a safety module

The system changes from substitute to process values (reintegration of a safety module) either automatically or only after user acknowledgement in the safety program. After reintegration:

- for a safety DI module the process values pending at the safety-related inputs are provided for the safety program.
- for safety DO module the output values provided in the safety program are again transferred to the safety-related outputs.

➔ [‘Sample application’...page 129](#)

Reaction of the inputs to communication errors

The safety modules with inputs respond differently to communication errors compared to other errors.

- If a communication error is detected, the current process values remain set at the inputs of the safety module and the channels are not passivated.
- The current process values are sent to the safety-related CPU and are passivated in the safety-related CPU.

Reaction of the safety modules on module failure

On a serious internal error in the safety module, which leads to a fault of the safety module:

- the connection to the backplane bus is interrupted and the safety-related I/Os are passivated.
- Diagnostics are not transmitted from the safety module and the default diagnostic message "Module fault" is reported.
- the SF LED of the corresponding safety module is on.

3.17.2 Fault diagnostics

Diagnostics are used to determine whether error-free signal acquisition is taking place at the safety module. Diagnostics information is assigned either to a single channel or to the entire safety module. None of the diagnostic functions (displays and messages) are safety critical and therefore not designed to be safety-related functions. Consequently, they are not tested internally. The following diagnostic options are available for fail-safe modules:

- LED display on the module front
- Diagnostic functions of the safety modules (slave diagnostics in accordance with IEC 61784-1:2003).



Behaviour on changes of the safe parametrization

If the safety program was not again generated and transferred to the F PLC after changing the safety parametrization, the System SLIO safety module does not report any error. Then the F PLC passivates the module and the inputs and outputs remain at 0.

ERR LED status in case of error

On error the ERR LED shows an error by a corresponding blink behavior. → [‘ERR LED’...page 36](#)



Thus diagnostic messages that persist only for a short time, also can be handled, you have to adapt the error handling in the corresponding error OB of your user program for example the diagnostic messages are stored in a data block.

SDI 4xDC 24V

Error	Behavior of the diagnostic messages	Error recovery
Short circuit <ul style="list-style-type: none"> ■ The test pulses are no longer detected on the input. ■ e.g. cross circuit to DC 24V 	Error is permanently reported.	Correct the wiring, sensor or configuration errors. Acknowledge the error and perform a power cycle.
Cross circuit <ul style="list-style-type: none"> ■ At an input the wrong test pulses are detected. ■ e.g. wiring error. 	Error is permanently reported.	Correct the wiring error. Acknowledge the error and perform a power cycle.
Discrepancy error <ul style="list-style-type: none"> ■ The signal state of the dual-channel input does not match. 	The error is reported until a pending safety acknowledgement.	Correct the wiring, sensor or configuration errors. Acknowledge the error and perform a power cycle.
The address switch for F-address was changed. <ul style="list-style-type: none"> ■ The address switch and the configuration were changed. ■ e.g. module replacement 	Error is permanently reported.	Change the F-address → ‘Changing the F-address’...page 73 Perform a power cycle.
Other errors <ul style="list-style-type: none"> ■ Error in configuration 	Error is permanently reported.	Correct the configuration data such as a wrong F-address. Perform a power cycle.
Other errors <ul style="list-style-type: none"> ■ "Light" internal errors 	Error is permanently reported.	Perform a power cycle.
Other errors <ul style="list-style-type: none"> ■ "Heavy" internal errors 	An error can not be reported. The System SLIO safety module switches into safe mode and then becomes inactive.	Perform a power cycle.

SDO 4xDC 24V 0.5A

Error	Behavior of the diagnostic messages	Error recovery
Short circuit <ul style="list-style-type: none"> The test pulses are no longer detected at the output. e.g. cross circuit to DC 24V 	The error is reported until a pending safety acknowledgement.	Correct the wiring error. Acknowledge the error and perform a power cycle.
Wire break error <ul style="list-style-type: none"> With enabled output, no current > 30mA could be determined. 	The error is reported until a pending safety acknowledgement.	Correct the wiring or configuration error. Acknowledge the error and perform a power cycle.
Read back error of the output part <ul style="list-style-type: none"> The target state does not match its current state. Either external power supply DC 24V and output should be 0 or external short circuit to ground and output should be 1. 	Error at external power supply is permanently reported. A short circuit or defect on the module is signalled until a safety acknowledgement is pending.	Correct the wiring error. Acknowledge the error and perform a power cycle.
The address switch for F-address was changed. <ul style="list-style-type: none"> The address switch and the configuration were changed. e.g. module replacement 	Error is permanently reported.	Change the F-address → ‘Changing the F-address’...page 73 Perform a power cycle.
Other errors <ul style="list-style-type: none"> Error in configuration 	Error is permanently reported.	Correct the configuration data such as a wrong F-address. Perform a power cycle.
Other errors <ul style="list-style-type: none"> "Light" internal errors 	Error is permanently reported.	Perform a power cycle.
Other errors <ul style="list-style-type: none"> "Heavy" internal errors 	An error can not be reported. The System SLIO safety module switches into safe mode and then becomes inactive.	Perform a power cycle.

Configurable diagnostics functions

Via the parametrization you may activate a diagnostic interrupt for the module. With a diagnostics interrupt the module serves for diagnostics data for diagnostic interrupt_{incoming}. As soon as the reason for releasing a diagnostic interrupt is no longer present, the diagnostic interrupt_{going} automatically takes place. Within this time window (1. diagnostic interrupt_{incoming} until last diagnostic interrupt_{going}) the MF-LED of the module is on.

For the following events the triggering of a diagnostic message depends on the parametrization of the System SLIO safety module:

- for safety DI module short- and cross-circuit monitoring
- for safety DO module wire-break detection

**CAUTION**

Diagnostic functions should be activated or deactivated in accordance with the application.

→ [‘SDI 4xDC 24V - Parameter record set’...page 38](#)

→ [‘SDO 4xDC 24V 0.5A - Parameter record set’...page 52](#)

3.17.2.1 Diagnostic data

With PROFIBUS and PROFINET the access happens by record set DS 01h. Additionally the first 4 bytes may be accessed by record set DS 00h.

→ *'Diagnostic messages PROFINET'...page 114*

Name	Bytes	Function	Default
ERR_A	1	Diagnostic	00h
MODTYP	1	Module information	18h
ERR_B	1	reserved	00h
ERR_C	1	Module internal error	00h
CHTYP	1	Channel type	30h/31h
NUMBIT	1	Number diagnostics bits per channel	08h
NUMCH	1	Number channels of the module	04h
CHERR	1	Channel error	00h
CH0ERR	1	Channel-specific error channel 0	00h
CH1ERR	1	Channel-specific error channel 1	00h
CH2ERR	1	Channel-specific error channel 2	00h
CH3ERR	1	Channel-specific error channel 3	00h
ERR_D	1	Module-specific error	00h
ERR_E	1	reserved	00h
ERR_F	2	PROFISafe error code	00h
DIAG_US	4	µs ticker	00h

ERR_A - Diagnostic

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> ■ Bit 0: set at module failure ■ Bit 1: reserved ■ Bit 2: set at external error ■ Bit 3: set at channel error ■ Bit 4: set at external auxiliary supply missing ■ Bit 6 ... 5: reserved ■ Bit 7: set at error in parametrization

MODTYP - Module information

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> ■ Bit 3 ... 0: Module class <ul style="list-style-type: none"> - 1000b safety-related digital module ■ Bit 4: set at channel information present ■ Bit 7 ... 5: reserved

CHTYP - Channel type

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> ■ Bit 6 ... 0: Channel type <ul style="list-style-type: none"> - 30h: safety-related DI module - 31h: safety-related DO module ■ Bit 7: reserved

NUMBIT - Diagnostic bits

Byte	Bit 7 ... 0
0	Number of diagnostic bits per channel (here 08h)

NUMCH - Channels

Byte	Bit 7 ... 0
0	Number of channels of a module (here 04h)

CHERR - Channel error

Byte	Bit 7 ... 0
0	<ul style="list-style-type: none"> ■ Bit 0: set at error in channel 0 ■ Bit 1: set at error in channel 1 ■ Bit 2: set at error in channel 2 ■ Bit 3: set at error in channel 3 ■ Bit 7 ... 4: reserved

CH0ERR ... CH3ERR - Channel-specific

Byte	Bit 7 ... 0
0	Channel-specific error: Channel x: <ul style="list-style-type: none"> ■ Bit 0: set at short circuit to DC 24V ■ Bit 1: set at short circuit to ground ■ Bit 2: set at wire-break ■ Bit 3: set at cross-circuit ■ Bit 4: set at discrepancy error ■ Bit 7 ... 5: reserved

ERR_C - module internal

Byte	Bit 7 ... 0
0	Module-internal error: <ul style="list-style-type: none"> ■ Bit 3 ... 0: reserved ■ Bit 4: set at a communication error on the System SLIO safety module ■ Bit 7 ... 5: reserved

ERR_D - module specific

Byte	Bit 7 ... 0
0	Module-specific error <ul style="list-style-type: none"> ■ Bit 3 ... 0: reserved ■ Bit 4: set at error in I-parameter ■ Bit 5: set at error in F-parameter ■ Bit 6: set if the F-address set by the F-address switch, does not fit to the F-address stored in the EEPROM. ■ Bit 7: set if the F-address in the EEPROM was reset.



If the change process of the F-address is initiated by the configured record set, then bit 7 of ERR_D is set.

If the re-parametrization happens by means of the F-address switch setting 0...0, the reset function of the bus device during start-up can possibly prevent that this bit is reported.

ERR_F - Diag byte

Byte	Bit 7 ... 0
0, 1	PROFIsafe diagnostic code <ul style="list-style-type: none"> ■ The PROFIsafe diagnostic codes 0x0040 ... 0x004F are forwarded directly as PROFINET diagnostics. ➔ ‘Diagnostic messages PROFINET’...page 114

DIAG_US - μ s ticker

Byte	Bit 7 ... 0
0 ... 3	Value of the μ s ticker at the moment of the diagnostic

 μ s ticker

In the SLIO module there is a timer (μ s ticker). With PowerON the timer starts counting with 0. After $2^{32}-1\mu$ s the timer starts with 0 again.

ERR_B, E - reserved

Byte	Bit 7 ... 0
0	reserved

3.18 Packing and transport

Packing

Each device was packaged before in a way, that makes becoming damaged while on transport very unlikely.

Transport

The units are packed at the factory in accordance with the order.

- Avoid heavy shaking while on transport and severe bumping.
- Avoid electrostatic discharge on the electronic components of the modules.
- Take the module until immediately before installation out of the protective packaging.
- If you have to transport the module later, please consider the following:
 - use the original packaging or
 - use a appropriate packaging for ESD sensitive components.
- Make sure that the transportation conditions "Approvals, directives, standards" during the entire transport are met. ➔ [‘Approvals, directives, standards’...page 22](#)

Unpacking

After delivery of the still packaged item check if there are visible transportation damages. If yes report this to your deliverer. Request a written confirmation of your reclamation and make immediate contact with you local Yaskawa representation.

**DANGER****Risk by electrostatic discharge**

If you expose the module, particularly its electronic components to electrostatic discharge by touching with the hand, the module can be damaged or destroyed completely.

- Consider in handling the module the regulations and references to handling electrostatic sensitive components.
- If you recognize a transport damage or the delivery is not complete, you have to complain at the appropriate Yaskawa representative.

If there is no transport damage visible:

- Open the packaging of the device.
- Check the scope of delivery by means of the delivery note.

Storage and disposal

Scope of delivery

- System SLIO signal module
- Manual incl. conformity / manufacturer declaration

Disposal of packaging

The packaging consists of cardboard and / or plastic. Please observe the local disposal regulations, if you discard the packaging.

3.19 Storage and disposal

Storage conditions

Store the safety module in an appropriate packaging and to the storage conditions, mentioned in "Approvals, directives, standards". → [‘Approvals, directives, standards’...page 22](#)

Shipping

For shipping always use the original packaging.

Disposal

In principle the disposal takes place via Yaskawa. Send defective and/or to be disposed System SLIO safety modules to Yaskawa.

Demands on the personnel

The personnel which you instruct to demount devices must have the knowledge and training to carry out these jobs properly.

Choose the personnel in a way that it is secured that safety information are understood and observed.

3.20 Sample application

Precondition

This instruction describes the usage of the System SLIO safety modules with both PROFIBUS and PROFINET. Decide whether you want to build the sample application with PROFIBUS or PROFINET. The sample application requires the following hardware and software:

Module

CC/Coupler	Module	Designation / Order number
Central controller	Safety PLC	Siemens IM151-8F PN/DP CPU (6ES7151-8FB00-0AB0, product version 3, FW 2.7.1) Siemens DP master for CPU (6ES7138-4HA00-0AB0)
	Power supply safety	Siemens power module PM-E DC24V (6ES7138-4CA01-0AA0) Terminal module TM-P15S23-A0 (6ES7193-4CD20-0AA0)
	Safety I/O module	Siemens 4F-DI73F-DO DC24V/2A (6ES7138-4FC01-0AB0) Terminal module TM-E30S44-01 (6ES7193-4CG20-0AA0)
	Power supply standard I/O	Siemens power module PM-E DC24V (6ES7138-4CA01-.0AA0) Terminal module TM-P15S23-A1 (6ES7193-4CC30-0AA0)
	I/O module Input	Siemens 8 DI DC24V (6ES7131-4BF00-0AA0) Terminal module TM-E15S24-01 (6ES7193-4CB20-0AA0)
	I/O module Output	Siemens 8 DO DC24V/0.5A (6ES7132-4BF00-0AA0) Terminal module TM-E15S24-01 (6ES7193-4CB20-0AA0)
	Bus termination	Siemens 6ES7 193-4JA00-0AA0
	Coupler	SLIO bus coupler
SLIO AO		SM 032 AO 4x12Bit (032-1BD40)
SLIO AI		SM 031 AI 4x12Bit (031-1BD40)
SLIO Safety DI		SM 021 (021-1SD00)
SLIO Safety DO		SM 022 (022-1SD00)
SLIO DI		SM 021 (021-1BD10)
SLIO DO		SM 022 (022-1BD00)

Sample application

Switch/Relay/Software

- Switch/Relay
 - DC 24V Relay with two two-way switches (e.g. Finder Type 40.52 with base 95.95.3)
 - Switch (normally open contact)
- Software
 - Siemens SIMATIC Manager
 - SIMATIC Distributed Safety Programming
 - Safety CRC-Tool
 - System SLIO SLIO gsd/gsdml file


Setting the F-address

Please preset the F-address of the following modules via the F-address switch, before they are installed:

Module	F-address decimal	Switch positions
Siemens 4 F-DI/3 F-DO DC24V/2A	200	0000 1100 1000
System SLIO 021-1SD00	199	0000 1100 0111
System SLIO 022-1SD00	198	0000 1100 0110


Hardware structure

Build the sample application according to the following figure:

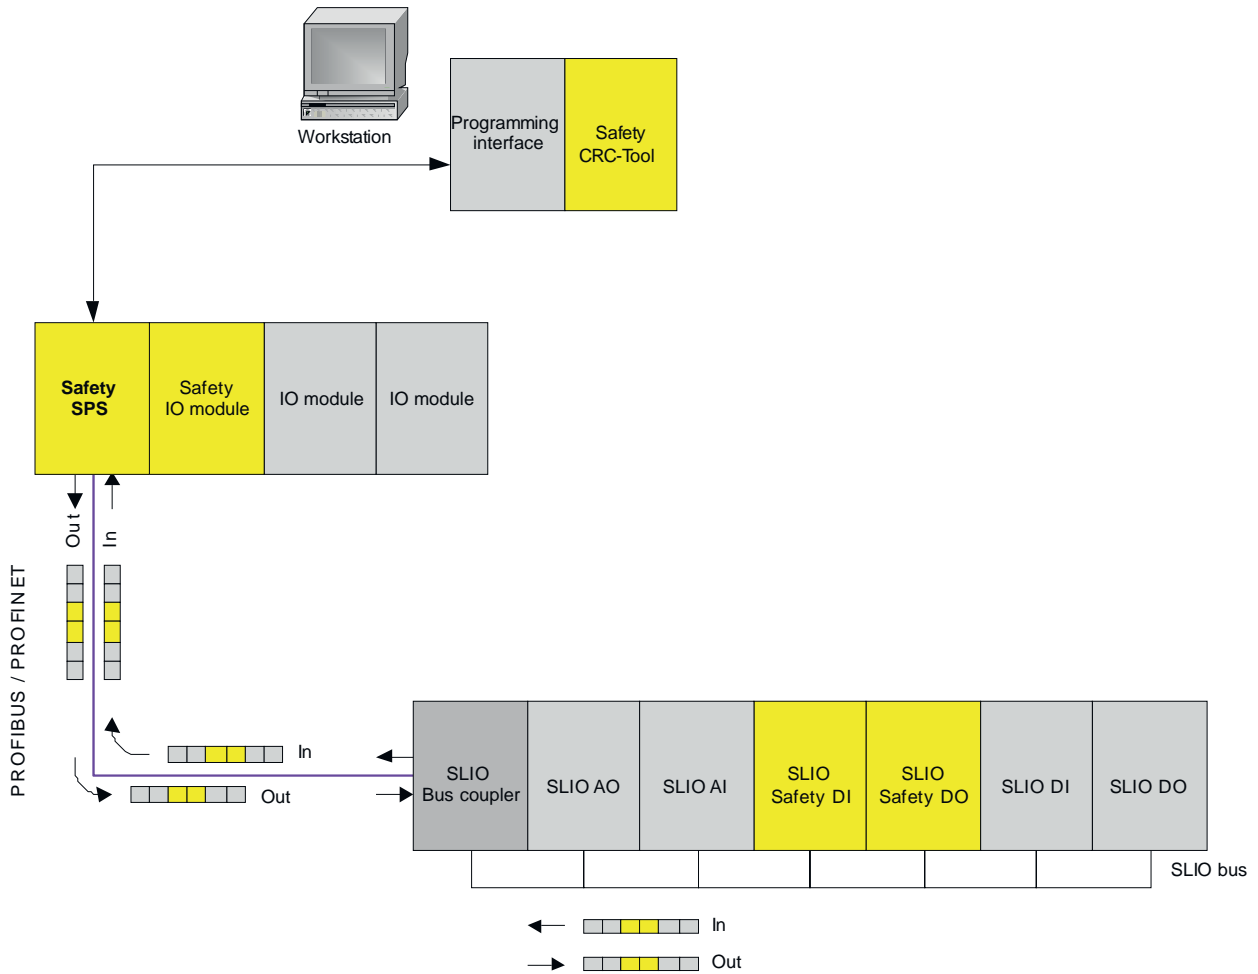

Wiring

Wire the sample application as shown in the following figure:

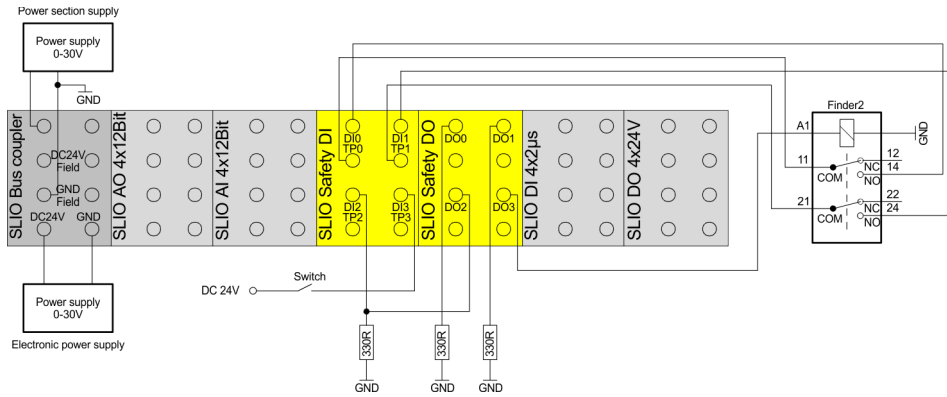

3.20.1 Configuration in the Siemens SIMATIC Manager

Procedure

1. ➔ Configure in your Siemens SIMATIC-Manager a new project with a SIMATIC 300 station.
2. ➔ Open the hardware configuration for this station and configure the hardware structure according to the hardware structure above.
3. ➔ Decide whether you will realize your example with PROFIBUS or PROFINET.

(0) IM151-8F PN/DP CPU

Slot	Module	Order number	Firmware	MPI address	I address	Q address	Diagn...	Comment
1								
2	IM151-8F PN/DP CPU	6ES7 151-8FB00-0AB0	V2.7					
X1	PN-IO				2047*			
X1 A	Part 1				2046*		2046*	
X1 A	Part 2				2045*		2045*	
X1 A	Part 3				2044*		2044*	
X2	DP	6ES7 138-4HA00-0AB0			2042*			
3								
4	PM-E DC24V	6ES7 138-4CA01-0AA0					2041*	
5	4 F-DI/3 F-DO DC24V/2A	6ES7 138-4FC01-0AB0			0..6	0..4		
6	PM-E DC24V	6ES7 138-4CA01-0AA0					2040*	
7	8DI DC24V	6ES7 131-4BF00-0AA0			7.0...7.7			
8	8DO DC24V/0.5A	6ES7 132-4BF00-0AA0				5.0...5.7		
9								
10								


(1) VIPA053-1PN00-000

Slot	Module	Order number	I address	Q address	Diagnostic address:	Comment
0	VIPA053-1PN00-000	053-1PN00			2039*	
IF	053-1PN00 Profinet Devi...				2038*	
IF F	IF Part 1				2037*	
IF F	IF Part 2				2036*	
1	032-1BD40 AO4x12Bit I	032-1BD40		256...263		
2	031-1BD40 AI4x12Bit I	031-1BD40	256...263			
3	021-1SD00 DI4xDC24V Saf~	021-1SD00	8...12	8...12		
4	022-1SD00 DO4xDC24V 0.5~	022-1SD00	13...17	13...17		
5	021-1BD10 DI4xDC24V 2µs~	021-1BD10	18			
6	022-1BD00 DO4xDC24V 0.5A	022-1BD00		6		
7						
8						

Sample application > Configuration in the Siemens SIMATIC Manager

Parameterization of the CPU

1. → When you add a CPU, a dialog box opens to adjust the properties of the new PROFINET subnet. Click "NEW" and create a new subnet. Similarly, a dialog box opens when you add the DP master for setting the PROFIBUS properties. Here act in the same way. After the installation of the GSD/GSDML files, the System SLIO components can be found in the hardware catalog at: PROFINET IO > Additional Field devices > I/O respectively PROFIBUS-DP > Additional Field devices > I/O
2. → To open the properties dialog double click at the CPU and select the tab 'Protection'.
3. → Activate below the option '1: Access protect for F CPU' the option 'Can be bypassed with password'.
4. → Enter the password for the F-CPU with at least 8 characters below the option '3: Read/write protection'. Repeat the password at 'Reenter password'.
5. → Activate the option 'CPU contains safety program'.

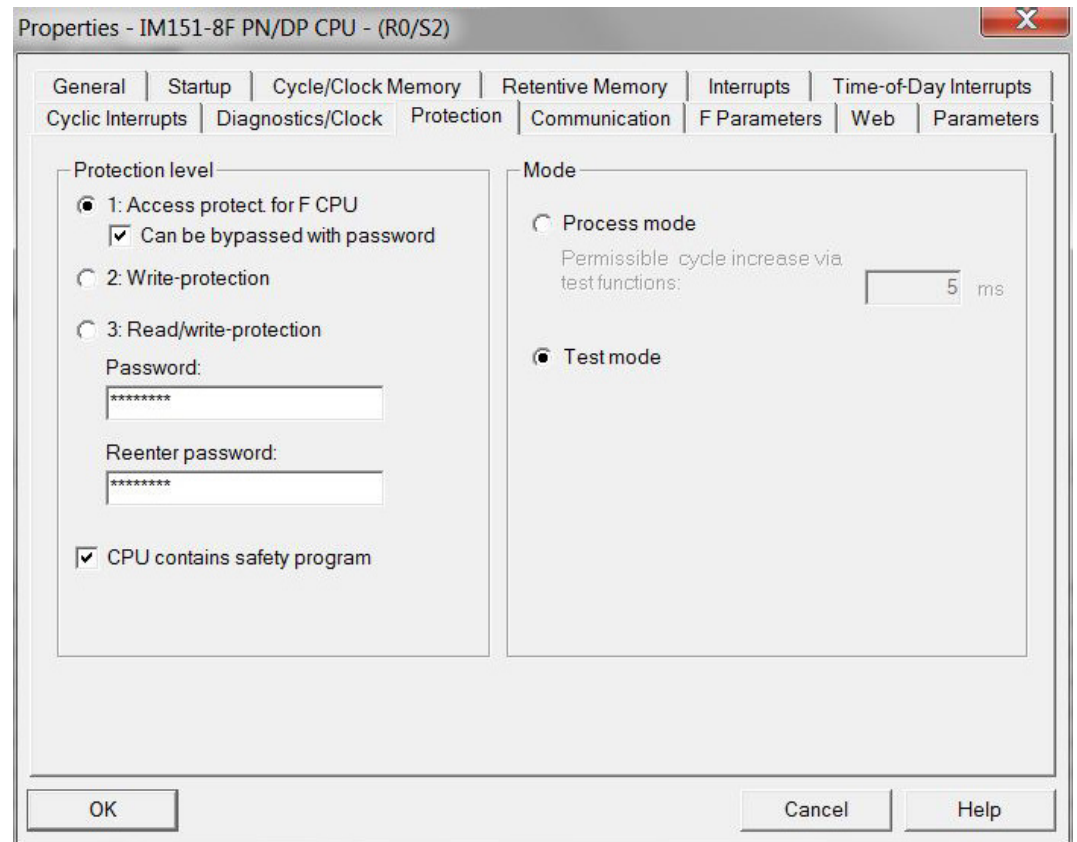

6. → The settings in the tabs "F Parameters" and "Cyclic Interrupts" are let on default values.
7. → Open the properties dialog of the Siemens module 4 F-DI/3 F-DO DC24V/2A and enter in the tab 'Parameter' for 'F_target_address' the value "200".
8. → Close the properties dialog with [OK].

Parameterization of System SLIO analog modules

→ Parameterize the System SLIO analog modules according to the following figures. This point shows how configurable "non-safety" System SLIO modules can be configured with System SLIO safety modules.

031-1BD40 AI4x12Bit I

General | Addresses | Parameters

Parameters	Value
Parameters	
General Parameters	
**** Ch0 ****	
Function	S7 Current 0..20mA (31h)
**** Ch1 ****	
Function	S7 Current 0..20mA (31h)
**** Ch2 ****	
Function	S7 Current 0..20mA (31h)
**** Ch3 ****	
Function	S7 Current 0..20mA (31h)

032-1BD40 AO4x12Bit I

General | Addresses | Parameters

Parameters	Value
Parameters	
General Parameters	
**** Ch0 ****	
Wire break recognition	<input checked="" type="checkbox"/>
Function	S7 Current 0..20mA (31h)
**** Ch1 ****	
Wire break recognition	<input checked="" type="checkbox"/>
Function	S7 Current 0..20mA (31h)
**** Ch2 ****	
Wire break recognition	<input checked="" type="checkbox"/>
Function	S7 Current 0..20mA (31h)
**** Ch3 ****	
Wire break recognition	<input checked="" type="checkbox"/>
Function	S7 Current 0..20mA (31h)

→ For 021-1SD00 and 022-1SD00 open the properties dialog with a double click, each and set the parameters at 'Parameter' according to the following figures:

021-1SD00 DI4xDC24V Safety

Parameter	Value
Parameters	
General Parameters	
Parameter change mode	normal
Behaviour after Channel Errors	Passivate the entire module
Diagnostic interrupt	<input checked="" type="checkbox"/>
**** Ch0 / Ch1 ****	
Ch0,1: Activation	activated
Ch0,1: Input signal-smoothing [ms]	3
Ch0,1: Test pulse activation	activated
Ch0,1: Input evaluation	2 channel
Ch0,1: Signal polarity	equivalent
Ch0,1: Discrepancy timeout [ms]	20
Ch0,1: Re-integration after discrepan...	Test 0-signal required
**** Ch2 / Ch3 ****	
Ch2,3: Activation	activated
Ch2,3: Input signal-smoothing [ms]	5
Ch2,3: Test pulse activation	activated
Ch2,3: Input evaluation	1 channel
Ch2,3: Signal Polarity	equivalent
Ch2,3: Discrepancy timeout [ms]	15
Ch2,3: Re-integration after discrepan...	Test 0-signal required

Buttons: OK, Cancel, Help


022-1SD00 DO4xDC24V 0.5A Safety

Parameter	Value
Parameters	
General Parameters	
Parameter change mode	normal
Diagnostic interrupt	<input checked="" type="checkbox"/>
**** Ch0 / Ch1 ****	
Ch0,1: Activation	activated
Ch0,1: Output control	2 channel
Ch0: Wire break recognition	activated
Ch1: Wire break recognition	activated
Ch0: Test pulse length [µs]	1000
Ch1: Test pulse length [µs]	1500
**** Ch2 / Ch3 ****	
Ch2,3: Activation	activated
Ch2,3: Output control	1 channel
Ch2: Wire break recognition	deactivated
Ch3: Wire break recognition	deactivated
Ch2: Test pulse length [µs]	750
Ch3: Test pulse length [µs]	2000


Buttons: OK, Cancel, Help

Validation with the Safety CRC-Tool

1. Start the validation tool from the module 021-1SD00 with 'context menu → Start Device Tool → ... Safety CRC-Tool'.

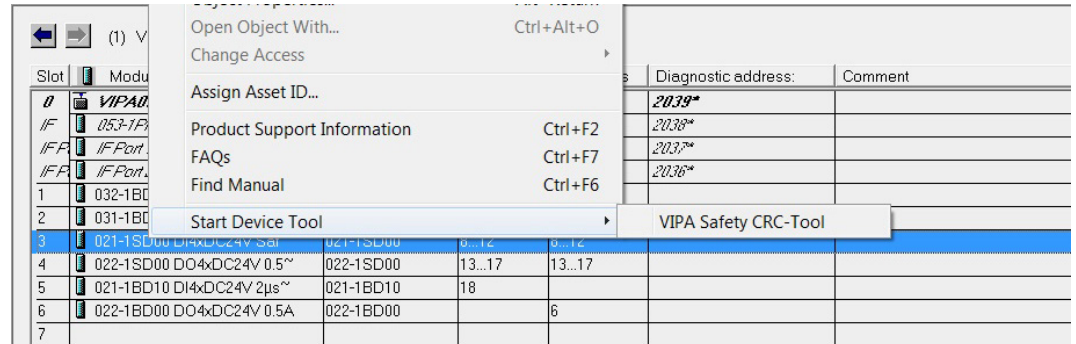

2. Validate each parameter in the CRC-Tool according to the description "Validation of the system" with the [Accepted] button and then calculate the checksum with [Calc-CRC]. The [Calc-CRC] button is only enabled when all the parameters were "accepted". → 'Validation of the system'...page 118
3. Copy the CRC to the clipboard and then close the "Safety CRC Tool".
4. Re-open the properties dialog and select the tab 'PROFIsafe'. Here open the dialog 'Change value' of the parameter 'F_iPar_CRC' and paste the copied CRC. Set the value of 'F_Dest_Add' to "199". Confirm with [OK].
5. Repeat these steps for the module 022-1SD00 and set the parameter 'F_Dest_Add' to the value "198".
6. 'Safe and translate' your project and close the hardware configuration.
 - ➔ The following automatically generated blocks should now be shown in the Siemens SIMATIC Manager:

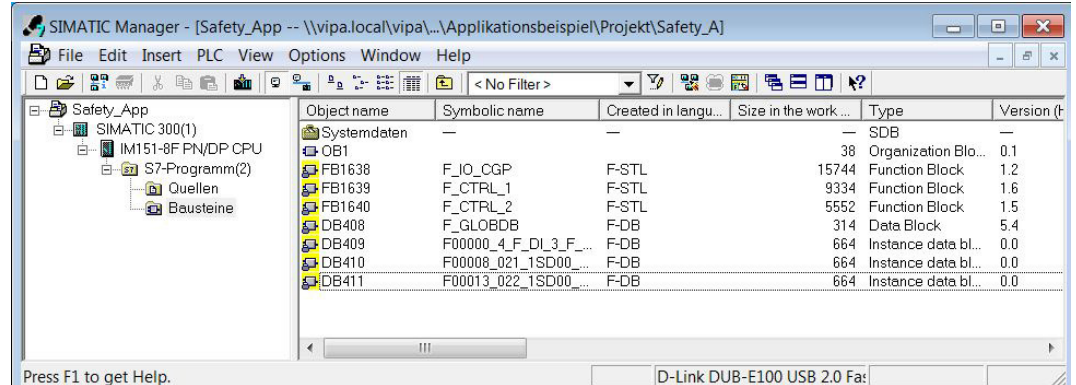

Sample application > Configuration in the Siemens SIMATIC Manager

Create F-FC - FC1

1. ➤ Configure in the Siemens SIMATIC Manager a F-FC. First configure a FC1.
 - ➔ The properties window of the FC1 opens. Select as configure language "F-FBD".
2. ➤ Create symbolic names and comments for the used safety inputs and outputs in the symbol editor.


	Statu	Symbol	Address	Data type	Comment
1		SDI 0	I 8.0	BOOL	2-channel; controlled by relay
2		SDI 1	I 8.1	BOOL	2-channel; controlled by relay
3		SDI 2	I 8.2	BOOL	controlled by SDO 2
4		SDI 3	I 8.3	BOOL	controlled via switch
5		SDO 0	Q 13.0	BOOL	2-channel, only LED
6		SDO 1	Q 13.1	BOOL	2-channel, only LED
7		SDO 2	Q 13.2	BOOL	controlles SDI 2
8		SDO 3	Q 13.3	BOOL	controlles relay
9					

Press F1 to get Help.


3. ➤ Double-click at the FC1 in the Siemens SIMATIC Manager. The dialog field to assign the password for the safety program opens. Enter (2x) for the safety program a maximum 8-character password and confirm with [OK].
 - ➔ The LAD/STL/FBD editor opens.
4. ➤ Program the FC1. Save this and close the editor.

FC1

Network: 1 Controlling SDO 2

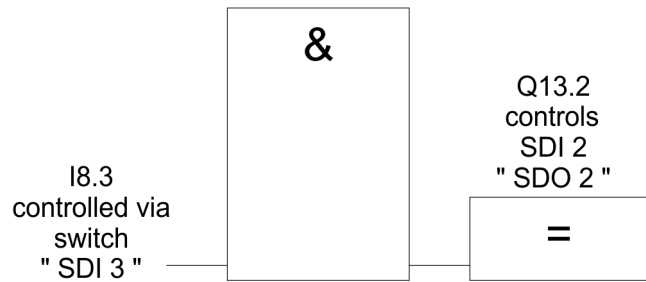


Network: 2 Controlling SDO 3 (Relay)

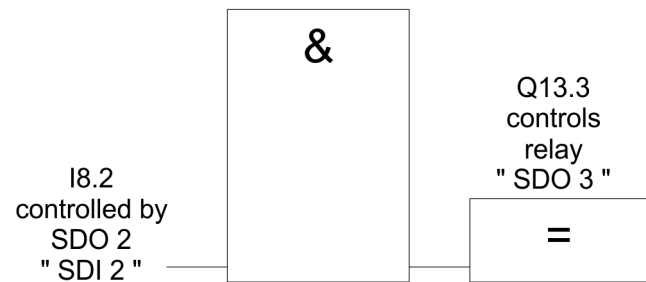


Network: 3 Controlling SDO 0

Since the channels SDO 0/1 are configured as 2-channel, both channels are switched to "1" with controlling Q13.0.

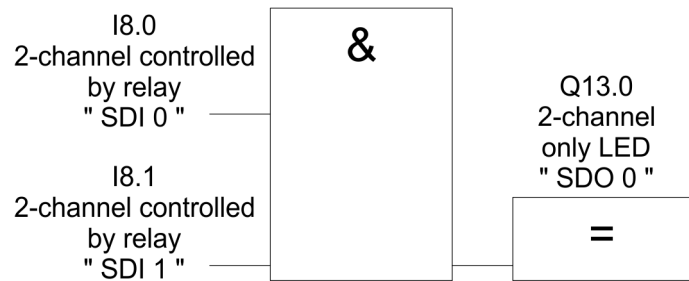

Edit safety program

1. ➔ Open in the Siemens SIMATIC Manager the dialog via 'Options → Edit safety program'.
 - ➔ The dialog "Safety program" opens.
2. ➔ Open the dialog 'Edit F-Runtime groups' via the button [F-Runtime groups].
3. ➔ Because a F-Runtime group does not exist, select with [New] the dialog 'Define New F-Runtime Group'.

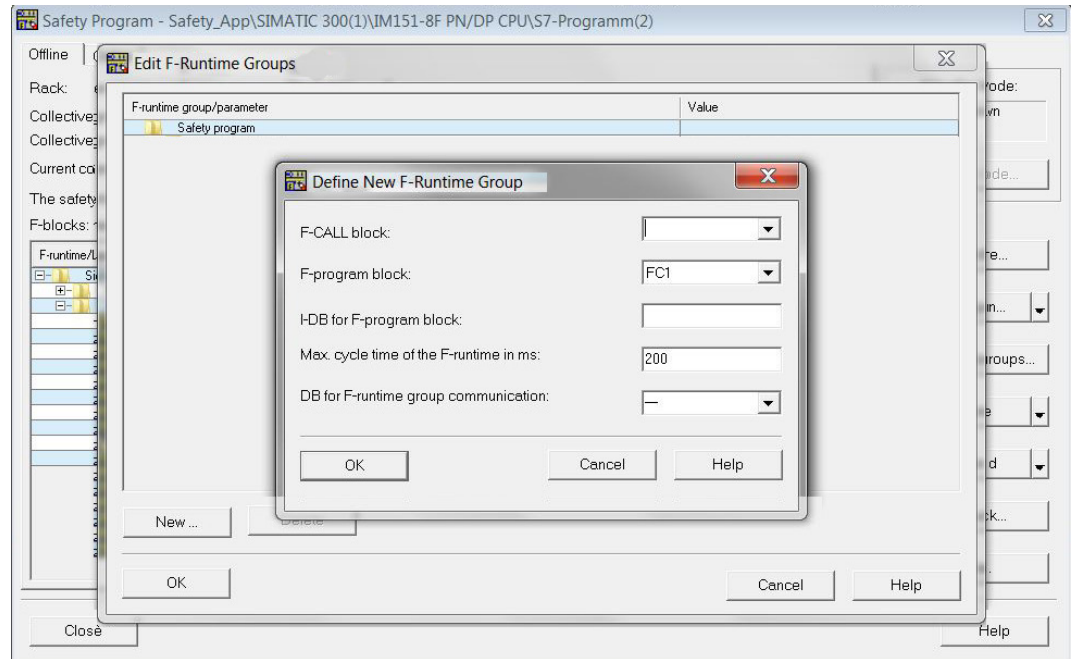

4. ➔ Enter "FC2" at "F_CALL block". This FC is automatically generated, as soon as you have left the dialog 'Edit F-Runtime groups' with [OK]. Due to the usage of a FC as F-program block, there is no instance DB (I-DB) required for the F-program block. The max. cycle time of the F-runtime group should be 200ms. A DB for the F-runtime group communication is not required.
5. ➔ Close the dialog with [OK].
6. ➔ Close the dialog 'Edit F-Runtime Groups' with [OK].
 - ➔ A message window opens. Here you are asked whether the missing blocks (in the example only FC2) should be automatically generated. Answer with [Yes].
7. ➔ Now you are returned in the dialog 'Safety program'. Click at [Generate]. During the generation a consistency check of the relevant F blocks is established. Then a run able safety program is generated.

Create cyclic interrupt OB35

1. ➔ Create in the Siemens SIMATIC Manager an OB35. Call the F-CALL (FC2 in the example) in the cyclic interrupt OB35 and save the OB35.

OB35: "Cyclic Interrupt"

Network: 1

CALL FC 2

2. ➔ Open the dialog window 'Safety program' and click at [Load].
 - ➔ A message window is shown about the possibility to load the default blocks together with the safety program. Answer with [Yes].
3. ➔ To activate the safety operation, perform a STOP/RUN transition.
 - ➔ Now you have created a run able safety program.

Changing the F-address

1. → Switch off DC 24V power supply of your System SLIO station and demount the System SLIO safety module 022-1SD00. Switch all the DIP switches of the F-address switch to 0 position.
2. → Mount the System SLIO safety module and switch on the DC 24V power supply. Please wait for about 5s and switch the DC 24V power supply for the System SLIO module off again. Hereby the internal F-address memory of the System SLIO safety module is cleared.
3. → Demount the System SLIO safety module again and switch the F-address switch to the address "201" (switch setting 0000 1100 1001).
4. → Mount the System SLIO safety module and switch on the DC 24V power supply.
5. → Open the hardware configuration for the application sample.
6. → Open the properties dialog of the System SLIO Safety module 022-1SD00 and select the tab '*PROFIsafe*'. Change the parameter '*F_Dest_Add*' to the value "201".
7. → Close the properties dialog with [OK]. '*Save and translate*' your hardware project and transfer it into the CPU. Then you can close the hardware configurator.
8. → Open in the Siemens SIMATIC Manager the dialog '*Edit safety program*'. '*Generate*' your safety program and '*upload*' it into your CPU.
 - ➔ The program is now executable with the new F-address.

Modification (changing parameters)

1. → Open the hardware configuration of the application sample and select the ...053-1PN00-000 station.
2. → Open the properties dialog of the module 021-1SD00 via double click and select the tab '*Parameter*'.
3. → Change the parameter '*Channel 2,3: Input signal-smoothing [ms]*' from "5" to "6" and confirm your changes with [OK].
 - ➔ The properties window is closed.
4. → Start the validation tool from the module 021-1SD00 with '*context menu* → *Start Device Tool* → ... *Safety CRC-Tool*'. Accept in the "Safety CRC-Tool" every parameter, calculate the CRC and copy the CRC to the clipboard. Then close the "Safety CRC-Tool".
5. → Re-open the properties dialog and select the '*PROFIsafe*' tab. You will now be prompted to enter your password. Enter the password and confirm with [OK].
6. → In the '*PROFIsafe*' tab open the dialog '*Change value*' of the parameter '*F_iPar_CRC*' and paste the copied CRC.
7. → Close the properties dialog with [OK]. '*Save and translate*' your hardware project and transfer it into the CPU. Then you can close the hardware configurator.
8. → Open in the Siemens SIMATIC Manager the dialog '*Edit safety program*'. '*Generate*' your safety program and '*upload*' it into your CPU.
 - ➔ The program is now executable with the new F-address.

Sample application > Configuration in the Siemens SIMATIC Manager

Error acknowledgement

Acknowledgeable errors are implicitly acknowledged with a restart of the PROFIBUS or PROFINET communication e.g. by a STOP→START transition of the super-ordinated safety controller. Also, in the Siemens F-CPU it is possible to trigger an explicit error acknowledgement by generating an edge 0-1 at bit "ACK_REI" (0.2) in the automatically generated instance data block (F-DB) of the affected System SLIO safety module. In the example for the System SLIO Safety input module at I/O address 8 it is DB 410 with the symbolic name 'F00008_021_1SD00_DI4xDC2'. With this data block error acknowledgement is possible with an edge 0-1 at DB 410.DBX0.2.



Please consider in terms of the error acknowledgment the according description of the safety controller.

4 Appendix

Content

A	Checklist planning.	145
B	Checklist installation.	146
C	Checklist commissioning, parametrization and validation.	147
D	Checklist operation.	148
E	Checklist modification and retrofitting.	149
F	Checklist decommissioning.	150

A Checklist planning

Checklist

Run. No.	Requirement	fulfilled		Notes
		yes	no	
1	Planning			
1.1	Was a risk evaluation established and were the required SIL and performance level according to DIN EN ISO 13849-1 or IEC 62061 determined?			
1.2	Are exclusively power supplies used according to PELV specification?			
1.3	Does the wiring take place after valid standards and guidelines?			
1.4	Is the power supply for the local I/O modules and field bus components correctly dimensioned?			
1.5	Do all the safety-related system components fulfill the requirements of the determined SIL (IEC 61508), performance level (DIN EN ISO 13849-1) and safety category (DIN EN 954-1)?			
1.6	Does the wiring of the safety components correspond to the requirements of the safety classification specified before?			
1.7	Do the components fulfill the environmental conditions of the application?			
1.8	Does the system fulfill the necessary degree of protection?			
1.9	Is degree of pollution 2 kept?			
1.10	Was the maximally permissible response time of the safety functions determined by a hazard analysis?			
1.11	Is the maximally permissible response time reached? Was the proof established by means of a calculation?			
1.12	Is the system protected against mechanical overloading?			
1.13	Is the system protected against aggressive media?			
1.14	Are the specified electrical values of the output terminals kept?			
1.15	Are all the electromechanical sensors supplied with clock pulses for the recognition of short-circuits?			
1.16	Was a list created, which contains all the parameters of the devices and its settings?			

Date:.....Name:Sign:

B Checklist installation

Checklist

Run. No.	Requirement	fulfilled		Notes
		yes	no	
2	Installation			
2.1	Is it guaranteed that the safety switch devices are not short-circuited due to a wiring fault?			
2.2	Is it guaranteed that the safety switch devices are not short-circuited due to a wiring fault?			
3.3	Was the wiring checked by means of the installation plan?			
2.4	Are all the plugs labelled according to their allocation?			
2.5	Are the connecting terminals with screws applied with the specified breakaway torque?			
2.6	Is guaranteed that the isolation of the lines does not lead to a faulty contact?			
2.7	Was the reliability of all the clamp connections controlled by a mechanical tensile load?			
2.8	Was a visual inspection of the installed components accomplished?			
2.9	Were necessary installation distances kept to other components?			
2.10	Do the components fulfill the environmental conditions of the application?			
2.11	Does the system fulfill the necessary degree of protection?			
2.12	Is degree of pollution 2 kept?			
2.13	Is the system protected against aggressive media?			

Date:.....Name:Sign:

C Checklist commissioning, parametrization and validation

Checklist

Run. No.	Requirement	fulfilled		Notes
		yes	no	
3	Commissioning			
3.1	Is guaranteed that all safe communication participants of a system have a clear safe device address (F-address)? This is valid also for participants, which belong to different safety controllers, if the controllers are connected by gateways (e.g. Ethernet).			
3.2	Is the station number of the safety PLC correctly adjusted?			
3.3	Were the device parameters of the System SLIO safety modules validated?			
3.4	Was the safety cycle time determined and adjusted in the safety PLC?			
3.5	Was the maximum response time with the adjusted cycle time proofed by calculation?			
3.6	Were the project data copied on a memory card?			
3.7	Was a complete functional test accomplished and documented?			
3.8	Was the service personnel instructed into the handling of the control system?			

Date:.....Name:Sign:

D Checklist operation

Checklist

Run. No.	Requirement	fulfilled		Notes
		yes	no	
4	Operation			
4.1	Is it guaranteed that no changes are made to the system configuration during operation of the safety PLC?			
4.2	Is it guaranteed that before expanding the system, removing individual system components and making changes to the wiring, the control system is set to a safe state dependent on the application by competent personnel?			
4.3	Are the ambient conditions specified in the technical data observed? ↪ 'SDI 4xDC 24V - Technical data'...page 45 ↪ 'SDO 4xDC 24V 0.5A - Technical data'...page 59			
4.4	Is it guaranteed that commissioning only takes place after acclimatisation of the System SLIO safety modules?			

Date: Name: Signature:

E Checklist modification and retrofitting

Checklist

Run. No.	Requirement	fulfilled		Notes
		yes	no	
5	Modification and retrofitting			
5.1	Is the modification/retrofitting compatible? Are the requirements of the checklists of planning, installation, commissioning and validation further fulfilled?			
5.2	Are the calculated reaction times further kept after modification/retrofitting? Proof necessary!			
5.3	Were the project data copied on a memory card?			
5.4	Was a complete functional test accomplished and documented?			
Date:.....Name:Sign:				

F Checklist decommissioning

Checklist

Run. No.	Requirement	fulfilled		Notes
		yes	no	
6	Decommissioning			
6.1	Is it guaranteed that the decommissioning is done by authorized and qualified personnel?			
6.2	Has the power supply been switched off at the device to be decommissioned?			
6.3	Has the wiring been removed from the device to be decommissioned?			
	Has the disassembly been carried out according to the disassembly description? ↪ 'Demounting and module exchange'...page 82			
6.4	Is it guaranteed that the defective System SLIO safety module decommissioned is sent to Yaskawa for disposal in its original packaging?			

Date: Name: Signature: